

[manuals.plus](#) /› [BRONDI](#) /› [Brondi Gala Twin Dect Cordless Phone Instruction Manual](#)

BRONDI Gala Twin Dect

Brondi Gala Twin Dect Cordless Phone Instruction Manual

INTRODUCTION

This manual provides essential information for the proper setup, operation, and maintenance of your Brondi Gala Twin Dect cordless phone system. Please read these instructions carefully before using your new phone to ensure optimal performance and longevity.

PACKAGE CONTENTS

Upon unpacking, please verify that all the following items are present:

- 2 x Brondi Gala Twin Dect Handsets
- 2 x Handset Charging Bases
- 2 x Power Adapters for Charging Bases
- 4 x AAA Rechargeable Batteries (2 per handset)
- 1 x Telephone Line Cord
- 1 x User Manual (this document)

SETUP

1. Battery Installation

For each handset:

1. Open the battery compartment cover on the back of the handset.
2. Insert the two AAA rechargeable batteries, observing the correct polarity (+ and -).
3. Close the battery compartment cover securely.
4. Place each handset on its respective charging base. Allow at least 15 hours for the initial charge before first use.

2. Base Station Connection

Connect the main base station (the one connected to the telephone line):

1. Plug one end of the telephone line cord into the TEL socket on the main base station.
2. Plug the other end of the telephone line cord into your telephone wall jack.

3. Connect the power adapter to the DC IN socket on the main base station.
4. Plug the power adapter into a standard electrical outlet.

For the second charging base, simply connect its power adapter to an electrical outlet. It does not require a telephone line connection.

3. Handset Registration

Your Brondi Gala Twin Dect handsets are typically pre-registered to the base station at the factory. If a handset displays 'Unregistered' or similar, or if you need to re-register a handset, follow these general steps:

1. On the base station, press and hold the registration button (usually marked with a signal icon) for approximately 3-5 seconds until the indicator light flashes.
2. On the handset, navigate to the 'Registration' menu option (refer to the handset display for specific menu navigation).
3. Select 'Register Handset' and enter the PIN code (default is usually 0000 or 1234).
4. The handset will search for the base station and register. A confirmation message will appear on the display.

OPERATING INSTRUCTIONS

1. Basic Functions

- **Making a Call:** Press the green call button, then dial the number. Alternatively, dial the number first, then press the green call button.
- **Receiving a Call:** When the phone rings, press the green call button.
- **Ending a Call:** Press the red end call button or place the handset back on the charging base.

2. Phonebook

The phonebook allows storage of up to 20 alphanumeric entries. Additionally, there are 3 direct memory keys for quick dialing.

- **Adding a Contact:** Navigate to the 'Phonebook' menu, select 'Add New Entry', enter the name and number, then save.
- **Using Direct Memory Keys:** Press and hold one of the dedicated direct memory keys (e.g., M1, M2, M3) to dial a pre-assigned number. To program these keys, refer to the handset's menu for 'Direct Memory Settings'.

3. ECO DECT Function

The Brondi Gala Twin Dect features a pre-programmed ECO DECT function. This technology automatically adjusts the transmitting power of the handset and base station based on their distance, reducing energy consumption and radiation when the handset is close to the base or when in standby mode.

4. Call Management

- **Call Transfer:** During an active call, you can transfer it to another registered handset. Press the 'Intercom' or 'Transfer' button, select the desired handset, and then hang up.
- **Conference Call:** This function allows an external call to be joined by another internal handset. During an external call, initiate an intercom call to another handset. Once connected, select the 'Conference' option from the menu.

5. Volume and Ringtones

- **Ringtone Selection:** You can choose from 5 standard ringtones. Access the 'Settings' menu, then 'Ringtone Settings' to select your preferred tone.

- **Volume Adjustment:** The ringtone volume and listening volume during a call are adjustable. Use the navigation keys during a call to adjust listening volume. Ringtone volume can be set in the 'Settings' menu.

MAINTENANCE

To ensure the longevity and proper functioning of your Brondi Gala Twin Dect phone:

- **Cleaning:** Wipe the handsets and bases with a soft, damp cloth. Do not use harsh chemicals or abrasive cleaners.
- **Battery Care:** Use only the specified rechargeable AAA batteries. If the phone will not be used for an extended period, remove the batteries to prevent leakage.
- **Environment:** Keep the phone away from direct sunlight, heat sources, and moisture.

TROUBLESHOOTING

Problem	Possible Solution
No dial tone	Ensure the telephone line cord is securely connected to both the base station and the wall jack. Check if the power adapter is plugged in correctly.
Cannot make/receive calls	Check if the handset is registered to the base station. Ensure batteries are charged. Verify the telephone line is active.
Handset display is blank or shows 'Unregistered'	Place the handset on the charging base to charge the batteries. If still blank, try re-registering the handset (see Setup section).
Poor sound quality or static	Move closer to the base station. Ensure there are no large metal objects or other electronic devices interfering with the signal.
Batteries do not charge	Ensure the handset is correctly placed on the charging base. Check that the power adapter is securely connected to the base and the electrical outlet. Verify batteries are inserted with correct polarity.

SPECIFICATIONS



This image displays two black Brondi Gala Twin Dect cordless phone handsets, each resting on its respective charging base. The handsets feature a digital display, a standard numeric keypad, and function buttons. The brand name 'BRONDI' is visible on both the handsets and the bases.

Feature	Detail
Brand	BRONDI
Model Number	10273810
Phone Type	Cordless (DECT)
Color	Black
Display	Large, easy-to-read digital display
Keypad	Large keypad (not backlit)
Phonebook Memory	20 alphanumeric entries
Direct Memory Keys	3 dedicated keys
Ringtones	5 standard, adjustable volume
Listening Volume	Adjustable for maximum clarity
Special Features	ECO DECT function, Alarm function, Call transfer, Conference call
Batteries	2 x AAA rechargeable batteries per handset (included)
Material	Acrylonitrile Butadiene Styrene (ABS)

Feature	Detail
Dimensions (L x W x H)	29 x 16 x 47.5 cm (approximate, for entire package/system)

WARRANTY AND SUPPORT

Warranty information for your Brondi Gala Twin Dect phone is typically provided with your purchase documentation or can be found on the official Brondi website. For technical support, service, or further inquiries, please refer to the contact information provided by your retailer or visit the manufacturer's official support channels.