

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

> [SOMMER](#) /

> [Sommer Slider+ S10305 TX40-868-4 Garage Door Remote Control User Manual](#)

SOMMER S10305

Sommer Slider+ S10305 TX40-868-4 Garage Door Remote Control User Manual

Model: S10305 | Brand: SOMMER

[Introduction](#) [Features](#) [Setup](#) [Operation](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#) [Warranty & Support](#)

1. INTRODUCTION

This manual provides comprehensive instructions for the Sommer Slider+ S10305 TX40-868-4 garage door remote control. Designed for use with Sommer Base+ and Pro+ drive systems, this remote offers secure and convenient operation of your garage door. Please read these instructions carefully before use to ensure proper function and safety.



Image 1: Sommer Slider+ S10305 remote control with its protective slider closed.

2. KEY FEATURES

- **Retrocompatible:** Works with the Somloq Rollingcode radio system, allowing control of existing drives and wireless receivers.
- **Modern Design:** High-quality construction with a stainless steel finish.
- **Sliding Function:** Features a protective slider to prevent unintentional button presses.
- **Compact Size:** Easily attaches to a keychain for portability.
- **SOMloq2 Radio System:** Offers maximum security against unauthorized access through AES 128-bit encryption with a rolling code.
- **Automatic Repeat Function:** Enables comfortable opening as you approach the object.
- **Enhanced Range & Reliability:** Improved performance due to the Hop function, where the signal is actively transmitted by the SOMloq2 receiver.
- **Multiple Commands:** Supports 4 distinct radio commands.

3. SETUP AND PROGRAMMING

To program your Sommer Slider+ S10305 remote control with your garage door opener (e.g., Sommer Base+ or Pro+ drive), follow these steps:

1. **Locate the Control Unit:** Find the control unit of your garage door motor. Open its cover to access the programming button.
2. **Identify Programming Button:** Identify the programming button, often labeled 'Radio' or similar. It is usually located near a small hole. Use a small, non-conductive object like a toothpick to press this button.
3. **Activate Programming Mode:** A small red indicator light on the control unit will illuminate, indicating it is in programming mode.
4. **Position Remote:** Take your new Sommer Slider+ remote control. Position it close to the red indicator light on the control unit.
5. **Press and Hold Remote Button:** Press and hold the button on the remote control that you wish to program for opening/closing the garage door.
6. **Confirm Programming:** Continue holding the button until the red indicator light on the control unit stops flashing rapidly and then extinguishes. This indicates successful programming.
7. **Test Remote:** Release the button on the remote control. Test the remote by pressing the programmed button. The garage door should now operate.

Note: Ensure your garage door opener is compatible with the SOMloq2 radio system and the 868.8 MHz / 868.95 MHz frequencies. Some regional variations of Sommer products exist; verify compatibility if issues arise.





Image 2: Sommer Slider+ S10305 remote control with the slider open, revealing the four control buttons.

4. OPERATION

The Sommer Slider+ S10305 remote control features a sliding cover to protect the buttons from accidental presses. To operate your garage door:

1. **Slide Down Cover:** Gently slide the protective cover down to reveal the control buttons.
2. **Press Button:** Press the desired, pre-programmed button to activate your garage door opener. Each button can be programmed for a different function or to control a different door.
3. **Slide Up Cover:** After use, slide the cover back up to protect the buttons and prevent unintended activation.

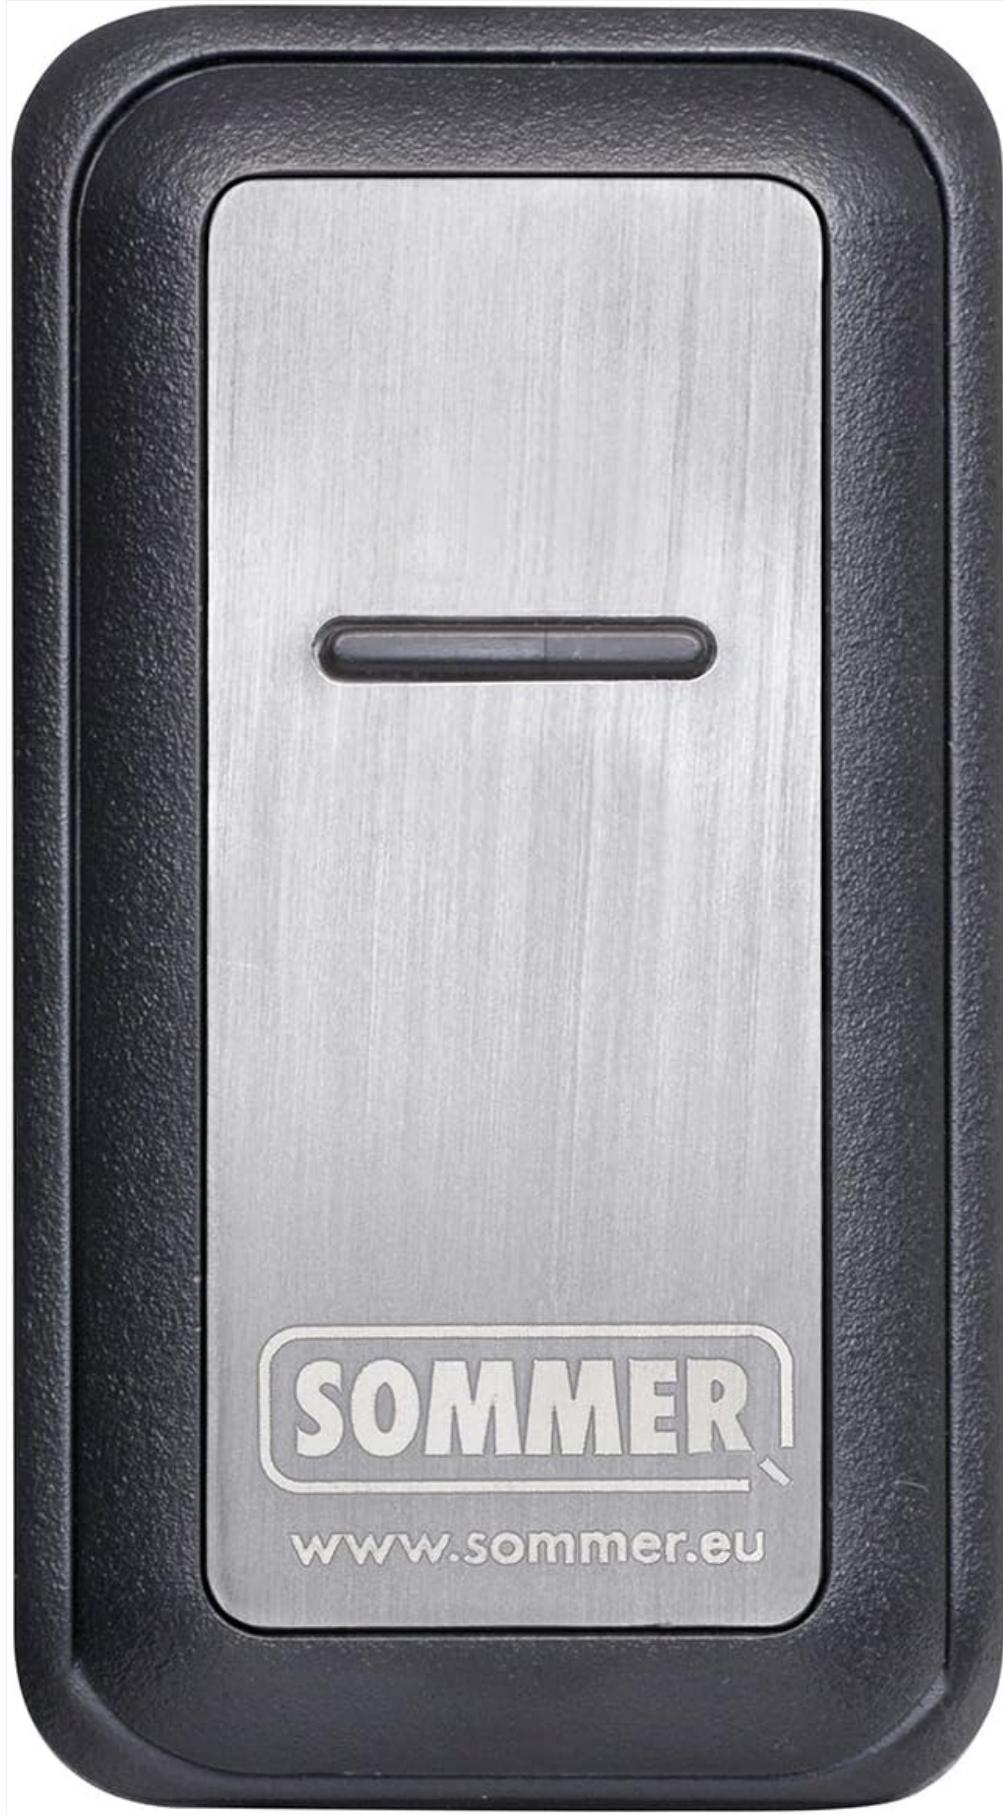


Image 3: Front view of the Sommer Slider+ S10305 remote control.

5. MAINTENANCE AND BATTERY REPLACEMENT

The remote control is powered by one CR123A battery. When the remote's range decreases or it stops responding, the battery may need replacement.

Battery Replacement:

1. **Open Casing:** Carefully open the remote control casing. This typically involves gently prying apart the two halves or removing a small screw if present.
2. **Remove Old Battery:** Remove the old CR123A battery from its compartment.
3. **Insert New Battery:** Insert a new CR123A battery, ensuring correct polarity (+ and -).
4. **Close Casing:** Close the remote control casing securely until it clicks into place.

Dispose of old batteries responsibly according to local regulations.

Cleaning:

Clean the remote control with a soft, dry cloth. Do not use abrasive cleaners or solvents.

6. TROUBLESHOOTING

If your Sommer Slider+ S10305 remote control is not functioning as expected, consider the following:

- **Remote not responding:**
 - Check the battery. Replace it with a new CR123A battery if necessary.
 - Ensure the remote is within the operating range (50-140 meters) of the receiver.
 - Verify that the remote is correctly programmed to your garage door opener. Repeat the programming steps if unsure.
- **Reduced range:**
 - Replace the battery.
 - Check for sources of interference (e.g., other radio devices, large metal objects, thick walls) near the remote or the receiver.
 - Ensure the antenna on your garage door opener is unobstructed.
- **Remote programmed but not working (especially in certain regions):**
 - Some Sommer products have regional codes (e.g., S10305-0001 vs. S10305-00075). Ensure the specific model you have is compatible with your region's garage door opener. Incompatible regional codes can prevent proper function.
 - Consult your garage door opener's manual or the manufacturer for regional compatibility information.

7. TECHNICAL SPECIFICATIONS

Attribute	Detail
Brand	SOMMER
Model Name	S10305
Connectivity Technology	Radio Frequency
Special Feature	Wireless
Compatible Devices	Sommer Base+, Sommer Pro+
Number of Supported Devices	4
Number of Buttons	4

Controller Type	Button Control
Max Range	140 Meters
Radio System	SOMIooq2
Frequency	FM 868.8 MHz, FM 868.95 MHz
Dimensions	55 x 30 x 14 mm
Battery	1 x CR123A (required)

8. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation provided with your original purchase or contact Sommer customer service directly. Keep your proof of purchase for warranty claims.

© 2023 SOMMER. All rights reserved.