

[Manuals.plus](#) /

› [Deco Breeze](#) /

› DecoBREEZE Kipling 10-inch Oscillating Table Fan User Manual

Deco Breeze DBF6126

DecoBREEZE Kipling 10-inch Oscillating Table Fan User Manual

Model: DBF6126

INTRODUCTION

Thank you for purchasing the DecoBREEZE Kipling 10-inch Oscillating Table Fan. This fan is designed to provide efficient air circulation with a stylish, vintage aesthetic. Please read this manual thoroughly before use to ensure proper operation and maintenance.



The DecoBREEZE Kipling 10-inch Oscillating Table Fan, showcasing its elegant design and compact size.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

1. Read all instructions before using this fan.
2. Use this fan only as described in this manual. Other uses not recommended by the manufacturer may cause fire, electric shock, or injury to persons.
3. Do not operate the fan with a damaged cord or plug. Discard fan or return to an authorized service facility for examination and/or repair.
4. Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Do not route cord under furniture or appliances. Arrange cord away from traffic area and where it will not be tripped over.
5. To disconnect the fan, turn controls to OFF, then remove plug from outlet.
6. Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or

fire, or damage the fan.

7. Do not block air intakes or exhaust in any manner. Do not use on soft surfaces, like a bed, where openings may become blocked.
8. This fan is intended for indoor use only. Do not use outdoors.
9. This fan is not intended for use in wet or damp locations.
10. Always place the fan on a stable, flat surface to prevent tipping.

SETUP

The DecoBREEZE Kipling Table Fan requires minimal setup. Carefully remove the fan from its packaging. Ensure all packing materials are removed before operation. Place the fan on a stable, flat surface. Plug the power cord into a standard 120V AC electrical outlet.

OPERATING INSTRUCTIONS

Your DecoBREEZE Kipling fan features three-speed settings, oscillation, and adjustable tilt for optimal air circulation.

Power and Speed Control

The fan is equipped with a button control for power and speed selection. Locate the control knob on the rear of the fan motor housing.

- **OFF:** Turn the knob to the '0' position to turn the fan off.
- **Speed 1 (Low):** Turn the knob to '1' for a gentle breeze (900 RPM).
- **Speed 2 (Medium):** Turn the knob to '2' for moderate airflow (1100 RPM).
- **Speed 3 (High):** Turn the knob to '3' for maximum air circulation (1280 RPM).

Three-Speed **Floor Fan**



Low Speed



Medium Speed



High Speed

The fan offers three distinct speed settings: Low (900 RPM), Medium (1100 RPM), and High (1280 RPM).

Oscillation Function

To activate the oscillation feature, locate the small knob on top of the motor housing. Push this knob down to enable the fan head to sweep from side to side. Pull the knob up to stop oscillation and direct airflow in a fixed direction.

Adjustable Tilt

The fan head can be tilted up or down to direct airflow precisely where needed. Gently hold the fan head and adjust it to your desired angle. The fan will remain in the set position.

Your browser does not support the video tag.

This video demonstrates the operation of the DecoBREEZE 3-Speed Portable Antique Table Fan, including speed adjustments and oscillation.

MAINTENANCE

Regular cleaning and maintenance will ensure your fan operates efficiently and extends its lifespan.

Cleaning

- Always unplug the fan from the power outlet before cleaning.
- Use a soft, damp cloth to wipe the exterior surfaces of the fan. Do not use abrasive cleaners or solvents.
- To clean between the grille, use a vacuum cleaner with a brush attachment or compressed air to remove dust and debris.
- Ensure the fan is completely dry before plugging it back in and operating.

Storage

When not in use for extended periods, store the fan in a cool, dry place. It is recommended to store it in its original packaging to protect it from dust and damage.

TROUBLESHOOTING

If your fan is not operating as expected, please refer to the following common issues and solutions:

Problem	Possible Cause	Solution
Fan does not turn on	No power to the unit	Ensure the power cord is securely plugged into a working electrical outlet. Check the circuit breaker.
Weak airflow	Fan blades or grille are dirty	Unplug the fan and clean the blades and grille as described in the Maintenance section.
Fan is noisy	Loose parts or debris	Unplug the fan and inspect for any loose parts or foreign objects. Ensure the fan is on a stable surface.
Oscillation not working	Oscillation knob is not engaged	Push the oscillation knob down firmly to engage the oscillation function.

SPECIFICATIONS

- **Model Name:** Kipling Table Fan
- **Model Number:** DBF6126
- **Brand:** Deco Breeze
- **Color:** Kipling (Brown Copper Finish)
- **Product Dimensions (D x W x H):** 9" x 11" x 18"
- **Fan Head Size:** 10 inches
- **Number of Speeds:** 3
- **Speed Options:** 900 RPM (Low), 1100 RPM (Medium), 1280 RPM (High)
- **Power Source:** Corded Electric
- **Voltage:** 120V
- **Wattage:** 11 watts
- **Material:** Metal and Polyresin
- **Special Features:** Oscillating, Portable, Adjustable Tilt
- **Indoor/Outdoor Usage:** Indoor Only

Oscillating table fan

11 Inches

18 Inches





Visual representation of the fan's dimensions: 18 inches high and 11 inches wide.

WARRANTY

This DecoBREEZE Kipling Table Fan comes with a one-year limited manufacturer warranty. Please retain your proof of purchase for warranty claims. The warranty covers defects in materials and workmanship under normal use. It does not cover damage resulting from misuse, accident, alteration, or unauthorized repair.

CUSTOMER SUPPORT

For further assistance, troubleshooting, or warranty inquiries, please contact DecoBREEZE customer support. Refer to the product packaging or the official DecoBREEZE website for the most current contact information.

Website: [DecoBREEZE Official Store](#)

© 2024 DecoBREEZE. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question