

Farberware 46650

Farberware Nonstick Bakeware 10-Piece Set

USER MANUAL

Model: 46650

1. Introduction

Welcome to the Farberware Nonstick Bakeware 10-Piece Set. This manual provides essential information for the proper use, care, and maintenance of your new bakeware. Please read all instructions carefully before first use to ensure optimal performance and longevity of your products.

Safety Information

- Always use oven mitts when handling hot bakeware.
- Do not use metal utensils on nonstick surfaces as this can scratch and damage the coating. Use silicone, nylon, or wooden utensils.
- Ensure bakeware is completely dry before storing to prevent rust, especially in rolled rims.
- Keep out of reach of children when hot.

2. Product Overview

The Farberware Nonstick Bakeware 10-Piece Set is designed for versatile baking and roasting. Each piece features solid-gauge steel construction and a long-lasting nonstick coating for easy food release and quick cleanup.

Included Components:

- 10-Inch x 15-Inch Cookie Pan
- 11-Inch x 17-Inch Cookie Pan
- Two 8-Inch Round Cake Pans
- Two 8-Inch Square Cake Pans
- 9-Inch x 5-Inch Loaf Pan
- 9-Inch x 13-Inch Cake Pan
- 12-Cup Muffin Pan

- 9-Inch x 14.5-Inch Chrome-Plated Cooling Grid



Figure 2.1: The complete Farberware Nonstick Bakeware 10-Piece Set, showcasing various pans and the cooling rack.



Figure 2.2: A close-up view of the 12-cup muffin pan, ideal for cupcakes and savory bites.



Figure 2.3: The 9-inch x 5-inch loaf pan, suitable for breads, meatloaf, and more.

3. Setup

Initial Cleaning:

1. Before first use, wash all bakeware pieces in warm, soapy water.
2. Rinse thoroughly and dry immediately with a soft cloth.
3. For best results and to prolong the life of the nonstick coating, it is recommended to hand wash.

Pre-use Preparation:

- While the nonstick coating is effective, a light greasing or flouring of the pan may be desired for certain recipes or for extra assurance of easy release.

4. Operating Instructions

Your Farberware bakeware is designed for optimal heat distribution and nonstick performance, making your baking experience more enjoyable.

Baking Guidelines:

- The bakeware is oven safe up to 450°F (230°C). Do not exceed this temperature.
- For best results, preheat your oven to the recommended temperature before placing bakeware inside.
- The nonstick surface allows for easy food release. Avoid over-baking, which can cause food to stick.
- The comfortable handles provide a confident grip when transferring bakeware.

FARBERWARE®



COMFORTABLE HANDLES FOR A CONFIDENT GRIP

Figure 4.1: Comfortable handles on the bakeware ensure a secure grip.

FARBERWARE®



NONSTICK FOR QUICK FOOD RELEASE

Figure 4.2: The nonstick surface ensures quick food release for items like cookies.

5. Care and Maintenance

Proper care will extend the life and performance of your Farberware nonstick bakeware.

Cleaning:

- Hand wash recommended for best results and to preserve the nonstick coating.
- If using a dishwasher, ensure pans are removed promptly after the cycle. Water can collect in the rolled rims, and prolonged exposure to moisture can lead to rust.
- Use warm, soapy water and a soft sponge or cloth. Avoid abrasive cleaners, scouring pads, or steel wool.
- For stubborn baked-on food, soak the pan in warm, soapy water for a few minutes before cleaning.

Storage:

- Store bakeware in a dry place.

- To prevent scratching the nonstick surface, place a paper towel or soft cloth between pans when stacking them.

6. Troubleshooting

Problem	Possible Cause	Solution
Food sticks to the pan.	Pan not properly greased; excessive heat; pan worn out.	Lightly grease pan before use. Ensure oven temperature does not exceed 450°F. Replace if nonstick coating is severely damaged.
Pans warp in the oven.	Sudden temperature changes; exceeding maximum temperature.	Avoid extreme temperature changes (e.g., placing hot pan in cold water). Do not exceed 450°F. Pans should return to shape upon cooling.
Rust appears in rolled rims after dishwashing.	Water collecting in rims and not drying.	Remove pans from dishwasher immediately after cycle. Ensure all water is drained from rolled rims and dry thoroughly. Hand washing is recommended.
Scratches on nonstick surface.	Use of metal utensils or abrasive cleaning tools.	Only use silicone, nylon, or wooden utensils. Avoid abrasive cleaners and scouring pads.

7. Specifications

Feature	Detail
Brand	Farberware
Model Number	46650
Material	Steel with Nonstick Coating
Color	Gray
Oven Safe Temperature	Up to 450°F (230°C)
Dishwasher Safe	Yes (Hand wash recommended)
Item Weight	8.68 pounds
Product Dimensions	12.7 x 9.7 x 11.5 inches (packaging)

Feature	Detail
Included Components	10-Inch x 15-Inch Cookie Pan, 11-Inch x 17-Inch Cookie Pan, Two 8-Inch Round Cake Pans, Two 8-Inch Square Cake Pans, 9-Inch x 5-Inch Loaf Pan, 9-Inch x 13-Inch Cake Pan, 12-Cup Muffin Pan, 9-Inch x 14.5-Inch Chrome-Plated Cooling Grid




8. Warranty and Support




Farberware stands by the quality of its products. This bakeware set comes with a Quality Assurance Guarantee, ensuring its performance under normal household use.

For any questions, concerns, or support needs regarding your Farberware bakeware, please refer to the official Farberware website or contact their customer service directly. Contact information is typically available on the product packaging or the brand's official website.

Visit the official Farberware Store: [Farberware Store](#)

Related Documents - 46650

	<p>Farberware FCD06ASWWHC Countertop Dishwasher Instruction Manual</p> <p>Your guide to the Farberware FCD06ASWWHC Professional 6-Piece Countertop Dishwasher. This manual provides essential safety, installation, operation, and maintenance instructions for optimal performance and care of your appliance.</p>
	<p>Farberware 201797 Air Fryer Toaster Oven Owner's Manual</p> <p>Comprehensive owner's manual for the Farberware 201797 Air Fryer Toaster Oven, covering operation, safety, troubleshooting, and recipes. Provided by Appliance Factory Parts.</p>
	<p>Farberware Superfast Automatic Stainless Steel Coffee Urn Use and Care Instructions</p> <p>Detailed use and care instructions, safety precautions, and warranty information for the Farberware Superfast Automatic Stainless Steel Coffee Urn, models FSU122, 236, 255.</p>

 <p>The image shows the cover of the instruction manual for the Farberware FCD06SDWHT dishwasher. It features a photograph of the dishwasher and the Farberware logo at the bottom.</p>	<p>Farberware FCD06SDWHT Dishwasher: Instruction Manual and User Guide</p> <p>Comprehensive guide for the Farberware FCD06SDWHT dishwasher, covering safety, operation, installation, maintenance, and troubleshooting. Learn how to properly load, run cycles, and care for your appliance.</p>
 <p>The image shows the cover of the owner's manual for the Farberware FCP240 stainless steel coffee percolator. It features a photograph of the percolator and the Appliance Factory Parts logo at the top.</p>	<p>Farberware FCP240 Coffee Percolator Owner's Manual</p> <p>Owner's manual for the Farberware FCP240 stainless steel coffee percolator, including safety instructions, usage guide, and care information. Provided by Appliance Factory Parts.</p>
 <p>The image shows the cover of the safety, use, and care instructions for the Farberware Stovetop Percolator. It features a photograph of the percolator and the Farberware logo at the top.</p>	<p>Farberware Stovetop Percolator: Safety, Use, and Care Instructions</p> <p>Comprehensive guide for the Farberware Stovetop Percolator, covering essential safety precautions, detailed usage instructions, care and maintenance tips, brewing steps, and warranty information.</p>