

Allied Telesis AT-GS910/5-10

Allied Telesis AT-GS910/5-10 Unmanaged Switch User Manual

Model: AT-GS910/5-10

1. INTRODUCTION

This manual provides essential information for the installation, operation, and maintenance of the Allied Telesis AT-GS910/5-10 Unmanaged Switch. This device is a high-performance, 5-port 10/100/1000T (Gigabit Ethernet) unmanaged switch designed for small office and home office (SOHO) environments, offering simple plug-and-play connectivity without complex configuration.

The AT-GS910/5-10 is equipped with an internal power supply unit (PSU), ensuring a compact and reliable design for seamless integration into your network.

2. SAFETY INFORMATION

Please read and understand the following safety precautions before installing or operating the switch. Failure to comply with these guidelines may result in injury or damage to the device.

- **Power Source:** Use only the power cord supplied with the device and connect it to a grounded electrical outlet. Ensure the voltage matches the requirements specified on the switch's label.
- **Ventilation:** Do not block any ventilation openings. Ensure adequate airflow around the switch to prevent overheating. Avoid placing the switch in enclosed spaces or on soft surfaces that may impede ventilation.
- **Environment:** Operate the switch in a dry environment, away from water, moisture, and excessive humidity. Avoid exposure to direct sunlight or extreme temperatures.
- **Placement:** Place the switch on a stable, flat surface. Do not place heavy objects on top of the switch.
- **Servicing:** Do not attempt to service this product yourself. Refer all servicing to qualified service personnel.

3. PACKAGE CONTENTS

Verify that all items are present and in good condition upon unpacking. If any item is missing or damaged, contact your vendor immediately.

- Allied Telesis AT-GS910/5-10 Unmanaged Switch
- Power Cord
- Quick Start Guide (or similar documentation)

4. PRODUCT FEATURES

The AT-GS910/5-10 switch offers robust features for reliable network connectivity:

- **5 Gigabit Ethernet Ports:** Provides five 10/100/1000T RJ45 ports for high-speed wired connections.
- **Unmanaged Operation:** Plug-and-play functionality requires no configuration, making it easy to deploy.
- **Auto-Negotiation:** Each port automatically detects the speed and duplex mode of the connected device.
- **Auto MDI/MDIX:** Eliminates the need for crossover cables, simplifying network setup.
- **Internal Power Supply:** Integrated power supply for a cleaner setup and reduced cable clutter.
- **LED Indicators:** Front-panel LEDs provide real-time status for power, link/activity, and speed.



Figure 4.1: Front view of the AT-GS910/5-10 switch, highlighting the five Gigabit Ethernet ports and status LEDs.

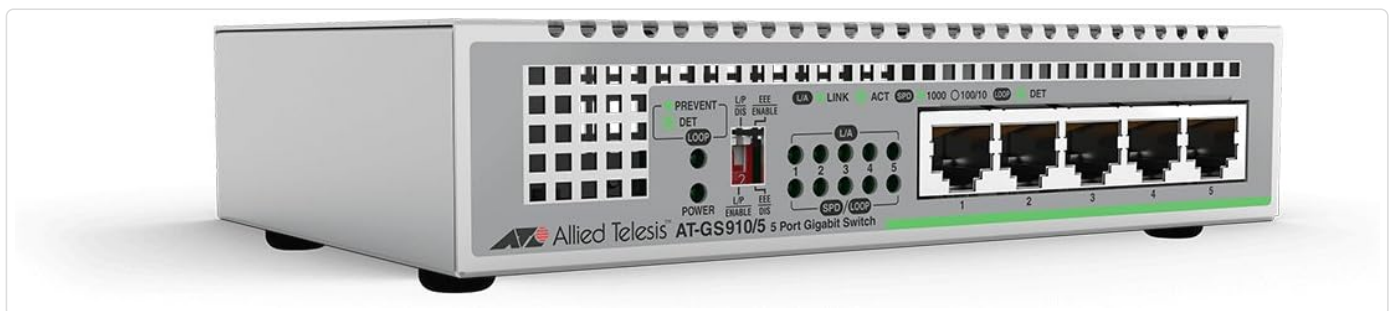


Figure 4.2: Rear view of the AT-GS910/5-10 switch, illustrating the power input and overall compact design.

5. SETUP

Follow these steps to set up your AT-GS910/5-10 switch:

1. **Choose a Location:** Select a flat, stable surface for the switch. Ensure there is adequate space around the device for proper ventilation. Avoid placing it near heat sources or in direct sunlight.
2. **Connect Power:**
 - Insert one end of the provided power cord into the AC power inlet on the back of the switch.
 - Plug the other end of the power cord into a standard electrical outlet.
 - The Power LED on the front panel should illuminate, indicating the switch is receiving power.
3. **Connect Network Devices:**
 - Using standard Ethernet cables (Cat5e or better recommended for Gigabit speeds), connect your network devices (e.g., computers, printers, network-attached storage, routers) to any of the five RJ45 ports on the front

of the switch.

- The Link/Act LED for each connected port will illuminate when a valid network connection is established and will blink to indicate data activity.
- The SPD (Speed) LED will indicate the connection speed (e.g., 1000 for Gigabit, 100 for Fast Ethernet, 10 for Ethernet).

Your AT-GS910/5-10 switch is now ready for use. As an unmanaged switch, no further configuration is required.

6. OPERATING THE SWITCH

The Allied Telesis AT-GS910/5-10 is an unmanaged switch, meaning it operates automatically without the need for user configuration. Once powered on and connected to network devices, it will begin forwarding data traffic.

LED Indicators

The front panel LEDs provide visual status of the switch's operation:

- **Power LED:**
 - **On:** The switch is powered on and operating normally.
 - **Off:** The switch is powered off or not receiving power.
- **L/A (Link/Act) LED (per port):**
 - **On:** A valid network link is established on the port.
 - **Blinking:** Data activity is occurring on the port.
 - **Off:** No link is established or the connected device is off.
- **SPD (Speed) LED (per port):**
 - **1000 (Green):** The port is operating at 1000 Mbps (Gigabit Ethernet).
 - **100 (Orange):** The port is operating at 100 Mbps (Fast Ethernet).
 - **10 (Off):** The port is operating at 10 Mbps (Ethernet).
- **LOOP DET (Loop Detection) LED:**
 - **On:** Indicates a network loop has been detected. The switch will block the port(s) causing the loop to prevent network instability.
 - **Off:** No network loop detected.

7. MAINTENANCE

The AT-GS910/5-10 switch is designed for minimal maintenance. However, following these guidelines can help ensure its longevity and optimal performance:

- **Cleaning:** Periodically clean the exterior of the switch with a soft, dry cloth. Do not use liquid or aerosol cleaners. Ensure the ventilation openings are free from dust and debris.
- **Ventilation:** Regularly check that the switch's ventilation holes are not obstructed. Proper airflow is crucial to prevent overheating.
- **Cable Management:** Ensure network cables are neatly organized and not excessively bent or strained. This prevents damage to cables and ports.
- **Power Cycle:** If the switch experiences unusual behavior, a simple power cycle (unplugging the power cord, waiting 10 seconds, and plugging it back in) can often resolve minor issues.

8. TROUBLESHOOTING

If you encounter issues with your AT-GS910/5-10 switch, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
No Power LED indication.	Switch is not receiving power.	<ul style="list-style-type: none">• Ensure the power cord is securely connected to the switch and the electrical outlet.• Verify the electrical outlet is functional by plugging in another device.
Link/Act LED is off for a connected device.	No valid network link.	<ul style="list-style-type: none">• Check if the Ethernet cable is securely connected at both ends (switch and device).• Ensure the connected device is powered on and its network adapter is functioning.• Try a different Ethernet cable.• Try connecting to a different port on the switch.
Slow network speed.	Cable issue, device limitation, or network congestion.	<ul style="list-style-type: none">• Ensure you are using Cat5e or Cat6 Ethernet cables for Gigabit speeds.• Check the SPD LED for the port; it should be green (1000 Mbps) for Gigabit connections.• Verify the connected device's network adapter supports Gigabit Ethernet.• Reduce network traffic if possible.
LOOP DET LED is on.	Network loop detected.	<ul style="list-style-type: none">• A network loop occurs when there are redundant paths for data, which can cause broadcast storms.• Identify and remove the redundant cable connection that is creating the loop.• Ensure your network topology does not create unintended loops.

9. SPECIFICATIONS

Feature	Description
Model Number	AT-GS910/5-10
Ports	5 x 10/100/1000T RJ45 Gigabit Ethernet Ports
Switch Type	Unmanaged
Data Transfer Rate	10/100/1000 Mbps (Gigabit Ethernet)
Power Supply	Internal PSU

Feature	Description
Dimensions (LxWxH)	6.3 x 4.13 x 1.38 inches (160 x 105 x 35 mm)
Item Weight	1.1 pounds (500 Grams)
Interface Type	RJ45
Case Material	Plastic

Note: Specifications are subject to change without notice. For the most current information, please refer to the manufacturer's official website.

10. WARRANTY AND SUPPORT

For information regarding the product warranty, please refer to the warranty card included with your product or visit the official Allied Telesis website. Warranty terms and conditions may vary by region and product.

If you require technical assistance or have questions not covered in this manual, please contact Allied Telesis customer support or your local reseller. Support contact information can typically be found on the Allied Telesis official website:

[Visit Allied Telesis Support Website](#)

© 2023 Allied Telesis. All rights reserved.
Product specifications are subject to change without notice.

Documents - Allied Telesis – AT-GS910/5-10




[\[pdf\]](#) User Manual
at002143a book AE Руководство по установке manual Рус Неуправляемый коммутатор 5x10 100
1000BASE T внешний блок питания цена купить AT GS910 5E 50 в СвязьКомплект instr p373440 1
skomplekt files product 373440 |||
GS910 GIGABIT ETHERNET AT-GS910/5 AT-GS910/5E AT-GS910/8 AT-GS910/8E
AT-GS910/16 AT-GS910/24 613-002143 Rev. A Copyright 2016 Allied Telesis, Inc. .
Allied Telesis Inc. Microsoft Internet Explorer Microsoft Corporation. Netscape
Navigator Netscape Communications Co...
lang:es score:28 filesize: 4.18 M page_count: 76 document date: 2016-04-27



[\[pdf\]](#) User Manual

at002143a book AE Руководство по установке manual РусНеуправляемый коммутатор 8x10 100
1000BASE T встроенный блок питания цена купить AT GS910 8 50 в СвязьКомплектinstr p373441
1skomplekt files attachments product 373441 instr 1 |||
GS910 GIGABIT ETHERNET AT-GS910/5 AT-GS910/5E AT-GS910/8 AT-GS910/8E
AT-GS910/16 AT-GS910/24 613-002143 Rev. A Copyright 2016 Allied Telesis, Inc. .
Allied Telesis Inc. Microsoft Internet Explorer Microsoft Corporation. Netscape
Navigator Netscape Communications Co...
lang:es **score:28** filesize: 4.18 M page_count: 76 document date: 2016-04-27

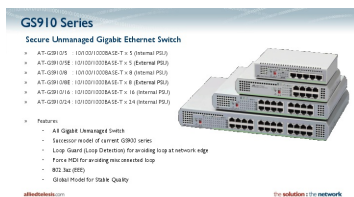

[\[pdf\]](#)

Allied Telesis 2016 Q1 Feb EMEA Disti ASI Pricelist notes Fitovský Marek GS910 Series » AT 5 10 100
1000BASE T x Internal PSU 5E External 8 8 content ekatalog biz katalog 502540642 |||
GS910 Series Secure Unmanaged Gigabit Ethernet Switch AT-GS910/5 :
10/100/1000BASE-T x 5 Internal PSU AT-GS910/5E : 10/100/1000BASE-T x 5
External PSU AT-GS910/8 : 10/100/1000BASE-T x 8 Internal PSU AT-GS910/8E :
10/100/1000BASE-T x 8 External PSU AT-GS910/16 : 10/100/1000BASE-T x 16 I...
lang:da **score:18** filesize: 309.23 K page_count: 1 document date: 2016-07-12