

Household Essentials 2169-1

Household Essentials 2169-1 Over-the-Door Organizer Instruction Manual

Model: 2169-1

INTRODUCTION

This manual provides detailed instructions for the proper setup, usage, and maintenance of your Household Essentials 2169-1 Over-the-Door Organizer. Designed for efficient storage, this organizer helps maximize space in various rooms by utilizing the back of a door.

PRODUCT FEATURES

- **Six Pockets:** Features a total of six storage pockets, including three deep pockets (7 inches) and three shallow pockets (5 inches).
- **Tapered Design:** Pockets are tapered with plastic inserts and a fabric-lined fiberboard base for structural support and easy access to contents.
- **Versatile Hooks:** Includes hooks designed to fit both standard residential (1.5 inches deep) and commercial (2 inches deep) doors.
- **Space-Saving:** Narrow footprint (15 inches wide) allows for installation on various door types, including linen closet doors.
- **Dimensions:** Measures 57 inches high x 15 inches wide x 7 inches deep.

PACKAGE CONTENTS

- 1 x Household Essentials 2169-1 Over-the-Door Organizer
- Over-the-door hooks (for residential and commercial doors)
- Plastic side inserts and fabric-lined fiberboard bases for pockets

SETUP AND INSTALLATION

1. **Unpack Components:** Carefully remove all items from the packaging. Ensure all listed package contents are present.
2. **Insert Pocket Supports:** For each pocket, insert the plastic side inserts and the fabric-lined fiberboard base.

These provide structure and support to the pockets. Ensure they are seated firmly at the bottom of each pocket.

3. **Attach Hooks:** Slide the provided over-the-door hooks through the grommets at the top of the organizer. Select the appropriate hooks for your door thickness (residential or commercial).
4. **Hang Organizer:** Place the hooks over the top edge of your desired door. Ensure the organizer hangs evenly and securely. The organizer is designed to fit on most standard doors.



Image: The Household Essentials Over-the-Door Organizer shown installed on a door, demonstrating its use for storing various household items.

USAGE INSTRUCTIONS

The Household Essentials Over-the-Door Organizer is designed for versatile storage. Utilize the six pockets to organize a variety of items, such as pantry goods, toiletries, craft supplies, or small clothing accessories. The tapered design of the pockets facilitates easy placement and retrieval of items.

- **Deep Pockets (7 inches):** Ideal for larger or bulkier items.
- **Shallow Pockets (5 inches):** Suitable for smaller items or those requiring quicker access.

Distribute weight evenly across the pockets to maintain stability and prevent sagging. Avoid overloading individual pockets with excessively heavy items.





Image: Front view of the Household Essentials Over-the-Door Organizer, highlighting its six red fabric pockets.

MAINTENANCE

To ensure the longevity and appearance of your organizer, follow these maintenance guidelines:

- **Cleaning:** The organizer is made of plastic and fabric. For general cleaning, wipe with a damp cloth and mild soap. Allow to air dry completely.
- **Stain Removal:** For stubborn stains, spot clean with a gentle fabric cleaner. Test on an inconspicuous area first.
- **Avoid Harsh Chemicals:** Do not use abrasive cleaners, bleach, or harsh chemicals, as these may damage the fabric or plastic components.
- **Storage:** If storing the organizer when not in use, ensure it is clean and dry. Fold neatly to prevent creasing.

TROUBLESHOOTING


If you encounter any issues with your organizer, consider the following:

- **Organizer Sags:** Ensure the plastic side inserts and fiberboard bases are correctly positioned in each pocket. Reduce the weight of items in the pockets, distributing them more evenly.
- **Organizer Not Hanging Straight:** Verify that the hooks are properly seated over the door and that the organizer is centered.
- **Hooks Don't Fit Door:** Confirm you are using the correct set of hooks for your door's thickness (residential or commercial).

SPECIFICATIONS

Attribute	Detail
Model Number	2169-1

Attribute	Detail
Brand	Household Essentials
Product Dimensions	15 x 7 x 57 inches (Width x Depth x Height)
Item Weight	2.85 pounds
Material	Plastic, Fabric
Color	Red
Assembly Required	Yes
UPC	040071201210

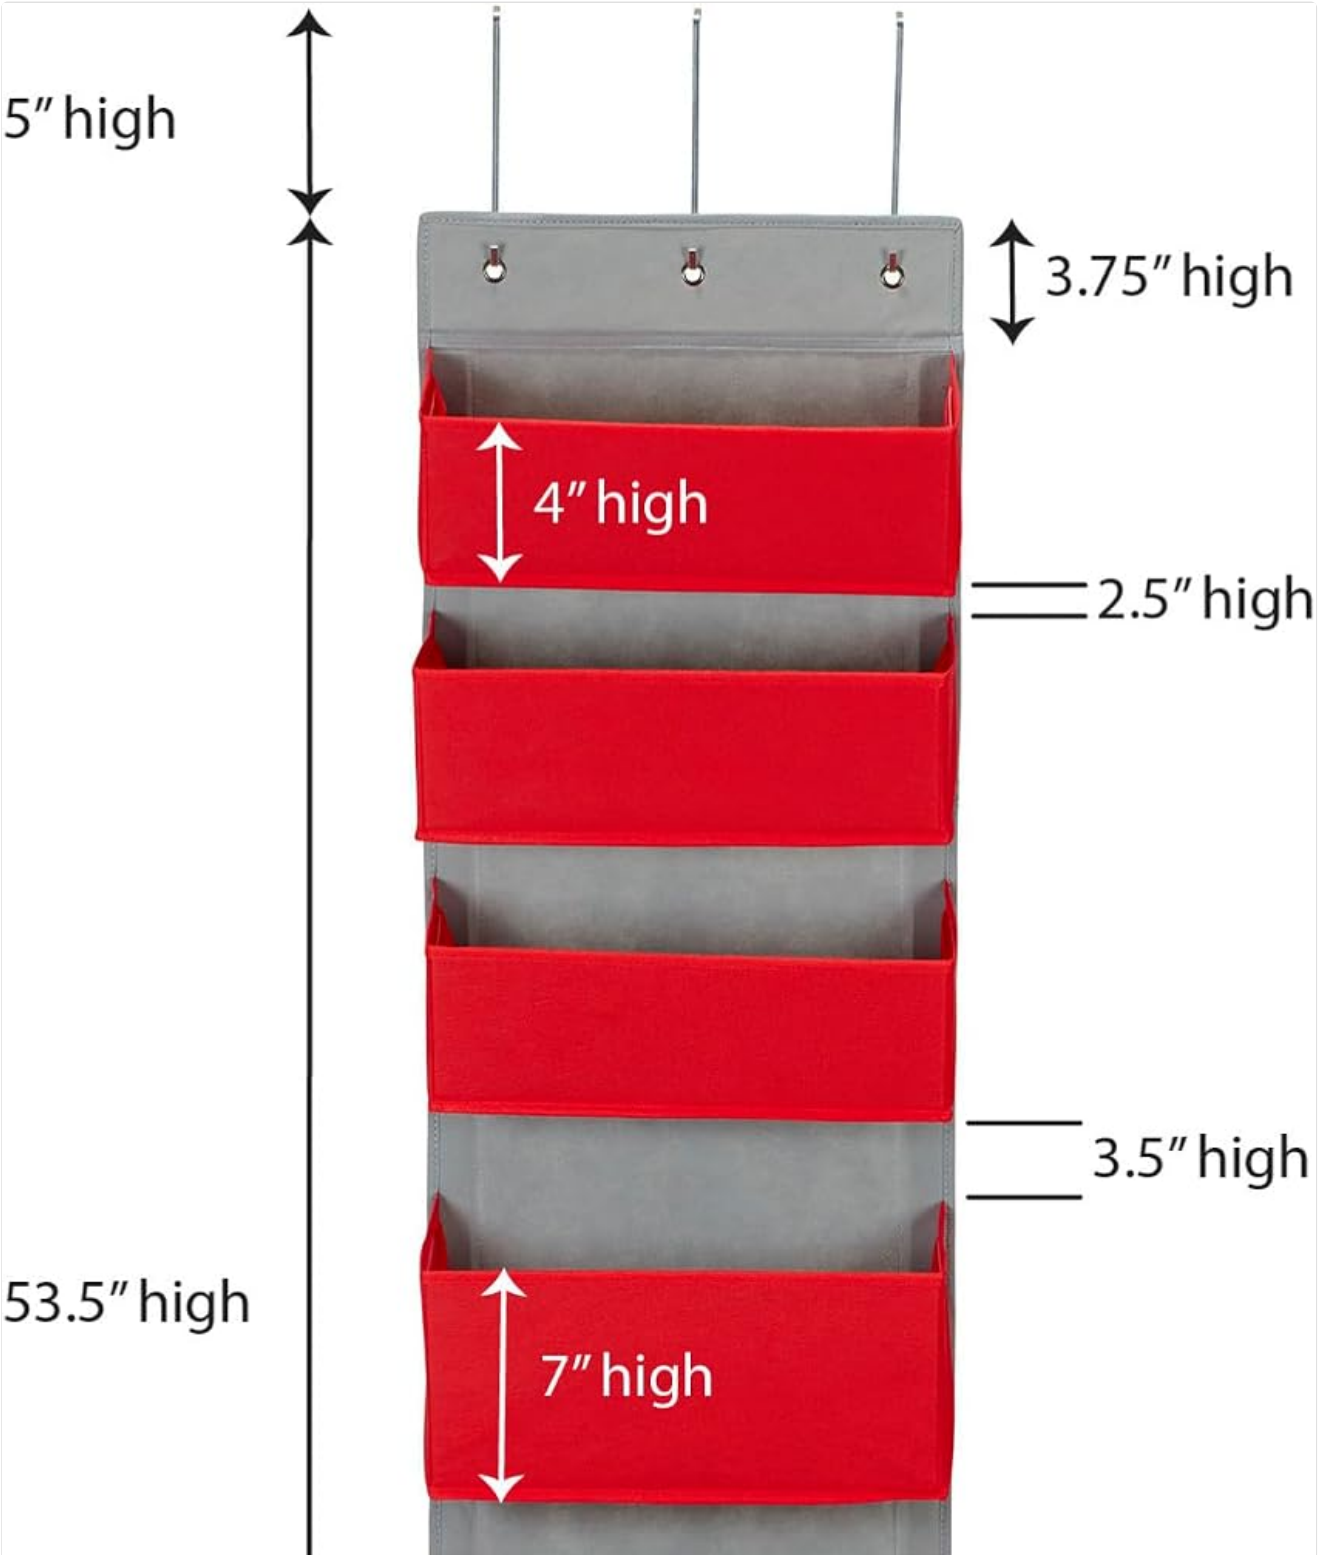

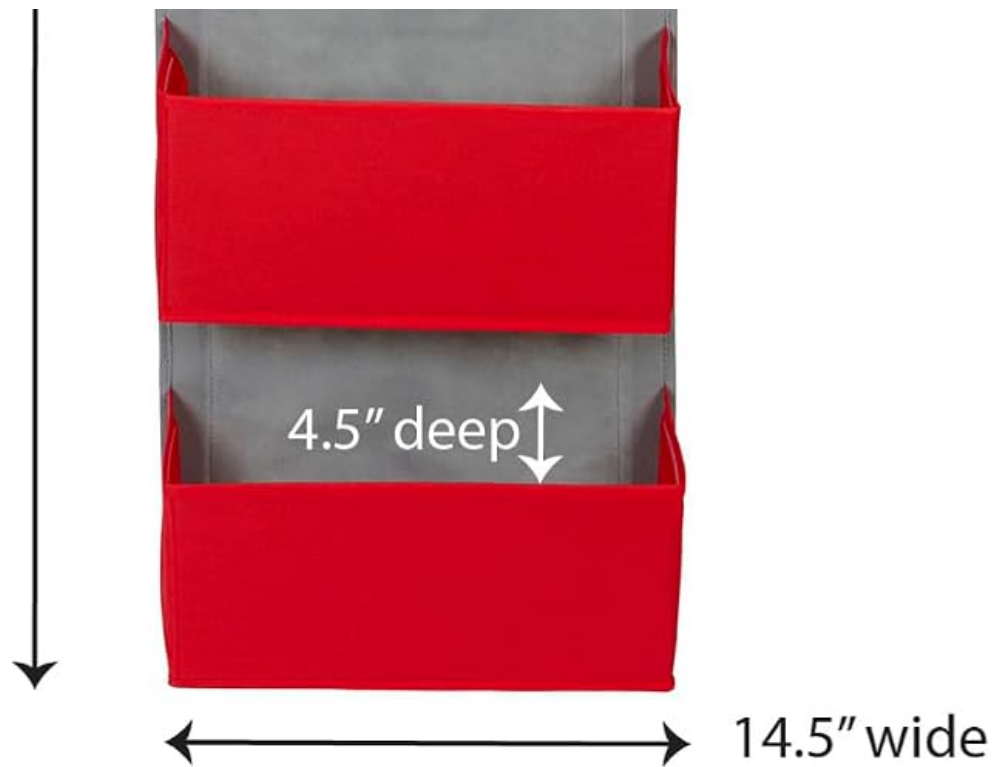


Image: Detailed diagram illustrating the dimensions of the organizer and its pockets.

WARRANTY AND SUPPORT

For information regarding product warranty or to obtain support, please refer to the manufacturer's official website or contact their customer service directly. Keep your purchase receipt for warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question