

Anderic FBA_RRU401

Anderic RRU401 4-in-1 Advanced Universal Remote Control Instruction Manual

Brand: Anderic | Model: FBA_RRU401

1. INTRODUCTION

The Anderic RRU401 4-Device (4-IN-1) Universal remote control is designed to consolidate up to four different remote controls into a single unit for your home entertainment system. This remote can be programmed to operate a wide range of brands and device types, including TVs, DVD players, cable boxes, satellite boxes, set-top boxes, audio equipment, and Roku players.

Key features include:

- 4-Device Universal compatibility
- Extensive code database for broad compatibility
- Learning ability for custom key assignments
- Full key back-lighting for visibility in low-light conditions
- Large, easy-to-read buttons
- Smart keys for direct access to HOME, NETFLIX, and other APPS
- Ability to program multi-unit power on/off with a single button press
- Various punch-through features for volume, channel, media, and Roku functions
- Adjustable backlight settings (brightness, duration, enable/disable)

2. PRODUCT OVERVIEW

The Anderic RRU401 remote control features a comprehensive layout designed for intuitive operation across multiple devices. Below are images illustrating the remote's front and back, highlighting its design and key components.







Figure 2.1: Front view of the Anderic RRU401 universal remote control, displaying its full button layout including device mode buttons (DVD, TV, STB, AUDIO), navigation pad, playback controls, number pad, and special function keys like HOME, NETFLIX, and APPS.



Figure 2.2: Back view of the Anderic RRU401 remote control, showing the battery compartment and an optional CBL01 security cable attachment (sold separately) connected to the remote.

3. SETUP

3.1 Battery Installation

The Anderic RRU401 remote requires two (2) AAA batteries for operation. Batteries are not included with the remote.

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery cover downwards to open.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align with the indicators inside the compartment.
4. Replace the battery cover by sliding it upwards until it clicks into place. An optional screw for the battery cover is included for added security.

3.2 Initial Programming

The RRU401 can be programmed using several methods to control your devices. The remote comes pre-

programmed for specific devices as a starting point:

- TV: LG (Code 2698)
- DVD: Samsung (Code 3229)
- STB: Motorola (Code 5260)
- Audio: Vizio Sound Bar (Code 4240)

For programming other devices or changing pre-programmed settings, refer to the detailed instructions in the full manual. Programming options include:

- Code Input Method
- Auto Code Search Method
- One Button Search Method
- Code Display Function

A comprehensive manual with detailed programming steps and an extensive code database can be downloaded for free from the manufacturer's website: <http://www.anderic.com/rru401>

4. OPERATING INSTRUCTIONS

Once programmed, the Anderic RRU401 remote allows control of up to four different devices. Select the desired device mode (TV, DVD, STB, AUX) by pressing the corresponding button at the top of the remote before issuing commands.

4.1 Key Functions

The remote features standard and advanced keys for comprehensive control:

- **Device Mode Buttons (DVD, TV, STB, AUDIO):** Selects the device to be controlled.
- **Power Button:** Turns the selected device on or off. Can be programmed for multi-unit power control.
- **Navigation Pad (Up, Down, Left, Right, OK/ENTER):** Used for menu navigation and selection.
- **Volume Up/Down (VOL +/-):** Adjusts volume. Can be set to punch-through to a specific device's volume.
- **Channel Up/Down (CH +/-):** Changes channels. Can be set to punch-through to a specific device's channels.
- **Playback Controls (Play, Pause, Stop, Rewind, Fast Forward, Skip Back, Skip Forward):** Controls media playback.
- **Smart Keys (HOME, NETFLIX, APPS):** Direct access buttons for popular streaming services and smart TV functions.
- **Learning Ability:** Allows individual keys to learn functions from an original remote.
- **Backlight:** Full key back-lighting for use in dark rooms. Brightness and duration are adjustable.

4.2 Key Mapping Examples

The RRU401 can emulate the key layouts of various original remotes. Below are examples of how the RRU401 maps to common devices like Xbox One, Apple TV, and Roku players, as well as various TV and STB models.

XBOX® ONE REMOTE KEY MAP

Hold [STB] key for 4 seconds, release, then enter code: 5280



APPLE TV KEY MAP

Hold [STB] key for 4 seconds, release, then enter code: 2602



ROKU® PLAYER KEY MAP


Hold [STB] key for 4 seconds, release, then enter code: 5246



Figure 4.1: Visual representation of how the Anderic RRU401 remote's buttons correspond to functions on an Xbox One remote

TV & SMART TV

 (Most popular shown here)

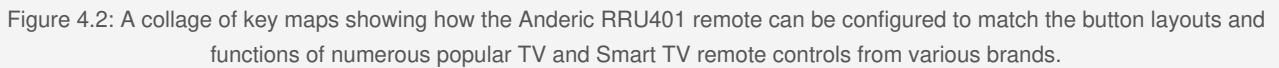

STB, Cable, Dish, Sat

KEY MAP AND CODES



Figure 4.3: A collection of key maps illustrating the compatibility of the Anderic RRU401 remote with various Set-Top Box (STB), Cable, Dish, and Satellite receiver remote controls, showing corresponding button functions.

5. MAINTENANCE

5.1 Battery Replacement

When the remote's performance degrades or the backlight dims significantly, it is time to replace the batteries. Follow the battery installation steps outlined in Section 3.1.

5.2 Cleaning

To clean the remote control, use a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Do not use harsh chemicals or immerse the remote in liquid.

5.3 Optional Security Cable

An optional security cable attachment (Part number: CBL01) is available and sold separately. This cable can be used to secure the remote to prevent loss, particularly in commercial or public settings.

6. TROUBLESHOOTING

If you encounter issues with your Anderic RRU401 remote, consider the following common solutions:

- **Remote not responding:** Check battery orientation and charge. Replace batteries if necessary.
- **Device not responding:** Ensure the correct device mode button (TV, DVD, STB, AUX) is selected. Verify the programming code for the device. Try re-programming the remote using a different code from the manual's database.
- **Specific buttons not working:** If only certain buttons are unresponsive, they may not be correctly programmed or may be in a punch-through mode. Refer to the full manual for individual key programming and punch-through feature adjustments.
- **Backlight issues:** Check backlight settings (brightness, length of time, enable/disable) as described in the full manual.
- **Factory Reset:** If persistent issues occur, a factory reset can return the remote to its default settings. Instructions for performing a factory reset are available in the downloadable manual.

For further assistance, consult the comprehensive manual available at <http://www.anderic.com/rru401>.

7. SPECIFICATIONS

Feature	Detail
Brand	Anderic
Model Number	FBA_RRU401
Compatible Devices	TVs, DVD/Blu-ray Players, Cable Boxes, Satellite Boxes, Set-top-boxes, Audio Equipment, Roku Players
Max Number of Supported Devices	4
Power Source Type	Battery
Batteries Required	2 AAA batteries (not included)
Human Interface Input	Buttons
Connector Type	Infrared

Feature	Detail
Product Dimensions	19.05 x 3.18 x 3.81 cm
Item Weight	113.39 g
Special Features	Universal, Backlight, Learning Capability

8. WARRANTY AND SUPPORT

8.1 Warranty Information

The Anderic RRU401 Universal Remote Control comes with a 1-Year Replacement Warranty. Please retain your proof of purchase for warranty claims.

8.2 Customer Support

For detailed programming instructions, troubleshooting guides, and further support, please refer to the official Anderic website and download the full manual for the RRU401 model:

Download Full Manual
(PDF)

For direct inquiries, please refer to the contact information provided on the Anderic website.

© 2024 Anderic. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question