

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [LG](#) /

> [LG B470 Prepaid Flip Phone User Manual](#)

LG B470

LG B470 Prepaid Flip Phone User Manual

Model: B470 | Brand: LG

INTRODUCTION

This manual provides essential instructions for the safe and efficient use of your LG B470 prepaid flip phone. The LG B470 is designed for reliable communication with features including a 1.3 MP camera with video capability, Bluetooth connectivity, a dedicated Text-to-Speech key, and an enhanced audio (Senior) mode for improved sound clarity.



Figure 1: LG B470 flip phone in retail packaging. This image illustrates the phone's compact design and highlights its primary features such as camera, mobile web access, music playback, Bluetooth capability, and messaging functions.

SETUP

1. Package Contents

Verify that your package contains the LG B470 phone and a charger.

2. Battery Installation

1. Remove the back cover of the phone.
2. Align the battery contacts with the terminals inside the phone.
3. Gently press the battery into place.
4. Replace the back cover, ensuring it clicks securely.

3. SIM Card Installation

The LG B470 uses a single SIM card slot.

1. With the battery removed, locate the SIM card slot.
2. Insert the SIM card with the gold contacts facing down and the cut corner aligned with the slot.
3. Gently push the SIM card until it locks into place.
4. Reinstall the battery and back cover.

4. Charging the Battery

Before first use, fully charge the phone's battery.

1. Connect the charger to the charging port on the phone.
2. Plug the charger into a standard electrical outlet.
3. The charging indicator will show the charging status. Disconnect the charger once the battery is full.

5. Initial Activation

For carrier-locked phones, activation may require visiting your service provider (e.g., AT&T) or following their specific activation instructions.

OPERATING INSTRUCTIONS

1. Power On/Off

- To power on, press and hold the **Power/End Call** key until the screen lights up.
- To power off, press and hold the **Power/End Call** key, then select **Power Off**.

2. Making and Receiving Calls

- To make a call, enter the phone number and press the **Send** key.
- To answer a call, press the **Send** key.
- To end a call, press the **Power/End Call** key.

3. Text Messaging

Texting on the LG B470 is performed using the numeric keypad. This method can be slower than a full QWERTY keyboard.

- Navigate to the **Messages** menu.
- Select **Create New Message**.
- Enter the recipient's number or select from contacts.
- Type your message using the keypad. Multiple presses on a key cycle through letters and numbers.
- Press **Send**.

4. Bluetooth Connectivity

The LG B470 supports Bluetooth for connecting to compatible devices such as headsets or car kits.

1. Go to **Menu > Settings > Bluetooth**.
2. Turn Bluetooth **On**.
3. Select **Search for Devices** to find nearby Bluetooth accessories.
4. Select the desired device and follow the on-screen prompts to pair.

5. Dedicated Text-to-Speech Key

Utilize the dedicated Text-to-Speech key to have incoming messages or menu options read aloud. Refer to your phone's on-screen guide for specific key location and activation.

6. Enhanced Audio (Senior) Mode

Activate the Enhanced Audio (Senior) mode in the settings menu for increased call volume and clearer audio.

7. Camera Usage

The phone features a 1.3 MP camera for capturing photos and videos.

- Access the camera from the main menu.
- Frame your shot using the display.
- Press the designated camera key to take a photo or start/stop video recording.

8. Mobile Web and Music Player

The LG B470 supports basic mobile web browsing and includes a music player. Access these features through the phone's main menu. Note that data usage may apply for mobile web.

MAINTENANCE

1. Battery Care

- Avoid exposing the battery to extreme temperatures.
- Do not puncture or damage the battery.
- Use only the charger provided or approved by LG.
- If the battery needs replacement, use an authorized LG service center or genuine LG battery.

2. Cleaning

- Wipe the phone with a soft, dry cloth.
- Avoid using harsh chemicals, cleaning solvents, or strong detergents.

3. General Handling

- Protect the phone from drops and impacts.
- Keep the phone dry and away from moisture.
- Do not disassemble the phone yourself.

TROUBLESHOOTING

1. Voicemail Setup Issues

If you encounter difficulties setting up voicemail, particularly with speed dial key #1, it may be pre-programmed or require specific carrier instructions.

- Contact your service provider (e.g., AT&T) for the correct voicemail number and setup procedure.
- As a workaround, you can save your voicemail access number as a contact and dial it manually.

2. Phone Not Powering On

- Ensure the battery is correctly installed and fully charged.
- Try connecting the phone to the charger and attempting to power on.

3. No Network Service

- Check that your SIM card is properly inserted.
- Verify that you are within your service provider's coverage area.
- Restart the phone.
- Note: This phone uses 3G cellular technology. Some carriers, like AT&T, have phased out 3G network support, which may affect service availability.

SPECIFICATIONS

Feature	Detail
Model Name	B470
Brand	LG
Product Dimensions	3.86 x 0.73 x 2 inches
Item Weight	10.6 ounces
Display Resolution	176 x 220
Screen Size	2.2 Inches
Camera Features	1.3 MP
Wireless Communication	Bluetooth
Cellular Technology	3G (UMTS)
SIM Card Slot Count	Single SIM
Battery Type	1 Lithium Polymer (included)
Audio Jack	No headphone jack
Color	Black
What's in the box	Phone, Charger

WARRANTY AND SUPPORT

For detailed warranty information, safety guidelines, and terms of service, please refer to the documentation included with your phone, such as the GoPhone Quick Start Guide and User Guide.

For technical support or service-related inquiries, contact your wireless carrier (e.g., AT&T) or visit the official LG support website.

Important Notice: This device contains a Lithium Polymer battery. Proper disposal is required. Do not dispose of batteries in household waste.

Map estimates outdoor coverage. Actual coverage may differ. Coverage subject to change at any time without notice. Coverage & service not avail. everywhere. For most current coverage info, check att.com/maps/wireless-coverage.

Sin contrato anual • Sin verificación de crédito
Para obtener información adicional, visita att.com/gophone-espanol

Package contents:
LG B470, lithium ion battery, standard charger, Phone & Feature Guide, pre-installed GoPhone SIM card, GoPhone Quick Start Guide, User Guide, GoPhone Plan Terms & Terms of Service, Safety & Warranty Information

GoPhone: By activating or using GoPhone service, you agree to be bound by Terms of Service and Plan Terms available at att.com/gophone. Phone restricted to GoPhone service during first six months after activation and cannot be used with any other carrier's service. Commercial resale prohibited except by AT&T's authorized agents or retailers. You must add money to account within 26 days of activation, or account will be cancelled. A rate plan designed for one type of device may not be used with another type of device by tethering devices together, by SIM card transfer, or any other means. Violations could result in termination of service. **General: Monthly Plans:** Monthly plans are good for 30 days and expire at 11:59 p.m. C.S.T. on the 30th day. **Voice:** Minutes intended for domestic use only (except on \$60 plan). Calls to special and premium services may be blocked. Service cannot be resold or used for fraudulent purposes. Usage and other restrictions apply. **Data: Basic and messaging phones are capable of up to 3G speeds. Some monthly plans include high-speed data allowance of up to 3G speeds. After allowance is used, data speeds are slowed to max of 128 Kbps for rest of 30-day term.** Actual speeds vary by device capability and location. **Packages:** Good for 30 days from the day you purchase. You must have an active plan in order to purchase or renew a package. Packages may only be added to certain monthly plans. When you add a data package to a monthly plan that includes data allotment, the use of data will be counted first against your data package. If a monthly plan includes a data allotment, the unused portion of the data allotment in your plan will remain avail. for use until the last day of your plan term, provided you deplete your data package. Availability of services, time period during which services are available, allotment of services and eligible devices vary by plan and packages. **Text:** Unlimited text within the U.S., and from the U.S. to over 100 countries, includes text, picture and video messages. For a full list of countries available for text messaging, go to att.com/gophoneinttext. Geographic, usage, and other terms, conditions and restrictions apply. Taxes and other charges may apply. For more information, go to att.com/gophone. Service provided by AT&T Mobility.

Coverage & svc. not avail. everywhere. Learn more at att.com/network. Contains Lithium ion battery – recycle or dispose of properly. AT&T Eco-Rating 2.0 only applies to phone. For limited factors evaluated visit att.com/EcoSpace. Screen images are simulated. All features, functionality and other product specifications are subject to change without notice or obligation. LG and the LG logo are registered trademarks of LG Electronics, Inc. © 2016 AT&T Intellectual Property. All rights reserved. AT&T and the AT&T logo are registered trademarks of AT&T Intellectual Property. All other marks contained herein are the property of their respective owners. Enclosed items imported – see each item for country of origin. Products meet current FCC Radio Frequency Emission Exposure Guidelines. FCC ID number: ZNFB460. More information on the phone's SAR can be found at the following FCC website: <http://www.fcc.gov/oet/ea>. Rated for Hearing Aids M3/T4. Printed in the USA.

WARNING: This product contains chemicals known to the State of California to cause cancer and birth defects or reproductive harm.

 **it can wait**
Eyes on the road,
not on your phone

 **AT&T 3-Star
Eco-Rating 2.0**
att.com/ecospace

Anti-Theft

Must be scanned
at register for use
on AT&T network.


6 52810 51982 3

MAY64927838 (1.1)
GOP PK T 0816 7584 E

Figure 2: Back of LG B470 packaging. This image displays important legal disclaimers, terms of service for AT&T GoPhone, network coverage information, and warnings regarding battery disposal and anti-theft measures.

