

- [Manuals.plus](#) /
- › [LB](#) /
 - › LB ATM Savings Bank (Model CQG) Instruction Manual

LB CQG

LB ATM Savings Bank (Model CQG) Instruction Manual

Your Personal Cash Point for Learning and Saving

PRODUCT OVERVIEW

The LB ATM Savings Bank (Model CQG) is designed to provide an interactive and educational way to manage personal savings. It simulates a real ATM experience, allowing users to deposit coins and bills, track their balance, set savings targets, and withdraw funds using a personal debit card and PIN.



Image: Front view of the LB ATM Savings Bank, showing a hand inserting a bill and coins collected in the bottom tray.

2024 Upgraded ATM Savings Bank for Real Money for Kids Adults

Realistic debit card+4-digit PIN code+LCD display

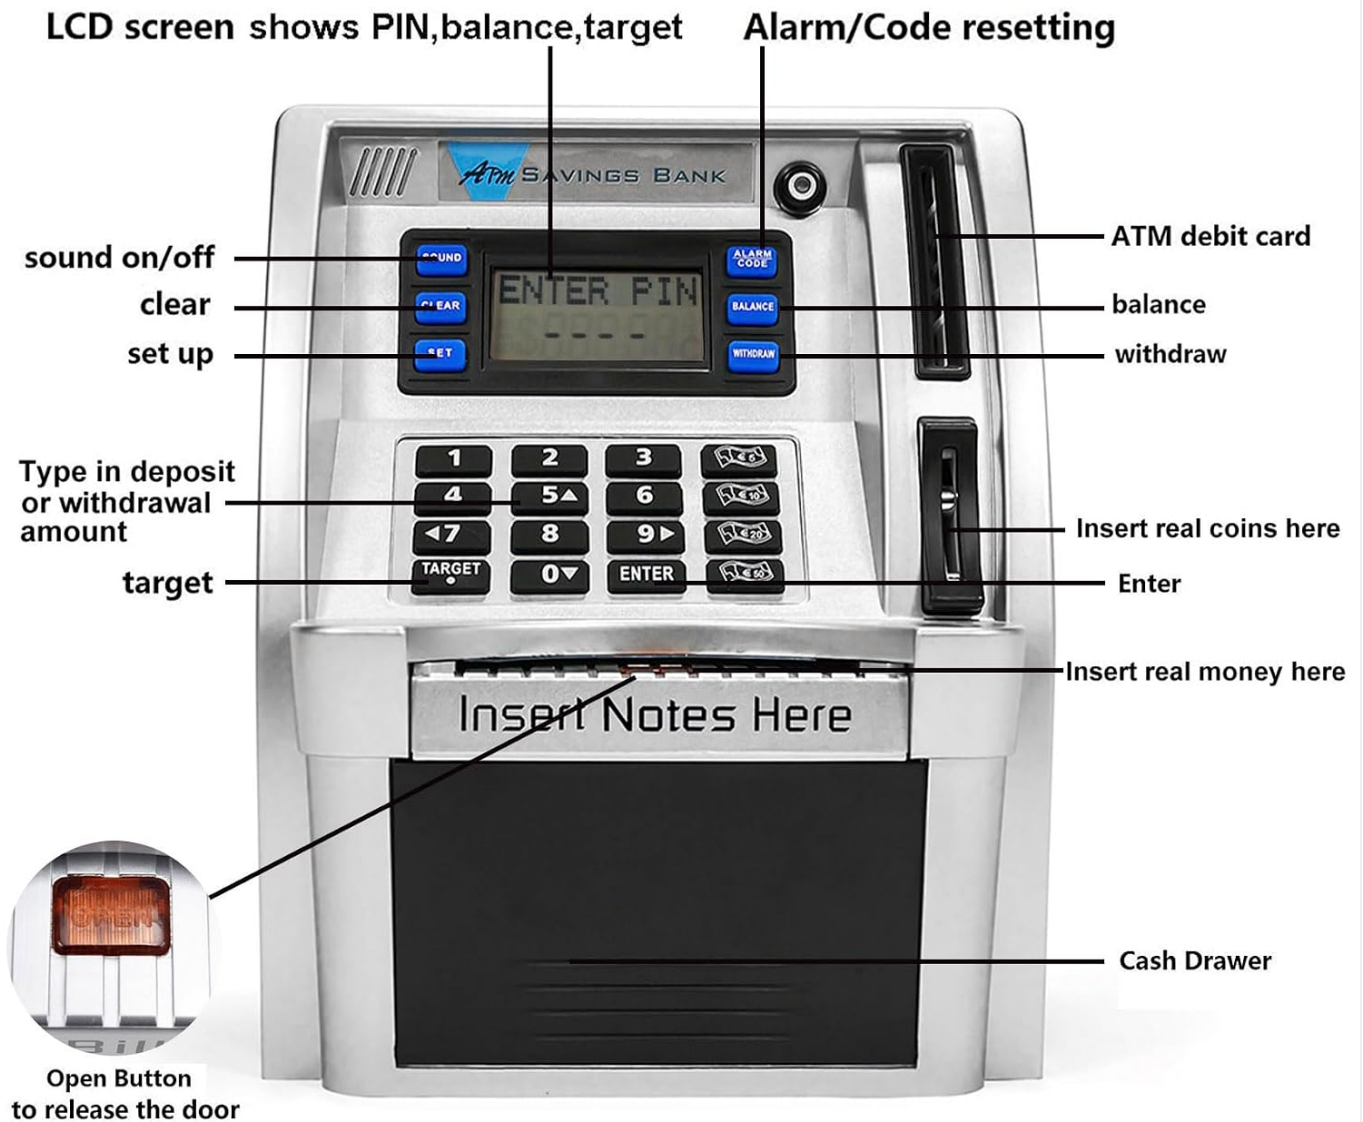


Image: Detailed diagram of the ATM Savings Bank, highlighting key components such as the LCD screen, keypad, card slot, coin slot, bill feeder, and cash drawer.

SETUP

1. Battery Installation:

Locate the battery compartment on the bottom of the ATM Savings Bank. Use a screwdriver to open the compartment. Insert 3 AA batteries (not included), ensuring correct polarity. Close the compartment and secure it with the screw.



Image: The underside of the ATM Savings Bank, showing the battery compartment and the reset button.

2. Initial Power On and Time/Date Setting:

Upon first power-on or after a battery change, the device may prompt for time and date settings. Hold the **SET** button for 2 seconds. Use the number keys to enter the current year, month, day, and time. Press **ENTER** after each input to confirm.

Your browser does not support the video tag.

Video: Demonstrates battery installation and setting the time and date on the ATM Savings Bank.

3. Default PIN:

The default PIN is 0000. You will need this to access the bank initially.

OPERATING INSTRUCTIONS

1. Accessing Your Account:

Insert your personal debit card into the card slot. The LCD screen will display "ENTER PIN". Enter your 4-digit PIN using the keypad. The bank will light up and provide a voice prompt upon successful login.



Image: Close-up of the ATM Savings Bank's LCD screen displaying "ENTER PIN" for account access.

2. Depositing Coins:

Insert coins into the designated coin slot. The ATM will automatically recognize and display the value of the deposited coin, adding it to your balance.

3. Depositing Paper Bills:

Press the **NOTE** key (or the corresponding denomination key, e.g., \$1, \$5, \$10, \$20). The bill feeder will activate. Place your paper bill into the feeder, and it will automatically be drawn into the machine and added to your balance. Note: The machine does not automatically read the denomination of paper money; you must manually input the value using the keypad before inserting the bill.

Your browser does not support the video tag.

Video: Demonstrates the process of depositing both coins and paper bills into the ATM Savings Bank.

4. Checking Your Balance:

After logging in, press the **BALANCE** key. The LCD display will show your current account balance.



Image: The ATM Savings Bank's LCD screen displaying a current balance of \$12.01.

5. Setting a Savings Target:

Press the **TARGET** key. You can then use the keypad to enter a specific savings goal amount. The LCD display will show the amount still needed to reach your target, helping to track progress.



Image: The ATM Savings Bank's LCD screen displaying a savings target of \$999.00.

6. Withdrawing Money:

Press the **WITHDRAW** key. The **OPEN** button near the bill feeder will light up. Press the **OPEN** button to release the cash drawer. Take out the desired amount of money. The screen will show "ENTER AMOUNT". Use the keypad to

enter the amount you have withdrawn and press **ENTER** to confirm. This amount will be subtracted from your balance.



Image: The ATM Savings Bank with the cash drawer open, indicating money can be withdrawn.

MAINTENANCE

- **Changing Your PIN:**

After logging in, press the **CODE** key. The screen will display "NEW CODE". Enter your new 4-digit PIN using the keypad and press **ENTER** to confirm. Your PIN has now been updated.

- **General Cleaning:**

Wipe the exterior of the ATM Savings Bank with a soft, dry cloth. Avoid using abrasive cleaners or solvents.

TROUBLESHOOTING

- **Forgotten PIN:**

If you forget your password, simply press the **RESET** button located at the back of the ATM box (often accessible via a small hole, requiring a pen tip or similar object) or remove and reinsert the batteries. The PIN will revert to the default "0000".



Image: Rear view of the ATM Savings Bank, indicating the location of the reset button.

- **Bills Not Feeding Correctly:**

Ensure bills are flat and unfolded before inserting them into the feeder. Avoid inserting multiple bills at once. If the issue persists, gently clean the bill feeder mechanism with a soft, dry cloth to remove any dust or debris.

- **Coins Not Recognized or Machine Shuts Off After Coin Deposit:**

Ensure coins are inserted one at a time and are not bent or damaged. If the machine temporarily resets or requires PIN re-entry after a coin deposit, this may be part of its design for certain models to re-verify the account. If this behavior is unexpected and persistent, ensure batteries are fresh and properly installed.

SPECIFICATIONS

Brand	LB
Model Number	CQG
ASIN	B01NAG6AE9
Package Dimensions	9.8 x 9.06 x 6.97 inches
Item Weight	2.18 pounds
Recommended Age	3 years and up
Power Source	3 x AA batteries (not included)

SAFETY INFORMATION

CHOKING HAZARD -- Small parts. Not for children under 3 years.

WARRANTY AND SUPPORT

For any questions, concerns, or support regarding your LB ATM Savings Bank, please refer to the seller's contact information on your purchase platform. Specific warranty details may vary by retailer and region.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question