

Manuals.plus /

- › BOSCH /
- › Bosch DIY Cordless Handheld Vacuum Cleaner Easyvac 12 User Manual

**BOSCH 06033D0001**

# Bosch DIY Cordless Handheld Vacuum Cleaner Easyvac 12

Model: 06033D0001

## INTRODUCTION

This user manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your Bosch DIY Cordless Handheld Vacuum Cleaner Easyvac 12. Please read this manual thoroughly before first use and keep it for future reference.



Image: The Bosch Easyvac 12 handheld vacuum cleaner, showing its compact design and green and black color scheme.

## SAFETY INFORMATION

**WARNING: Read all safety warnings and all instructions. Failure to follow the warnings and instructions may result in electric shock, fire, and/or serious injury.**

- Do not vacuum flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not vacuum anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use without the dust bag and/or filters in place.
- Do not allow children to operate the vacuum cleaner.
- Use only with specified battery pack and charger.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.

## PACKAGE CONTENTS

---

Verify that all items listed below are included in your package:

- Bosch Easyvac 12 Cordless Handheld Vacuum Cleaner
- Battery (1 Lithium Ion battery included)
- Charger
- Brush Nozzle
- Floor Nozzle
- Crevice Nozzle
- Nozzle Holder
- 2 Extension Tubes
- Filter Unit (Flat Fold Filter)

## PRODUCT OVERVIEW

---

Familiarize yourself with the components of your Easyvac 12:

1. Dust Container
2. Filter Unit
3. Power Switch
4. Battery Indicator LEDs
5. Battery Release Button
6. Handle
7. Suction Opening



## 2. Attaching Accessories

- Select the appropriate nozzle (brush, floor, or crevice) for your cleaning task.
- For extended reach, connect one or both extension tubes to the suction opening before attaching the desired nozzle.
- Ensure all attachments are securely fitted to prevent loss of suction.



Image: The Bosch Easyvac 12 mounted on a wall bracket, demonstrating a convenient storage solution for the vacuum and its accessories.

## OPERATING INSTRUCTIONS

### 1. Powering On/Off

- To turn on the vacuum, press the power switch.
- To turn off, press the power switch again.

### 2. General Cleaning

- For general floor cleaning, attach the floor nozzle and extension tubes.
- For tight spaces, corners, or car interiors, use the crevice nozzle.
- The brush nozzle is suitable for upholstery and delicate surfaces.



Image: A man using the Bosch Easyvac 12 with an extension tube to clean sawdust from the floor in a workshop, highlighting its use for DIY cleanups.



Image: A woman kneeling on a red carpet, using the Bosch Easyvac 12 to clean up spilled pet food, demonstrating its effectiveness for quick household messes.



Image: A man using the Bosch Easyvac 12 with a flexible hose attachment to clean crumbs from a car seat, illustrating its utility for vehicle cleaning.

### 3. Battery Status

The 3 LEDs on the vacuum indicate the remaining battery charge. Recharge the battery when the last LED starts blinking or turns off.

## MAINTENANCE

### 1. Emptying the Dust Container

- Press the dust container release button and detach the dust container from the main unit.
- Carefully empty the contents into a waste bin.
- Reattach the dust container, ensuring it clicks securely into place.

### 2. Cleaning the Filter

- The flat fold filter should be cleaned regularly to maintain suction performance.
- Remove the filter unit from the dust container.
- Tap the filter gently over a waste bin to dislodge dust. For a more thorough clean, you may rinse the filter under running water.

- Allow the filter to air dry completely before reinserting it into the vacuum. Do not use the vacuum with a wet filter.

### 3. General Cleaning of the Unit

- Wipe the exterior of the vacuum with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- Ensure no moisture enters the electrical components.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Vacuum does not turn on.	Battery is not charged or not inserted correctly.	Charge the battery. Ensure the battery is fully inserted and clicks into place.
Low suction power.	Dust container is full; Filter is clogged; Suction opening or nozzle is blocked.	Empty the dust container. Clean or replace the filter. Check and clear any blockages in the suction opening or nozzle.
Battery indicator LEDs not lighting up.	Battery is completely discharged or faulty.	Place the battery on the charger. If still no indication, contact customer support.

## SPECIFICATIONS

- **Model:** 06033D0001
- **Brand:** BOSCH
- **Power:** 12 Volts (Battery)
- **Capacity:** 0.38 Liters
- **Runtime:** Approximately 17 minutes
- **Filter Type:** Flat Fold Filter
- **Noise Level:** 79 dB
- **Item Weight:** 3.89 pounds
- **Product Dimensions:** 16.14 x 3.15 x 4.92 inches

## WARRANTY AND SUPPORT

Your Bosch Easyvac 12 is covered by a manufacturer's warranty. Please refer to the warranty card included in

your original packaging for specific terms and conditions. For technical support, spare parts, or warranty claims, please contact Bosch customer service through their official website or the contact information provided in your product documentation.

You may also visit the official Bosch store on Amazon for more information [Bosch Store](#)