

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Hyperkin](#) /

› [Hyperkin Knight Premium Controller User Manual for PS3, PC, and Mac](#)

Hyperkin M07213-WH

Hyperkin Knight Premium Controller User Manual

Model: M07213-WH

INTRODUCTION

This manual provides detailed instructions for the setup, operation, and maintenance of your Hyperkin Knight Premium Controller. Designed for use with PlayStation 3 (PS3), PC, and Mac systems, this controller offers a versatile gaming experience with its ergonomic design and responsive controls. Please read this manual thoroughly before using the product to ensure optimal performance and longevity.

PRODUCT FEATURES

- Dual Analog Joysticks:** Two wide-spectrum analog joysticks for precise control.
- Pressure-Sensitive D-Pad:** An eight-way directional pad with pressure sensitivity.
- Pressure-Sensitive Buttons:** Four shoulder buttons and four face buttons with pressure sensitivity for nuanced input.
- Force Feedback:** Integrated force feedback for immersive gaming experiences.
- Home Button:** Dedicated button for system menu access.
- Long Cable:** A 6-foot (1.8 meter) cable for flexible positioning.
- Multi-Platform Compatibility:** Compatible with all PS3 models, as well as PC and Mac via USB.

PACKAGE CONTENTS

- Hyperkin Knight Premium Controller (White)
- Integrated USB Cable (6 ft.)

SETUP INSTRUCTIONS

Connecting to PlayStation 3 (PS3)

- Ensure your PS3 console is powered off or in standby mode.
- Locate an available USB port on your PS3 console.

3. Plug the USB connector of the Hyperkin Knight Controller into the USB port on your PS3.
4. Power on your PS3 console. The controller should be automatically recognized and assigned a player number.
5. If the controller does not respond, try a different USB port or restart the console.

Connecting to PC/Mac

1. Locate an available USB port on your PC or Mac computer.
2. Plug the USB connector of the Hyperkin Knight Controller into the USB port.
3. Your operating system (Windows, macOS) should automatically detect and install the necessary drivers. This process may take a few moments.
4. Once installed, the controller will be ready for use with compatible games and applications. You may need to configure controller settings within individual games or system preferences.
5. **Note:** Functionality may vary depending on the operating system and specific game titles.

OPERATING INSTRUCTIONS

The Hyperkin Knight Premium Controller features a standard layout for intuitive gameplay.

Controller Layout



Image: Top view of the Hyperkin Knight Premium Controller, showing the D-pad, analog sticks, face buttons, and central buttons.

- **D-Pad (Directional Pad):** Located on the left, used for directional input.
- **Left Analog Stick:** Below the D-Pad, for precise movement and camera control.
- **Right Analog Stick:** On the right side, typically for camera control or aiming.
- **Face Buttons (Triangle, Circle, Cross, Square):** On the right, used for actions within games.
- **Shoulder Buttons (L1, L2, R1, R2):** Located on the top edge of the controller, used for various in-game functions.
- **SELECT Button:** Typically used for menu access or specific game functions.
- **START Button:** Typically used for pausing games or confirming selections.
- **HOME Button:** Central button to access the PS3 XMB (CrossMediaBar) or system menus on PC/Mac.

Force Feedback

The controller features force feedback (rumble) functionality, which provides tactile sensations during gameplay, enhancing immersion. This feature is automatically enabled when supported by the game and system. If you wish to disable it, check your game's or system's controller settings.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to wipe the controller. For stubborn dirt, slightly dampen the cloth with water. Avoid using harsh chemicals or abrasive cleaners.
- **Storage:** Store the controller in a cool, dry place away from direct sunlight and extreme temperatures. Avoid wrapping the cable too tightly to prevent damage.
- **Cable Care:** Do not pull the controller by its cable. Always grasp the USB connector when plugging or unplugging.

TROUBLESHOOTING

Controller Not Responding

- **Check Connection:** Ensure the USB cable is securely plugged into both the controller and the console/computer.
- **Try Different USB Port:** Connect the controller to another USB port on your system.
- **Restart System:** Power cycle your PS3, PC, or Mac.
- **Driver Check (PC/Mac):** On PC, check Device Manager to see if the controller is recognized and if there are any driver issues. On Mac, check System Information > USB.

Incorrect Button Mapping or Limited Functionality

- **Game Settings:** Many games allow for custom controller mapping. Check the in-game settings for controller configuration.
- **System Settings (PC/Mac):** For PC, some games or emulators may require specific controller configurations or third-party software. For Mac, check System Preferences > Game Controllers (if available) or specific application settings.
- **PS3 Compatibility:** While compatible with all PS3 models, some older games or specific PS3 system software versions might have unique controller handling. Ensure your PS3 system software is up to date.

Force Feedback Not Working

- **Game Support:** Verify that the game you are playing supports force feedback.
- **In-Game Settings:** Check the game's options menu to ensure force feedback (rumble) is enabled.
- **System Settings:** On PC, ensure rumble is enabled in your controller settings.

SPECIFICATIONS

Model Number	M07213-WH
Compatibility	PlayStation 3, PC, Mac (via USB)
Cable Length	6 feet (approx. 1.8 meters)
Input Type	Pressure-sensitive buttons and D-pad, dual analog joysticks
Feedback	Force Feedback (Rumble)
Dimensions	2.99 x 7.99 x 7.01 inches (approx. 7.6 x 20.3 x 17.8 cm)

Weight	12.5 ounces (approx. 354 grams)
Manufacturer	Hyperkin Inc

WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the official Hyperkin website or contact their customer service directly. Keep your purchase receipt as proof of purchase for any warranty claims.

Manufacturer: Hyperkin Inc

Website: www.hyperkin.com (Please visit the official website for the most current support information.)

PRODUCT OVERVIEW IMAGES



Image: The Hyperkin Knight Premium Controller displayed alongside its retail packaging, highlighting the product's design and branding.



Image: A close-up view of the Hyperkin Knight Premium Controller's retail box, showcasing key features and design elements.



Image: An angled view of the Hyperkin Knight Premium Controller, emphasizing its ergonomic shape and button placement.