

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

- › [HOCO](#) /
- › [HOCO E10 Touchable Business Wireless Earphone User Manual](#)

HOCO E10

HOCO E10 Touchable Business Wireless Earphone

Model: E10

INTRODUCTION

The HOCO E10 Touchable Business Wireless Earphone is designed for comfortable, long-term wear, specifically for the right ear. Its in-ear design ensures a secure fit, while the intuitive touch controls provide ease of use for managing calls and music. This earphone offers excellent sound quality with noise correction and the convenience of connecting to two devices simultaneously.



Image: Front view of the HOCO E10 wireless earphone in gray, showcasing its ergonomic design.

SETUP

1. Charging the Earphone

Before first use, fully charge the earphone. Connect the charging cable to the earphone's charging port and a compatible USB power source. The charging time is approximately 1.5 to 2 hours.



Image: The HOCO E10 earphone connected to a charging cable, illustrating the charging process.

2. Powering On/Off

- **To Power On:** Press and hold the power button until the blue light flashes three times.
- **To Power Off:** Press and hold the power button until the red light flashes three times.

3. Bluetooth Pairing

The HOCO E10 earphone uses Bluetooth 4.1 for wireless connectivity, offering an effective range of up to 10 meters in barrier-free space.

1. Ensure the earphone is powered off.
2. Press and hold the power button until the indicator light flashes blue and red alternately, indicating pairing mode.
3. On your mobile device, enable Bluetooth and search for available devices.
4. Select "HOCO E10" from the list of found devices to connect.
5. Once connected, the indicator light will stop flashing.

The earphone supports simultaneous connection to two Bluetooth devices. After connecting the first device, disable Bluetooth on the first device, put the earphone back into pairing mode, and connect to the second device. Then, re-enable Bluetooth on the first device, and the earphone should connect to both.



Image: Illustration showing the HOCO E10 earphone connected to two smartphones simultaneously, demonstrating its multi-device pairing capability.

OPERATING INSTRUCTIONS

Wearing the Earphone

The HOCO E10 is designed as an in-ear earphone to be worn on the right ear. Its streamlined ear-hook design ensures a comfortable and stable fit for extended periods.



Image: A person wearing the HOCO E10 earphone in a business setting, demonstrating its discreet and comfortable fit.

Touch Controls and Function Key

The HOCO E10 features intuitive touch controls and a multi-function key for easy operation.



Image: Detailed diagram illustrating the touch control area and function key on the HOCO E10 earphone, with labels for various operations.

- **Volume Control:**

- Increase Volume: Press the "+" button.
- Decrease Volume: Press the "-" button.

- **Music Playback:**

- Next Song: Hold the "+" key for 2 seconds.
- Previous Song: Hold the "-" key for 2 seconds.
- Play/Pause: Touch the function key during music playback.

- **Call Management (Function Key):**

- Answer a Call: Touch the function key with your finger or say "YES" (if voice answer is enabled on your device).
- Hang Up a Call: Touch the function key with your finger.
- Disconnect Call: Touch the button to disconnect the call.

MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your HOCO E10 earphone.

- **Cleaning:** Use a soft, dry cloth to wipe the earphone. Do not use abrasive cleaners or solvents.
- **Storage:** Store the earphone in a cool, dry place away from direct sunlight and extreme temperatures.
- **Water Exposure:** Avoid exposing the earphone to water or excessive moisture. It is not waterproof.
- **Charging:** Always use the provided charging cable or a certified equivalent. Avoid overcharging.

TROUBLESHOOTING

If you encounter issues with your HOCO E10 earphone, refer to the following common solutions:

Problem	Possible Cause	Solution
Earphone does not power on.	Low battery.	Charge the earphone fully.
Cannot pair with device.	Earphone not in pairing mode; Bluetooth off on device; too far from device.	Ensure earphone is in pairing mode (flashing blue/red); enable Bluetooth on device; move earphone closer to device (within 10m).
No sound or poor sound quality.	Volume too low; earphone not properly connected; interference.	Increase volume on earphone and device; re-pair the earphone; move away from sources of interference.
Call quality issues.	Weak signal; microphone obstruction.	Move to an area with better signal; ensure microphone is not covered.

SPECIFICATIONS

Feature	Detail
Model Name	HOCO E10

Feature	Detail
Connectivity Technology	Wireless (Bluetooth 4.1)
Ear Placement	In Ear (Right Ear)
Control Method	Touch
Noise Control	Active Noise Cancellation (CVC6.0 noise reduction for HD calls)
Material	Plastic
Item Weight	60 g
Talk Time	Approximately 4 hours
Charging Time	Approximately 1.5-2 hours
Effective Distance	10m (barrier-free space)
Simultaneous Connection	2 devices
Included Components	Ear Cushions

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the official HOCO website or contact your retailer. Keep your purchase receipt for any warranty claims.

Manufacturer: Hoco

© 2023 HOCO. All rights reserved.

Related Documents - E10

	<p>HOCO E36 Wireless Bluetooth Headset: User Manual and Features</p> <p>Comprehensive guide for the HOCO E36 wireless Bluetooth headset, covering product features, specifications, warnings, and step-by-step usage instructions. Includes Bluetooth V4.2, hands-free operation, and battery details.</p>
	<p>Hoco EW24 Wireless Headset User Manual and Specifications</p> <p>Comprehensive guide for the Hoco EW24 Wireless Headset, covering features, operation, controls, and product specifications. Includes safety warnings and warranty information.</p>

