

[Manuals.plus](#) /

› [Eveready](#) /

› EVEREADY LED Flashlight L15HS User Manual

Eveready L15HS

EVEREADY LED Flashlight User Manual

Model: L15HS | Brand: Eveready

INTRODUCTION

The EVEREADY LED Flashlight (Model L15HS) is a durable and easy-to-use general-purpose flashlight designed for various applications, including camping, emergencies, survival kits, and everyday use. It features a bright-white LED that offers extended battery life and illuminates a wide area. This manual provides essential information for the proper setup, operation, and maintenance of your flashlight.



Figure 1: EVEREADY LED Flashlight (Model L15HS)

SETUP

Battery Installation

The EVEREADY LED Flashlight requires one D-size battery (included). Follow these steps to install the battery:

1. Unscrew the head of the flashlight counter-clockwise to open the battery compartment.
2. Insert one D-size battery into the flashlight body, ensuring the positive (+) end faces towards the flashlight head.
3. Screw the flashlight head back on clockwise until it is securely tightened.



Figure 2: Battery compartment with D-size battery

Video: This video demonstrates the process of installing the D-size battery into the EVEREADY LED Flashlight and shows its operation.

OPERATING INSTRUCTIONS

Turning On/Off

The flashlight features a simple push-button switch for easy operation:

- To turn the flashlight ON, press the black push-button switch located on the side of the flashlight body.
- To turn the flashlight OFF, press the same push-button switch again.

Light Features

- **Bright-White LED:** Provides a clear and powerful beam of light.
- **Wide Diameter Illumination:** The LED's wide diameter ensures a large area is illuminated, making it suitable for various tasks.
- **25 Lumens Brightness:** Offers sufficient light output for general use.

Video: This video provides a customer review demonstrating the EVEREADY LED Flashlight's light output and ease of use.

Video: This video showcases the brightness and basic functionality of the EVEREADY LED Flashlight.

MAINTENANCE

Cleaning

- Wipe the exterior of the flashlight with a soft, damp cloth.
- Do not use abrasive cleaners or solvents, as they may damage the plastic casing.
- Ensure the lens is clean for optimal light output.

Battery Care

- Replace the D-size battery when the light becomes dim or stops working. Refer to the 'Battery Installation' section for instructions.

- Remove batteries from the flashlight if it will not be used for an extended period to prevent potential leakage and damage.
- Dispose of used batteries according to local regulations.

TROUBLESHOOTING

- **Flashlight does not turn on:**
 - Check if the battery is installed correctly with the positive (+) end facing the head.
 - Replace the battery with a fresh D-size battery.
 - Ensure the flashlight head is screwed on tightly.
- **Light is dim:**
 - The battery may be low. Replace it with a fresh D-size battery.
 - Clean the flashlight lens if it appears dirty.

SPECIFICATIONS

Feature	Specification
Model Name	LED Economy Flashlight
Brand	Eveready
Light Source Type	LED
Brightness	25 Lumens
Power Source	Battery Powered
Battery Type	1 D-size Alkaline battery
Material	Plastic (Polypropylene casing)
Special Feature	Durable, Water Resistant
Product Dimensions (LxWxH)	9.5"D x 0.8"W x 2.5"H
Item Weight	0.15 Pounds

SAFETY INFORMATION

- Do not look directly into the LED light when it is on, as it may cause temporary vision impairment.
- Keep out of reach of small children to prevent choking hazards from small parts or battery ingestion.
- Do not mix old and new batteries, or different types of batteries.
- Do not expose the flashlight to extreme temperatures or open flames.

WARRANTY AND SUPPORT

This EVEREADY LED Flashlight is provided without a specific warranty. For any product inquiries or support,

please refer to the manufacturer's official website or contact their customer service department.
For more information, visit the [Eveready Store on Amazon](#).