

[Manuals.plus](#) /

> [FlexiSnake](#) /

> FlexiSnake Drain Weasel Sink Snake Hair Clog Remover Tool Instruction Manual (Model DWPSK5A)

FlexiSnake DWPSK5A

FlexiSnake Drain Weasel Sink Snake Hair Clog Remover Tool Instruction Manual

Model: DWPSK5A

INTRODUCTION

This manual provides instructions for the safe and effective use of the FlexiSnake Drain Weasel Sink Snake Hair Clog Remover Tool. This tool is designed to remove hair clogs from various drains, including bathroom sinks, showers, and bathtubs.



ELIMINATE CLOGS IN

Bathroom Sinks

Bathroom Tubs

Bathroom Showers

Laundry Sinks

Image: A visual representation indicating the FlexiSnake Drain Weasel's applicability for clearing clogs in bathroom sinks, tubs, showers, and laundry sinks.

SAFETY INFORMATION

- **Adult Supervision:** Adult supervision is required when using this product.
- **Chemical Avoidance:** Do not use this tool in conjunction with harsh chemical drain cleaners, as this may cause dangerous reactions or damage to the tool.
- **Proper Disposal:** Dispose of used wands properly in household waste.
- **Drain Compatibility:** Ensure the drain size is compatible with the tool (0.5-5 inch pipes).

PACKAGE CONTENTS

Your FlexiSnake Drain Weasel package includes:

- 1 x Reusable Quick Connect Handle
- 5 x Disposable 18-inch Drain Weasel Wands



Image: The FlexiSnake Drain Weasel kit, displaying the reusable handle and five disposable wands.

SETUP

1. **Attach Wand to Handle:** Take one disposable Drain Weasel wand and firmly connect it to the reusable quick-connect handle. Ensure it is securely attached.
2. **Prepare Drain:** Clear any visible debris from the drain opening. For drains with grates, assess if the wand can pass through. If not, carefully remove the grate if possible.



Image: The FlexiSnake Drain Weasel kit, showing the handle and wands in their retail packaging.

OPERATING INSTRUCTIONS

Follow these steps to effectively remove hair clogs:

1. **Insert the Wand:** Gently insert the Drain Weasel wand into the clogged drain. Push it down until you feel resistance, indicating it has reached the clog. The flexible design allows it to navigate bends in the pipe.
2. **Rotate the Handle:** Once the wand is in place, slowly rotate the handle 360 degrees. The micro-hooks on the wand will engage and lock onto hair, filth, and grime within the drain. Rotate several times to ensure maximum clog capture.

3. **Remove the Clog:** Carefully pull the wand out of the drain. The captured clog will be visible on the wand.



Image: A visual guide demonstrating the three steps: 1. Insert the wand into the drain, 2. Spin the handle to engage the clog, 3. Remove the wand with the captured clog.

From the makers of
FLEXISNAKE

**DRAIN
WEASEL**



**SPINS
360°**

Image: An illustration of the Drain Weasel handle being rotated, with an arrow indicating 360-degree spin, and a cutaway view of the wand inside a pipe collecting hair.

MAINTENANCE

The Drain Weasel wands are designed for single use to ensure hygienic and effective clog removal. After use:

- **Dispose of Wand:** Detach the used wand from the handle and discard it in the trash.
- **Clean Handle:** The reusable handle can be wiped clean with a damp cloth if necessary.
- **Storage:** Store the handle and unused wands in a dry, safe place.

Disposable wands for easy cleanup



Works in hard to reach spots

Quick connect handle



Reusable handle

Easy to use

Image: A person holding a used Drain Weasel wand over a trash can, illustrating the disposable nature of the wands.

TROUBLESHOOTING

Problem	Solution
Wand does not reach the clog.	Ensure the wand is fully extended and gently maneuver it past any initial bends. The 18-inch length is designed for most common household drains.
Clog is not removed after several attempts.	The clog may be too dense or located further down the pipe. Try rotating the wand more vigorously or using a fresh wand. If the issue persists, professional assistance may be required.
Wand gets stuck in the drain.	Gently pull and rotate the wand to free it. Avoid excessive force. If it remains stuck, it may be entangled with a very large clog.

SPECIFICATIONS

Feature	Detail
Brand	FlexiSnake

Feature	Detail
Model Number	DWPSK5A
Item Weight	3.2 ounces
Product Dimensions	23 x 3 x 1 inches (packaging)
Wand Length	18 inches
Wand Diameter	Approximately 1/8 inch
Material	Plastic
Included Components	1 Handle, 5 Refill Wands
Usage	Commercial/Residential
Special Features	Drain Clog Remover Kit, 360-degree rotation, Micro-hooks



Image: A diagram illustrating the key dimensions of the Drain Weasel wand and the components included in the 5-pack kit.

WARRANTY AND SUPPORT

For product support or inquiries, please refer to the FlexiSnake official website or contact their customer service. Specific

warranty details may vary and are typically provided with the product packaging or on the manufacturer's website.

Online Resources: [Visit the FlexiSnake Store on Amazon](#)