

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [BENINCA](#) /

› [BENINCA TO.GO 2WV Remote Control Transmitters User Manual](#)

BENINCA TO.GO 2WV

BENINCA TO.GO 2WV Remote Control Transmitters User Manual

MODEL: TO.GO 2WV (OR-481)

1. Introduction

This manual provides essential instructions for the setup, operation, and maintenance of your BENINCA TO.GO 2WV remote control transmitters. These devices are designed to operate garage doors or gate openers using a 433.92 MHz rolling code frequency, ensuring secure and reliable access. Please read this manual thoroughly before attempting to use or program the remote controls.



This image displays five BENINCA TO.GO 2WV remote control transmitters. Each remote is black with two distinct white buttons, designed for operating garage doors or gates. The image highlights the compact and ergonomic design of the keyfobs.

2. Setup and Programming

The BENINCA TO.GO 2WV remote controls utilize a rolling code technology for enhanced security. Programming typically involves pairing the remote with your BENINCA receiver unit. Specific programming

steps may vary depending on your receiver model. Always refer to the instruction manual of your gate or garage door opener for detailed programming procedures.

2.1. Battery Installation (If Required)

Your remote control comes with a pre-installed battery. If replacement is needed, carefully open the remote casing (usually by unscrewing a small screw or prying gently at a designated notch). Insert the new battery, ensuring correct polarity (+/-). Typically, these remotes use a CR2032 type battery.

2.2. General Programming Steps (Consult Receiver Manual)

- Access the Receiver:** Locate the control unit or receiver for your gate/garage door opener. This unit usually has a 'Learn' or 'Prog' button.
- Activate Learning Mode:** Press and release the 'Learn' or 'Prog' button on the receiver. An LED indicator on the receiver will typically light up or flash, indicating it is in learning mode.
- Transmit Code:** Within a few seconds (usually 5-10 seconds), press and hold the desired button on your new BENINCA TO.GO 2WV remote control for 2-3 seconds.
- Confirmation:** The receiver's LED will usually flash or change color to confirm successful programming. Release the remote button.
- Test Operation:** After programming, wait a few seconds, then test the remote control by pressing the programmed button.

Note: Some BENINCA systems allow programming a new remote from an existing, already programmed remote (master remote cloning). Refer to your specific system's documentation for this advanced feature.

3. Operation

Once programmed, operating your BENINCA TO.GO 2WV remote control is straightforward:

- Opening/Closing:** Point the remote control towards your gate or garage door opener and press the programmed button. The gate/door should activate.
- Stopping:** Pressing the button again while the gate/door is in motion will typically stop its movement.
- Range:** Ensure you are within the operational range of your receiver. Obstructions or interference can affect the range.

4. Maintenance

4.1. Battery Replacement

If the remote's LED indicator does not light up, or if the operational range significantly decreases, the battery may need replacement. Follow the battery installation steps in Section 2.1.

4.2. Cleaning

Clean the remote control with a soft, dry cloth. Avoid using abrasive cleaners or solvents, as these can damage the casing or internal components. Do not expose the remote to excessive moisture.

4.3. Storage

Store the remote control in a dry place, away from direct sunlight and extreme temperatures. Avoid placing heavy objects on the remote.

5. Troubleshooting

Problem	Possible Cause	Solution
Remote does not work.	Dead or low battery. Not programmed correctly. Out of range.	Replace battery. Re-program the remote (Section 2.2). Move closer to the receiver.
Reduced operating range.	Low battery. Interference. Obstructions.	Replace battery. Check for sources of radio interference. Ensure clear line of sight to receiver.
LED on remote does not light up.	Dead battery. Faulty remote.	Replace battery. If problem persists, the remote may be faulty and require replacement.
Gate/door opens intermittently.	Weak signal. Receiver issue.	Check remote battery. Ensure receiver antenna is clear. Consult your gate/door opener manual for receiver troubleshooting.

6. Specifications

- Brand:** BENINCA
- Model:** TO.GO 2WV
- Part Number:** OR-481
- Frequency:** 433.92 MHz
- Coding:** Rolling Code
- Buttons:** 2
- Manufacturer:** Beninca
- ASIN:** B01NBCM4AZ

7. Support and Warranty

For further assistance, technical support, or warranty inquiries, please contact the seller or BENINCA customer service. Specific warranty terms and conditions may apply and are typically provided with your purchase documentation.

Please note that this manual provides general guidance. Always refer to the specific instructions provided with your BENINCA gate or garage door opener system for precise programming and operational details.