



Manuals.plus /

› Sricam /

› Sricam SP018 Wireless Full HD 1080P IP Security Camera User Manual

## Sricam SP018

# Sricam SP018 Wireless Full HD 1080P IP Security Camera User Manual

Model: SP018

## 1. INTRODUCTION

---

This manual provides comprehensive instructions for the setup, operation, and maintenance of your Sricam SP018 Wireless Full HD 1080P IP Security Camera. Please read this manual thoroughly before using the device to ensure proper functionality and safety. Keep this manual for future reference.

## 2. PRODUCT OVERVIEW

---

### 2.1 Package Contents

Verify that all items are present in the package:

- Sricam SP018 IP Camera
- Power Adapter
- User Manual
- Power Cable
- Mounting Screws

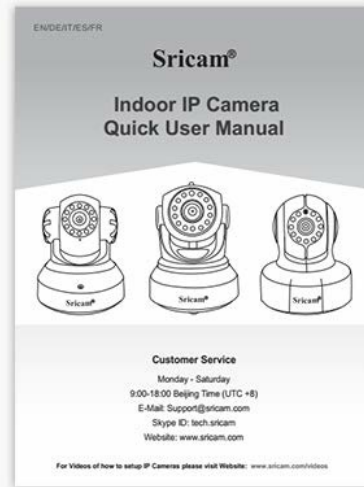


Image: Sricam SP018 IP Camera, power adapter, power cable, mounting screws, and user manual.

## 2.2 Camera Components



Image: Front view of the Sricam SP018 IP Camera, showing the lens and infrared LEDs.



Image: Rear view of the Sricam SP018 IP Camera, highlighting the Ethernet port, antenna, and power input.

## 2.3 Key Features

- **Full HD 1080P Resolution:** Provides clear video capture.
- **Wireless Connectivity:** Supports Wi-Fi for flexible placement.
- **Pan/Tilt Functionality:** Remotely rotate the camera horizontally and vertically.
- **Infrared Night Vision:** See in low light conditions up to 15 meters.
- **Two-Way Audio:** Built-in microphone and speaker for communication.
- **Motion Detection:** Sends alerts upon detecting movement.
- **Local Storage:** Supports Micro SD cards up to 128 GB for video recording.
- **App Control:** Manage and view the camera via a smartphone app (Android/iOS).

## 3. SETUP INSTRUCTIONS


---

### 3.1 Initial Setup and App Download


1. **Download the App:** Search for 'SRICAM' in your smartphone's app store (Android or iOS) and download the application.
2. **Register Account:** Open the SRICAM app and register a new account using your email address.
3. **Power On Camera:** Connect the camera to the power adapter and plug it into an electrical outlet. Wait for the camera to initialize.

### 3.2 Adding the Camera to the App

1. In the SRICAM app, tap the '+' icon to add a new camera.
2. Follow the on-screen prompts to connect the camera to your Wi-Fi network. This typically involves scanning a QR code on the camera or entering network details manually.
3. Once connected, assign a device name and set a password for your camera.


 **Email Alarm**

Capture photos automatically and email them to you when camera find moving object.

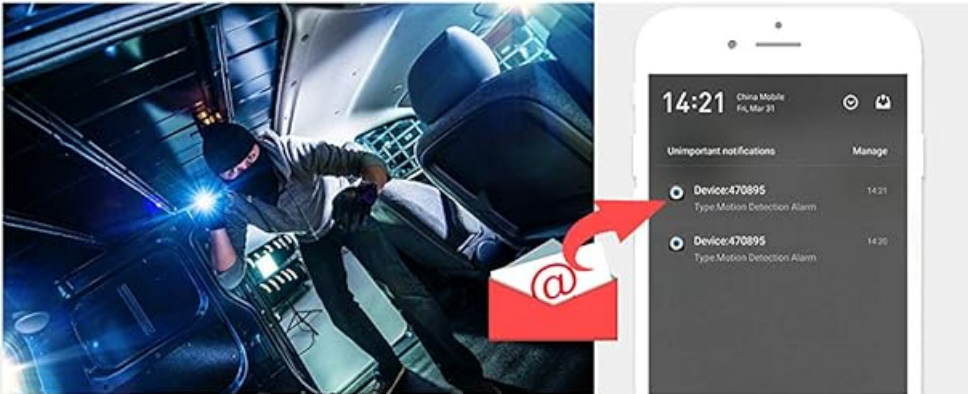

**Don't Miss a Thing**

Record and receive notifications when motion is detected.



**Store Your Footage Anywhere You Want**

A variety of storage options to fit your needs, as well as your budget.






Image: Visual representation of quick setup steps: Install equipment, download app, and live view.

### 3.3 Physical Installation

The Sricam SP018 camera is designed for indoor wall mounting. Use the provided mounting screws to secure the camera in your desired location. Ensure the camera has a clear line of sight and is within range of your Wi-Fi network.

## 4. OPERATING INSTRUCTIONS

---

### 4.1 Live View

After adding the camera, tap on its icon in the app to access the live video feed. You can select 'HD' to view the video in high definition (1080P).

### 4.2 Camera Rotation (Pan/Tilt)

To adjust the camera's viewing angle, slide your finger across the screen in the live view interface. The camera will rotate horizontally or vertically according to your input.

### 4.3 Two-Way Audio

The camera features a built-in microphone and speaker. In the live view, locate the microphone icon to speak through the camera, and the speaker icon to listen to audio from the camera's location.



## 2.0MegaPixel

1080 HD IP camera, better picture quality, further vision.



1080P(1920x1080)



720P(1280x720)



VGA(640x480)



## Two way audio

Choose Listen/Talk over smartphone APP, start to communicate with your families. Communicate at anytime anywhere.

Image: Illustrates the 1080P resolution and two-way audio capability of the Sricam SP018 camera.

### 4.4 Motion Detection

Configure motion detection settings within the app. When motion is detected, the camera can send alarm notifications to your phone and record video to the inserted Micro SD card.



## Infrared night vision function

Camera IR LED light will auto turn on when the light is insufficient or no light, to ensure the clear surveillance picture quality



## Motion-Detection Alarm

Detected motion, the camera will record in SD Card automatically. It also supports alarm like Email, Phone Push.

Image: Demonstrates the infrared night vision function and motion detection alarm capabilities.

### 4.5 Night Vision

The camera is equipped with infrared (IR) LEDs for night vision. These LEDs automatically activate in low-light conditions, providing clear surveillance footage even in darkness.

### 4.6 SD Card Recording

Insert a Micro SD card (up to 128 GB, not included) into the designated slot on the camera. The camera will record videos based on your settings (e.g., continuous recording, motion-triggered recording).



## 128G MicroSD Card Record



## Motion-Detection Alarm

Motion detection alarm supports video recording on the microSD card.  
Also supports Email Alarm and Phone Push Alarm functions

Image: Shows the camera's support for 128GB MicroSD card recording and motion detection alarm features.

## 5. MAINTENANCE

---

- **Cleaning:** Use a soft, dry cloth to clean the camera lens and body. Avoid using harsh chemicals or abrasive materials.
- **Firmware Updates:** Periodically check the SRICAM app for available firmware updates to ensure optimal performance and security.
- **Power Supply:** Use only the original power adapter provided with the camera.
- **Placement:** Ensure the camera is placed in a stable indoor environment, away from direct sunlight, extreme temperatures, and moisture.

## 6. TROUBLESHOOTING

---

- **Camera Not Connecting to Wi-Fi:** Ensure your Wi-Fi network is 2.4GHz (5GHz is not supported). Check Wi-Fi password and signal strength. Restart the camera and your router.
- **Poor Video Quality:** Ensure the camera lens is clean. Check your internet connection speed. Select 'HD' quality in

the app.

- **Motion Detection Not Working:** Verify that motion detection is enabled in the app settings. Adjust sensitivity levels if necessary. Ensure the camera has a clear view of the area.
- **Two-Way Audio Issues:** Check volume settings on your phone and in the app. Ensure there is no interference near the camera's microphone or speaker.
- **SD Card Recording Problems:** Ensure the Micro SD card is correctly inserted and formatted within the app. Check if the card has sufficient storage space.
- **App Not User-Friendly:** While the app interface may require familiarity, ensure you are using the latest version. Refer to the in-app help section or online resources for specific feature guidance.

## 7. SPECIFICATIONS

---

<b>Model</b>	SP018
<b>Resolution</b>	1080p (Full HD)
<b>Connectivity</b>	Wireless (Wi-Fi), Ethernet
<b>Night Vision Range</b>	Up to 15 meters
<b>Storage</b>	Micro SD card (up to 128 GB)
<b>Audio</b>	Two-way audio (built-in mic & speaker)
<b>Motion Detection</b>	Supported, with alerts
<b>Control Method</b>	Smartphone App (Android, iOS)
<b>Mounting Type</b>	Wall Mount
<b>Dimensions (LxWxH)</b>	15 x 10 x 5 cm
<b>Item Weight</b>	600 g

## 8. WARRANTY AND SUPPORT

---

### 8.1 Warranty Information

This Sricam SP018 camera comes with a **6-month warranty** from the date of purchase. Please retain your purchase receipt as proof of warranty.

### 8.2 Customer Support

For technical assistance or support, please refer to the contact information provided in the quick user manual included with your product. You may also visit the official Sricam website for FAQs and further support resources.