

[manuals.plus](#) /

› [Braun](#) /

› [Braun Series 3 310s Electric Shaver Instruction Manual](#)

Braun 310s

Braun Series 3 310s Electric Shaver Instruction Manual

Model: 310s

1. INTRODUCTION

Thank you for choosing the Braun Series 3 310s Electric Shaver. This manual provides essential information for the safe and effective use, maintenance, and care of your new shaver. Please read these instructions thoroughly before first use and keep them for future reference.



Image: Braun Series 3 310s Electric Shaver. This image displays the shaver's main body in blue and black, highlighting the foil head and the central power button.

2. IMPORTANT SAFETY INFORMATION

To reduce the risk of electric shock, injury, or fire, please observe the following safety precautions:

- This appliance is suitable for cleaning under running water.
- Do not use the shaver with a damaged foil or cutter block, as this may cause skin irritation.
- Keep the appliance dry when charging.
- Do not open the appliance. The integrated rechargeable battery is not replaceable.

- This appliance can be used by children aged 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 years and supervised.

3. PACKAGE CONTENTS

Your Braun Series 3 310s Electric Shaver package typically includes:

- Braun Series 3 310s Electric Shaver
- SmartPlug charger
- Protective cap
- Cleaning brush

4. SETUP AND INITIAL CHARGING

4.1 First Use

Before using your shaver for the first time, it must be charged for approximately 1 hour. A full charge provides approximately 20 minutes of cordless shaving time.

4.2 Charging the Shaver

1. Ensure the shaver is switched off.
2. Connect the SmartPlug charger to the shaver and then plug it into an electrical outlet.
3. The charge indicator light will illuminate to show that the shaver is charging.
4. A full charge takes approximately 1 hour. For a quick shave, a 5-minute quick charge provides enough power for one shave.



20min

20分持続
バッテリー
駆動時間



5分で完了
急速充電



人間工学に
基づいた
ハンドルデザイン

Image: Shaver features diagram. This diagram illustrates the shaver's 20-minute continuous use time, 5-minute quick charge capability, and ergonomic handle design.

5. OPERATING INSTRUCTIONS

5.1 Shaving Technique

For best results, hold the shaver at a right angle (90°) to your skin and shave against the direction of beard growth. Stretch your skin with your free hand to ensure a smooth surface.

5.2 Dry Shaving

For a quick and convenient shave, use the shaver on dry skin. Ensure your face is clean and dry before shaving.

5.3 Wet Shaving (Wet & Dry Function)

The Braun Series 3 310s is 100% waterproof and can be used for a refreshing wet shave with water, foam, or gel, even in the shower.



やさしい深剃り
シェービングフォームや、
お風呂剃りにも対応。

Image: Wet shaving with foam. This image shows a man using the Braun Series 3 310s electric shaver with shaving foam for a comfortable wet shave.

5.4 Key Features for an Effective Shave

- **3-Link Suspension Head:** Three independent cutting elements float up and down to adapt to the contours of your face, ensuring close skin contact.
- **Deep Catch Foil:** Features 899 different mesh patterns within a single foil to capture hairs growing in various directions from the root across the entire shaving head.
- **Comfort Inner Blade:** The 49-degree acute-angled inner blade is cut 2 microns inward at the tip, minimizing contact with the skin and allowing for a close shave in one stroke without irritation.
- **S-shaped Long Hair Trimmer:** Smoothly captures stubborn, hard-to-catch long hairs and effectively cuts them.
- **Active Tightening System:** An integrated foil and inner blade cassette eliminates gaps between the foil and inner blade, ensuring efficient and reliable cutting of captured hairs.

3連密着ブレード

肌に吸い付き、
スムーズに剃り上げる。



Image: Close-up of the 3-blade system. This image provides a detailed view of the Braun Series 3 310s shaver head, showcasing its three independent cutting elements designed for a close shave.

6. CLEANING AND MAINTENANCE

6.1 Cleaning Under Running Water

The shaver head and body are fully washable. After each shave, switch on the shaver and rinse the shaver head under hot running water until all residue has been removed. You can use liquid soap without abrasive particles.

100% 防水設計

簡単水洗い、
お風呂剃りも可能。



Image: Shaver being rinsed. This image shows a hand holding the Braun Series 3 310s electric shaver under running water, illustrating the ease of cleaning its washable design.

6.2 Deep Cleaning


For a more thorough cleaning, remove the foil and cutter cassette and tap out any trapped hairs. Use the small cleaning brush provided to remove stubborn hairs from the inner parts of the shaver head. Do not use the brush on the foil itself, as this may damage it.

6.3 Replacing the Shaver Parts

To maintain 100% shaving performance, replace the integrated foil and cutter cassette (part F/C21B) approximately every 18 months, or when the parts are worn. The replacement process is simple:

1. Press the release buttons (if applicable) or gently pull the old cassette upwards to remove it.
2. Snap the new F/C21B cassette into place until it clicks.

1年半に1回の交換で
再び100%の
剃り味へ

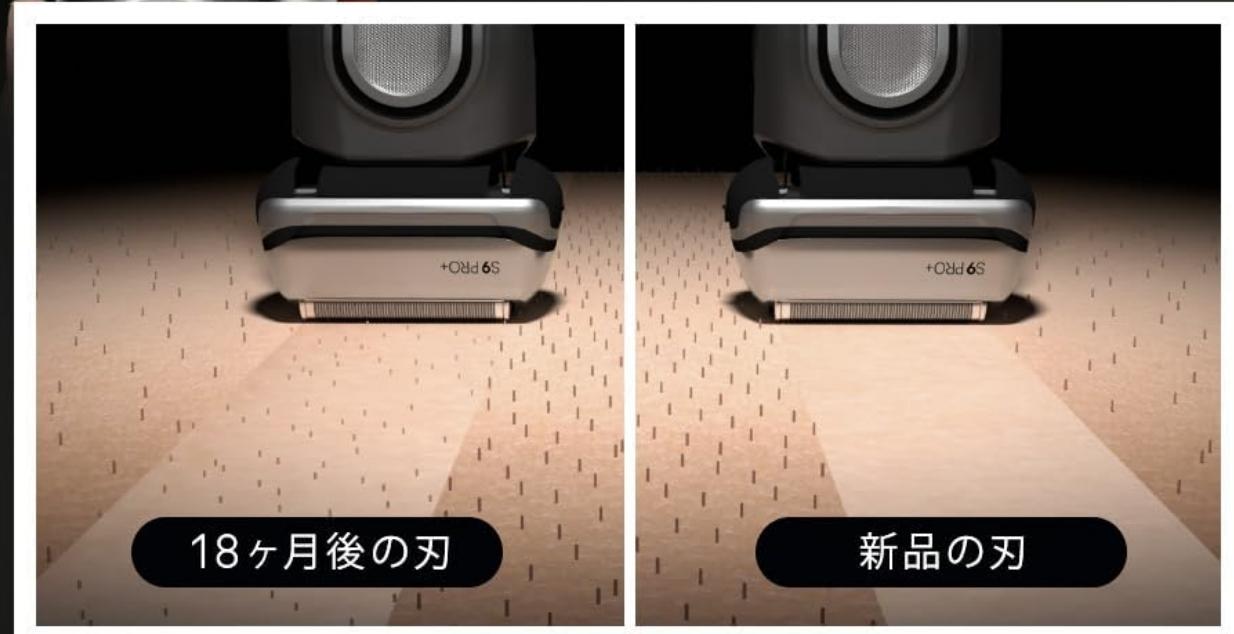

※画像はイメージです

Image: Blade replacement guide. This diagram visually explains how to replace the integrated foil and cutter cassette, emphasizing the recommendation for replacement every 18 months to maintain optimal shaving performance.

7. TROUBLESHOOTING

If you encounter any issues with your Braun Series 3 310s shaver, please refer to the following common solutions:

Problem	Possible Cause	Solution
Shaver does not turn on	Battery is discharged	Charge the shaver for at least 5 minutes.
Reduced shaving performance	Foil or cutter block is worn or dirty	Clean the shaver head thoroughly. If performance does not improve, replace the foil and cutter cassette (F/C21B).
Shaver pulls hairs	Foil or cutter block is worn or damaged	Replace the foil and cutter cassette (F/C21B).

Problem	Possible Cause	Solution
Charge indicator not lighting up	Charger not properly connected or faulty	Ensure the charger is securely connected to both the shaver and the power outlet. Try a different outlet.

If the problem persists, please contact Braun customer service.

8. SPECIFICATIONS

Feature	Detail
Model	Braun Series 3 310s
Color	Blue
Power Source	Rechargeable Battery
Charging Time	Approx. 1 hour
Continuous Use Time	Approx. 20 minutes
Quick Charge	5 minutes for one shave
Shaving System	3-blade cutting system (SensoFoil, S-shaped trimmer)
Waterproof	100% waterproof for wet & dry use
Replacement Part	Foil & Cutter Cassette F/C21B
Worldwide Voltage	AC 100-240V (Automatic adaptation)
Product Weight	0.18 kg
Blade Material	Metal

9. WARRANTY AND SUPPORT

Braun products are manufactured to the highest quality standards. In the unlikely event of a defect, your product is covered by a manufacturer's warranty. Please refer to the warranty card included in your package for specific terms and conditions, including the warranty period and how to make a claim.

For further assistance, product registration, or to find authorized service centers, please visit the official Braun website or contact their customer service department. Contact information can typically be found on the Braun packaging or website.

Related Documents - 310s

	<p>Braun Series 3 Shaver User Manual</p> <p>Comprehensive user manual for the Braun Series 3 shaver, covering charging, shaving, cleaning, maintenance, and warranty information for models 301s, 300s, and 310s.</p>
	<p>Braun Series 3 Shaver User Manual</p> <p>Comprehensive user manual for Braun Series 3 shavers (models 3030s, 3020s, 3000s, 3000BT, Types 5415, 5413). Learn about usage, charging, cleaning, and maintenance for an optimal shaving experience.</p>
	<p>Braun Series 3 Shaver User Manual: 3080, 3045, 3040, 3010</p> <p>Comprehensive user manual for Braun Series 3 shavers (models 3080, 3045, 3040, 3010). Learn about charging, shaving, cleaning, maintenance, and accessories for your wet & dry electric shaver.</p>
	<p>Braun Series 8 Electric Shaver User Manual</p> <p>This user manual provides comprehensive instructions for the Braun Series 8 electric shaver. It covers setup, operation, charging, cleaning, maintenance, safety precautions, troubleshooting, and warranty information. Learn how to use your shaver for optimal performance and longevity.</p>
	<p>Braun Series 9 Pro 9470cc Electric Shaver User Manual</p> <p>Comprehensive user manual for the Braun Series 9 Pro 9470cc electric shaver, covering setup, usage, cleaning, maintenance, and warranty information.</p>
	<p>Braun Series 3 Electric Shaver User Manual and Safety Guide</p> <p>Comprehensive user manual for the Braun Series 3 electric shaver, including operating instructions, safety precautions, cleaning, maintenance, and warranty information for models like 3080s, 3045s, 3040s, 3025s, 3010s, 3010BT, and more. Covers charging, shaving, cleaning, and service details.</p>