

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [EasyAcc](#) /

› [EasyAcc Mini Handheld Fan FNHD User Manual](#)

EasyAcc FNHD

EasyAcc Mini Handheld Fan FNHD User Manual

Brand: EasyAcc | Model: FNHD

INTRODUCTION

This manual provides detailed instructions for the safe and efficient use of your EasyAcc Mini Handheld Fan (Model FNHD). Please read this manual thoroughly before operating the device and retain it for future reference.

IMPORTANT SAFETY INFORMATION

- Remove the white sheet insulator under the battery cover before first use. The fan will only work when plugged in if the insulator is not removed.
- Recharge the fan when it cannot reach the 3rd speed or cannot be turned off.
- The charging time must be within 4-5 hours. Do not overcharge.
- Use the charging cable provided with the product. The adapter and cable for charging must meet the standard of 5V/0.5A.
- Charge the fan directly using a charging socket, not through a computer.
- Failure to operate in accordance with these standards may result in damage to the product, for which the customer shall bear responsibility.

PACKAGE CONTENTS

Verify that all items are present in your package:

- EasyAcc Mini Handheld Fan (Model FNHD)
- Rechargeable Lithium Polymer Battery (pre-installed)
- USB Charging Cable
- User Manual

Your browser does not support the video tag.

Video: Unboxing and overview of the EasyAcc Portable Handheld Fan, showing the fan, USB cable, battery, and user manual.

SETUP

1. **Insert Battery:** Open the battery compartment cover. Ensure the rechargeable Lithium Polymer battery is correctly inserted, observing polarity.
2. **Remove Insulator:** Locate and remove the white insulating sheet from the battery compartment. Close the cover securely.
3. **Initial Charge:** Before first use, fully charge the fan using the provided USB cable and a compatible 5V/0.5A power adapter. The LED charging indicator will show charging status.

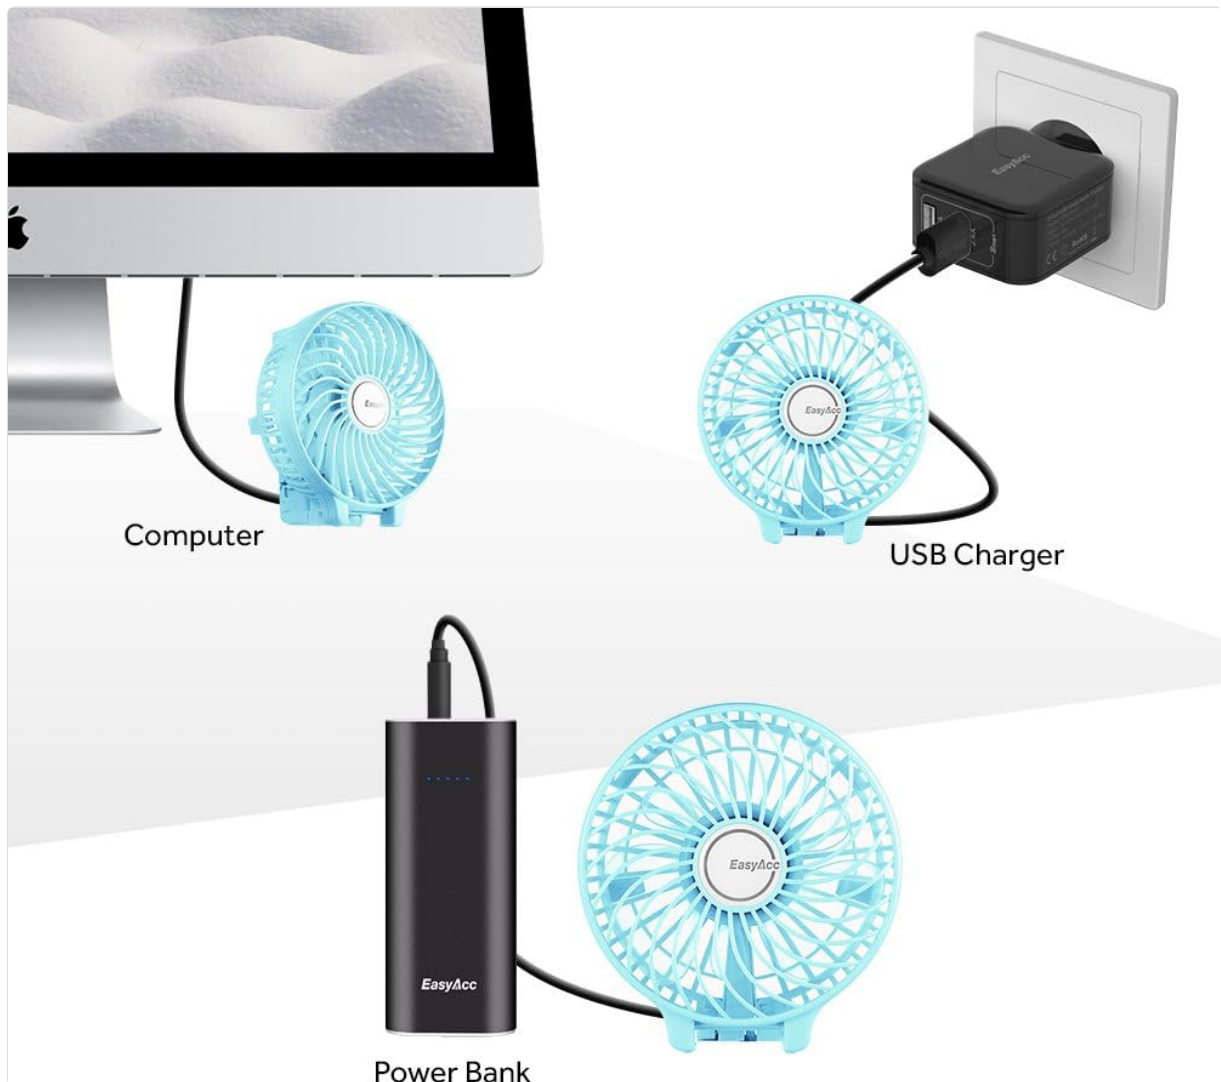 


Image: Close-up view of the EasyAcc Mini Handheld Fan, highlighting the power LED, LED charging indicator, USB charging port, and power button. This image also shows the battery compartment area.

Your browser does not support the video tag.

Video: Demonstrates how to insert the battery and remove the protection strip, and how to charge the fan using the USB port.

OPERATING INSTRUCTIONS

Power On/Off and Speed Adjustment

1. **Power On:** Press the power button once to turn on the fan at Speed 1 (low).
2. **Adjust Speed:** Press the power button repeatedly to cycle through the 3 adjustable speed levels:
 - **Speed 1:** (2100rpm) - Provides a gentle breeze for up to 10 hours.
 - **Speed 2:** (2900rpm) - Offers moderate airflow for up to 6 hours.
 - **Speed 3:** (3600rpm) - Delivers powerful wind for up to 3 hours.
3. **Power Off:** After Speed 3, pressing the button again will turn the fan off.

Foldable Design

The fan features a foldable handle, allowing it to be used as a handheld fan or folded to stand on a flat surface as a desk fan.

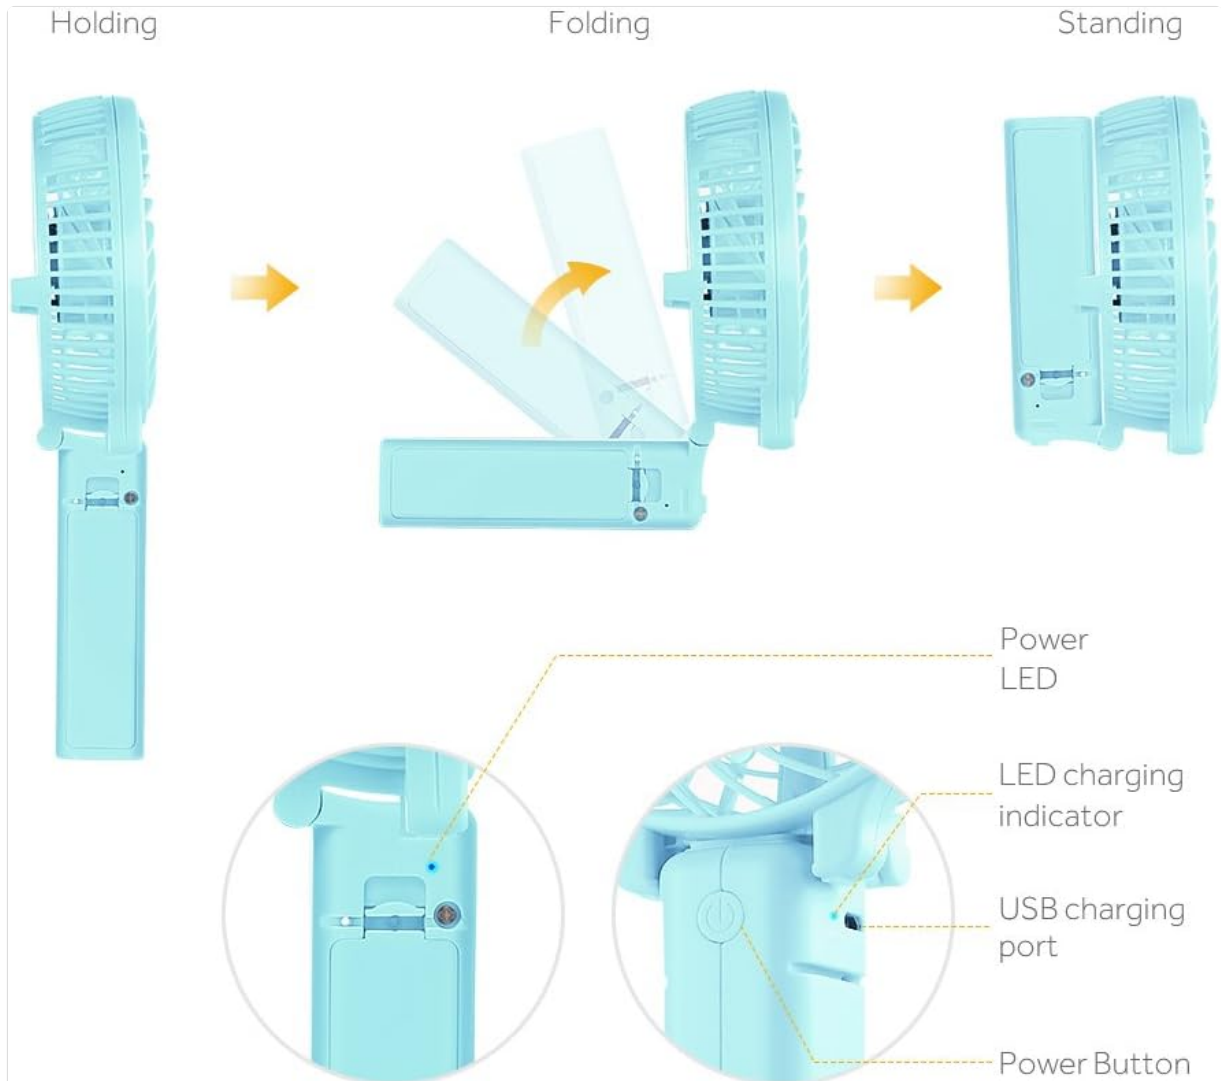 


Image: Illustrates the three modes of the fan: handheld, folded for compact storage, and standing as a desk fan.

Your browser does not support the video tag.

Video: Demonstrates the fan's three speed settings and its foldable design for handheld or desk use.

CHARGING THE FAN

1. Connect the small end of the USB charging cable to the fan's USB charging port.
2. Connect the larger end of the USB cable to a compatible 5V/0.5A USB power source (e.g., wall adapter, power bank).

3. The LED charging indicator will illuminate to show charging status.
4. A full charge typically takes 4-5 hours. Disconnect the fan once fully charged to prevent overcharging.



Image: Shows the EasyAcc Mini Handheld Fan being charged via a computer USB port, a USB wall charger, and a power bank.

MAINTENANCE

To ensure optimal performance and longevity of your EasyAcc Mini Handheld Fan, follow these maintenance guidelines:

- **Cleaning:** Gently wipe the exterior of the fan with a soft, dry cloth. Do not use harsh chemicals or abrasive materials.
- **Storage:** When not in use for extended periods, store the fan in a cool, dry place, away from direct sunlight and extreme temperatures. Ensure the battery is partially charged before storage.
- **Battery Care:** Avoid fully discharging the battery frequently. Recharge the fan when its performance noticeably decreases.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Fan does not turn on.	Battery is dead or not properly inserted. Insulating sheet not removed.	Ensure the battery is charged and correctly inserted. Remove the white insulating sheet from the battery compartment.
Fan runs only when plugged in.	Insulating sheet still present in battery compartment.	Open the battery cover and remove the white insulating sheet.
Fan does not reach highest speed or turns off unexpectedly.	Low battery.	Recharge the fan fully.
Charging indicator does not light up.	Charging cable or adapter issue.	Check if the USB cable is securely connected. Try a different compatible USB port or adapter.

SPECIFICATIONS

- **Brand:** EasyAcc
- **Model Name:** FNHD
- **Power Source:** Battery Powered
- **Number of Blades:** 6
- **Number of Power Levels:** 3
- **Speed 1:** 2100rpm
- **Speed 2:** 2900rpm
- **Speed 3:** 3600rpm
- **Working Hours:** 3-10 hours (depending on speed)
- **Noise Level:** 45 Decibels
- **Wattage:** 4 watts
- **Voltage:** 5 Volts
- **Control Method:** Touch (button)
- **Product Dimensions:** 4.33"D x 9.25"W x 1.49"H
- **Item Weight:** 6.2 ounces (0.18 Kilograms)
- **Battery:** 1 Lithium Polymer battery required (included)
- **UPC:** 612046507599

WARRANTY AND SUPPORT

EasyAcc specializes in the fan industry and guarantees product quality. We provide a lifetime warranty for this product. For any issues or support, please contact EasyAcc customer service through the retailer's platform or the official EasyAcc website.

PRODUCT USAGE SCENARIOS

The EasyAcc Mini Handheld Fan is versatile and suitable for various environments:

- **Indoor:** Use as a desk fan in offices, homes, or bedrooms.
- **Outdoor:** Ideal for travel, outdoor activities, sports events, camping, and more.
- **Personal Cooling:** Provides instant relief from heat, especially useful during hot flashes or in warm climates.

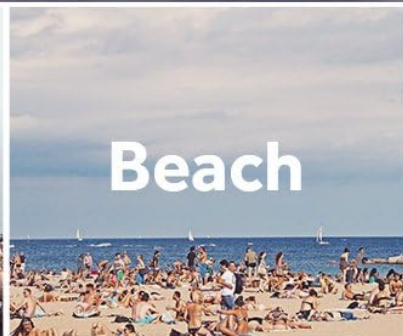 


Image: Depicts the fan in use at a vocal concert, a beach, and a stadium, highlighting its portability for outdoor events.



Image: A collage showing the fan being used while working on a laptop, with a child, on a bedside table, and next to a sports bag, illustrating its diverse applications.

ADDITIONAL INFORMATION

For more information and product updates, please visit the official EasyAcc store or contact customer support.

[Visit the EasyAcc Store](#)