

Cascade SPPPOA066638

Cascade Complete Dishwasher Pods - Instruction Manual

Brand: Cascade | Model: SPPPOA066638

1. PRODUCT OVERVIEW

Cascade Complete ActionPacs are premeasured dishwasher detergent pods designed to deliver a complete clean, tackling even 24-hour stuck-on messes. Each ActionPac contains 25% more cleaning ingredients compared to Cascade Original and is formulated with the grease-fighting power of Dawn dishwashing liquid. These phosphate-free pods dissolve quickly to initiate cleaning early in the wash cycle.

Key features include:

- **Grease Fighting Power:** Dissolves fast to release the grease fighting power of Dawn.
- **Spot-Free Clean Dishes:** Achieves virtually spot-free, sparkling clean dishes from tough messes.
- **Water Saving:** Running the dishwasher daily with these pods can save water compared to handwashing.
- **Recommended Brand:** Cascade is the #1 recommended brand by more dishwasher manufacturers in North America.
- **Convenient and Responsible:** Premeasured ActionPacs eliminate the need for finicky plastic wrapping and are phosphate-free.

VALUE SIZE

#1 BRAND*

Cascade®

COMPLETE



**VIRTUALLY
SPOTFREE
SHINE**



**GREASE
FIGHTING
POWER**



**78
PACS**

FRESH SCENT

Figure 1: Cascade Complete Dishwasher Pods, 78 Count, Fresh Scent.

GET A COMPLETE CLEAN



Figure 2: Illustration of Cascade Complete's cleaning benefits: degreasing with Dawn, virtually spot-free shine, and fast dissolving action.

2. SAFETY INFORMATION

IRRITANT, HARMFUL IF SWALLOWED OR PUT IN MOUTH; MAY IRRITATE EYES OR SKIN; KEEP OUT OF REACH OF CHILDREN; Do not get in eyes; Do not get on skin or clothing; FIRST AID TREATMENT: Contains sodium carbonate, nonionic surfactants and enzymes; If swallowed, give a glassful of water and call a Poison Control Center or doctor immediately; Do not induce vomiting; If in eyes, rinse with water for 15 minutes; If on skin, rinse well with water.

3. INGREDIENTS

Amylase Enzyme, Benzotriazole, Colorants, Copolymer Of Acrylic And Sulphonic Acids, Copolymer Of Acrylic Maleic And Sulphonic Acids, Dipropylene Glycol, Fragrances, Glycerin, Isotridecanol Ethoxylated, PEG/PPG/Propylheptyl Ether, Polyvinyl Alcohol Polymer, Sodium Carbonate, Sodium Carbonate Peroxide, Sodium Silicate, Sodium Sulfate, Subtilisin, Transitional Metal Catalyst, Trisodium Dicarboxymethyl Alaninate, Water.

4. SETUP & USAGE

Using Cascade Complete ActionPacs is simple and convenient. Follow these steps for optimal cleaning results:

1. **Handle with Dry Hands:** Always handle ActionPacs with dry hands to prevent premature dissolving.
2. **Add One ActionPac:** For each load, add one ActionPac. Do not unwrap, puncture, or pull apart pacs that may be stuck together.
3. **Load the ActionPac:** Place one pac directly into the main detergent dispenser of your dishwasher and close the dispenser door.
4. **Start Dishwasher:** Let the dishwasher run its cycle. The ActionPac will dissolve and release its cleaning power.
5. **Close Tub After Use:** Be sure to securely close the tub after each use to maintain the integrity of the remaining pacs.



Figure 3: Placing a Cascade Complete ActionPac into the dishwasher dispenser. No pre-measuring or mess is required.

5. MAINTENANCE

To ensure your dishwasher continues to perform optimally and your dishes remain sparkling, consider incorporating Cascade Dishwasher Cleaner into your routine. For best results, use Cascade Complete ActionPacs with Cascade Power Dry Rinse Aid for powerful drying and Cascade Dishwasher Cleaner to keep your dishwasher machine sparkling.

USE TOGETHER FOR A
COMPLETE CLEAN



Cascade Complete ActionPacs, Cascade Power Dry Rinse Aid, and Cascade Platinum Dishwasher Cleaner are shown side-by-side. Below them, the text 'Cleans tough messes + Spot-free dry + Sparkling machine' is displayed.

Cleans tough messes + Spot-free dry + Sparkling machine

Figure 4: For a complete clean, use Cascade Complete ActionPacs with Cascade Power Dry Rinse Aid and Cascade Dishwasher Cleaner.

6. TROUBLESHOOTING

If you experience issues with your dishes not coming out clean, consider the following:

- Ensure the detergent dispenser is not blocked and the ActionPac can fully dissolve.
- Check that your dishwasher's spray arms are not clogged and can rotate freely.

- Verify that your water temperature is adequate for effective cleaning.
- Avoid overloading the dishwasher, which can prevent water and detergent from reaching all surfaces.
- For hard water spots, consider using a rinse aid in conjunction with the ActionPacs.

7. SPECIFICATIONS

- **Product Dimensions:** 5.5 x 6.75 x 7.25 inches; 3.3 Pounds
- **Item Model Number:** SPPPOA066638
- **Manufacturer:** Cascade
- **Item Form:** Pac
- **Scent:** Fresh
- **Material Feature:** Phosphate Free
- **Number of Items:** 1 (78 Count Tub)
- **Country of Origin:** USA

8. WARRANTY & SUPPORT

For specific warranty information or product support, please refer to the manufacturer's official website or contact their customer service directly. Keep your purchase receipt for any warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question