

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Sylvania](#) /

› [Sylvania SPA040 Bluetooth Jumbo 12" Speaker Tailgater User Manual](#)

Sylvania SPA040

Sylvania SPA040 Bluetooth Jumbo 12" Speaker Tailgater User Manual

Model: SPA040

INTRODUCTION

Thank you for purchasing the Sylvania SPA040 Bluetooth Jumbo 12" Speaker Tailgater. This portable speaker is designed to deliver powerful audio with convenient features such as Bluetooth connectivity, LED lighting, and a wireless microphone. Please read this manual carefully before operating the device to ensure proper use and to maximize its performance.

SAFETY INFORMATION

- Do not expose the unit to extreme temperatures, humidity, or direct sunlight.
- Keep the speaker away from water or other liquids.
- Do not attempt to disassemble or modify the unit. This will void the warranty and may cause damage.
- Use only the provided power adapter for charging.
- Ensure proper ventilation around the speaker during operation.
- Avoid placing heavy objects on top of the speaker.
- Keep out of reach of children.

PACKAGE CONTENTS

Please check the box for the following items:

- Sylvania SPA040 Bluetooth Jumbo 12" Speaker
- Wireless Microphone
- Power Adapter
- User Manual (this document)

PRODUCT OVERVIEW

Familiarize yourself with the main components of your Sylvania SPA040 speaker.





Figure 1: Front view of the Sylvania SPA040 speaker, showing the large 12-inch speaker with blue LED lighting, a retractable handle, and wheels for portability.



Figure 2: Close-up view of the top control panel, including various knobs and buttons, and the speaker grille with green LED illumination.

Key Features:

- Portable design with rear handle and wheels for easy transport.
- Integrated LED lighting around the speaker.
- Digital LED screen for mode and track information.
- Multiple connectivity options: Bluetooth, USB, TF card, AUX input.
- Built-in rechargeable battery providing up to 8 hours of playback.
- Includes a wireless microphone for karaoke or announcements.

SETUP

1. Charging the Speaker

1. Connect the provided power adapter to the DC IN port on the speaker.
2. Plug the power adapter into a standard wall outlet.
3. The charging indicator light will illuminate. The speaker is fully charged when the light changes color or turns off (refer to the specific indicator on your unit).
4. A full charge provides approximately 8 hours of battery life.

2. Initial Power On

- Locate the Power ON/OFF switch, usually on the rear or top panel.
- Switch the unit to the "ON" position. The LED display will light up.

OPERATING INSTRUCTIONS

1. Mode Selection

Press the "MODE" button on the control panel to cycle through available input modes: Bluetooth, USB, TF Card, AUX, and FM Radio (if applicable).

2. Bluetooth Pairing

1. Turn on the speaker and switch to Bluetooth mode. The LED display will show "BLUE" or a similar indicator, and you will hear an audible prompt.
2. Enable Bluetooth on your mobile device (smartphone, tablet, etc.).
3. Search for "Sylvania SPA040" or a similar device name in your device's Bluetooth settings.
4. Select the speaker to pair. Once connected, you will hear a confirmation sound.
5. You can now play audio from your device through the speaker.
6. *Note: Bluetooth range is approximately 10 feet.*

3. USB/TF Card Playback

1. Insert a USB flash drive or TF (microSD) card into the corresponding slot on the control panel.
2. The speaker will automatically switch to USB or TF card mode and begin playing audio files.
3. Use the Play/Pause, Next, and Previous buttons to control playback.

4. AUX Input

1. Connect an external audio device (e.g., MP3 player, laptop) to the AUX IN port using a 3.5mm audio cable (not included).
2. Switch the speaker to AUX mode.
3. Audio from your connected device will now play through the speaker.

5. Wireless Microphone Usage

1. Ensure the wireless microphone has fresh batteries installed.
2. Turn on the microphone. It should automatically connect to the speaker.
3. Adjust the microphone volume using the dedicated "MIC VOL" knob on the speaker's control panel.
4. *Note: If the microphone does not work, check battery levels and ensure it is within range of the speaker.*

6. LED Lighting Control

The speaker features integrated LED lighting. There may be a dedicated button or switch on the control panel to turn the lights on/off or cycle through different lighting modes. Refer to the specific markings on your unit.

7. FM Radio (if applicable)

1. Switch the speaker to FM Radio mode.
2. Press the Play/Pause button to auto-scan and save available radio stations.

3. Use the Next/Previous buttons to navigate between saved stations.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to wipe the exterior of the speaker. Do not use abrasive cleaners or solvents.
- **Storage:** When not in use for extended periods, store the speaker in a cool, dry place, away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the speaker regularly, even if not in use.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Speaker does not power on.	Battery is low or dead; Power switch is off.	Charge the speaker; Ensure power switch is in the "ON" position.
No sound from speaker.	Volume is too low; Incorrect mode selected; Device not connected properly.	Increase speaker and source device volume; Select correct input mode (Bluetooth, AUX, USB/TF); Reconnect device.
Bluetooth pairing fails.	Speaker not in pairing mode; Device too far; Interference.	Ensure speaker is in Bluetooth mode; Move device closer (within 10 feet); Turn off other Bluetooth devices.
Wireless microphone not working.	Microphone batteries are low/dead; Microphone is off; Out of range.	Replace microphone batteries; Turn on microphone; Move microphone closer to speaker.
Poor sound quality.	Source audio quality is poor; Volume too high (distortion); Speaker placement.	Use high-quality audio files; Reduce volume; Adjust speaker placement.

SPECIFICATIONS

Model:	SPA040
Brand:	Sylvania
Connectivity:	Bluetooth, USB, TF Card, AUX
Speaker Size:	12 inches
Power Output:	15 Watts (Nominal), 5 Watts (Maximum)
Battery Life:	Up to 8 hours
Power Source:	Battery Powered
Material:	Plastic, Metal
Dimensions	
(LxWxH):	35.6 x 38.1 x 63.5 cm (14 x 15 x 25 inches)
Weight:	12.7 kg (27.99 lbs)
Special Features:	Wireless, Portable, Bluetooth, LED Lighting, Wireless Microphone

UPC:

058465801618

WARRANTY AND SUPPORT

Sylvania products are designed and manufactured to the highest standards. For warranty information and technical support, please refer to the warranty card included with your purchase or visit the official Sylvania website. Keep your proof of purchase for warranty claims.

For further assistance, please contact Sylvania customer service.

© 2024 Sylvania. All rights reserved.