

LG AKB74915304

LG AKB74915304 Remote Control User Manual

Model: AKB74915304

1. SETUP

1.1 Battery Installation

The LG AKB74915304 remote control requires two (2) AAA batteries for operation. Follow these steps to install the batteries:

1. Locate the battery compartment cover on the back of the remote control.
2. Press down on the tab and slide the cover off.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.

Note: Ensure batteries are inserted with correct polarity to prevent damage to the remote control.

1.2 Initial Use

This remote control is designed to work with compatible LG TV models, including 49LH5700-UD, 43LH5700-UD, 55LH5750-UB, 32LH570B, 43LH570B, 49LH570A, and 55LH575A. In most cases, no programming is required. Once batteries are installed, the remote should function immediately with your compatible LG TV.

2. OPERATING INSTRUCTIONS

2.1 Remote Control Layout

The image below illustrates the layout of the LG AKB74915304 remote control, highlighting its various buttons and their positions.



Image: Front view of the LG AKB74915304 remote control. It is a black rectangular remote with various buttons for TV operation. The top features a red power button, followed by function buttons like CAPTION, INFO, RATIO, and TV. Below these are the numeric keypad (0-9), LIST, FLASHBK, FAV, GUIDE, and MUTE. Central to the remote are the VOL (Volume) and CH PAGE (Channel) buttons, along with navigation controls (up, down, left, right, OK). Other buttons include PICTURE, HOME, SOUND, Q.MENU, BACK, EXIT, SAP/*, SLEEP, and media playback controls (rewind, play/pause, fast forward, stop). Four colored buttons (red, green, yellow, blue) are located near the bottom, above the LG logo and model number AKB74915304.

2.2 Button Functions

- **POWER:** Turns the TV on or off.
- **TV:** Selects the TV input source.
- **RATIO:** Adjusts the screen aspect ratio.
- **CAPTION:** Activates or deactivates closed captions.
- **INFO:** Displays current program information.
- **Number Buttons (0-9):** Directly selects channels or enters numerical values.
- **LIST:** Displays the channel list.
- **FLASHBK:** Returns to the previously viewed channel.
- **FAV:** Accesses favorite channels.
- **VOL (+/-):** Adjusts the volume level.
- **GUIDE:** Displays the electronic program guide.
- **MUTE:** Mutes or unmutes the TV sound.
- **CH PAGE (Up/Down):** Changes channels or navigates pages.
- **PICTURE:** Accesses picture mode settings.
- **HOME (House icon):** Opens the Smart TV home menu.
- **SOUND:** Accesses sound mode settings.
- **Q.MENU (Quick Menu):** Displays a quick menu for common settings.
- **Navigation Buttons (Up, Down, Left, Right):** Navigates through menus and options.
- **OK:** Confirms a selection or displays the current channel information.
- **BACK:** Returns to the previous screen or menu.
- **EXIT:** Exits the current menu or application.
- **SAP/*:** Selects Secondary Audio Program (SAP) or other special audio features.
- **SLEEP:** Sets the sleep timer.
- **Media Control Buttons (Rewind, Play/Pause, Fast Forward, Stop):** Controls media playback functions.
- **Colored Buttons (Red, Green, Yellow, Blue):** These buttons perform specific functions depending on the current menu or application. Refer to the on-screen prompts for their specific uses.

3. MAINTENANCE

3.1 Cleaning the Remote Control

To maintain the remote control's functionality and appearance, clean it regularly:

- Use a soft, dry cloth to wipe the surface of the remote.

- For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid excessive moisture.
- Do not use harsh chemicals, solvents, or abrasive cleaning pads, as these can damage the remote's finish or internal components.

3.2 Battery Replacement

Replace batteries when the remote control's response becomes sluggish or stops working. Always replace both batteries at the same time with new AAA batteries. Do not mix old and new batteries, or different types of batteries, as this can lead to leakage or malfunction.

4. TROUBLESHOOTING

If you experience issues with your LG AKB74915304 remote control, refer to the following common troubleshooting steps:

- **Remote not responding:**
 - Check if the batteries are inserted correctly with the correct polarity.
 - Replace the batteries with fresh AAA batteries.
 - Ensure there are no obstructions between the remote control and the TV's infrared receiver.
 - Point the remote directly at the TV's IR sensor.
- **Specific buttons not working:**
 - Clean the remote control, especially around the affected buttons, to remove any dirt or debris that might be preventing proper contact.
 - If only certain buttons fail, and battery replacement does not resolve the issue, the remote control may require replacement.
- **TV not turning on/off:**
 - Verify that the TV is plugged into a working power outlet.
 - Try using the power button directly on the TV to confirm the TV itself is functional.

5. SPECIFICATIONS

Model Number	AKB74915304
Power Source	2 x AAA Batteries (not included)
Compatible Devices	LG Televisions (e.g., 49LH5700-UD, 43LH5700-UD, 55LH5750-UB, 32LH570B, 43LH570B, 49LH570A, 55LH575A)
Item Weight	Approximately 4.6 ounces (without batteries)
Color	Black

6. WARRANTY INFORMATION

This product is typically covered by a limited warranty provided by the manufacturer or seller. Please refer to the warranty documentation included with your purchase or contact the seller for specific warranty terms and conditions. Keep your proof of purchase for warranty claims.

7. CUSTOMER SUPPORT

For further assistance, technical support, or inquiries regarding your LG AKB74915304 remote control, please contact the retailer from whom you purchased the product or refer to the official LG customer support channels available in your region. Contact information can usually be found on the manufacturer's website or in your TV's user manual.