

GJS Gourmet 123ABC

GJS Gourmet Rubber Gasket Instruction Manual

For Power Cooker XL Models PPC770, PPC770-1, PPC771, PRO, WAL1, WAL2, YBD60-100

PRODUCT OVERVIEW

The GJS Gourmet Rubber Gasket is a replacement sealing ring designed for specific Power Cooker XL models. It is manufactured from durable, food-grade silicone to ensure a secure seal and optimal performance of your pressure cooker.

Compatibility: This gasket is compatible with all 5 & 6 Quart Power Cooker XL models, including PPC770, PPC770-1, PPC771, PRO, WAL1, WAL2, and YBD60-100.


Important Note: To ensure proper fit and function, verify that your pressure cooker model is listed above and that the dimensions of this gasket match your existing sealing ring. The gasket has an interior diameter of 22.00 cm and an exterior diameter of 24.00 cm.

INSTALLATION INSTRUCTIONS

Proper installation of the rubber gasket is crucial for the safe and efficient operation of your pressure cooker. Follow these steps to install the GJS Gourmet Rubber Gasket:

- Preparation:** Ensure your pressure cooker lid and the new gasket are clean and free from any debris.
- Remove Old Gasket:** Carefully remove the old sealing ring from the groove on the underside of your pressure cooker lid.
- Insert New Gasket:** Place the GJS Gourmet Rubber Gasket into the designated groove on the inner rim of the pressure cooker lid. Ensure it is seated evenly and securely all the way around. The gasket should fit snugly without any twists or kinks.
- Check Fit:** After installation, gently run your finger along the gasket to confirm it is fully seated and forms a continuous seal.
- Initial Use:** When closing the lid with a new gasket, it may feel tighter than usual. This is normal and indicates a good seal. The gasket will typically soften and conform after a few uses.


Please note that this ring has an inner and outer diameter of 22.0 and 24.0 cm

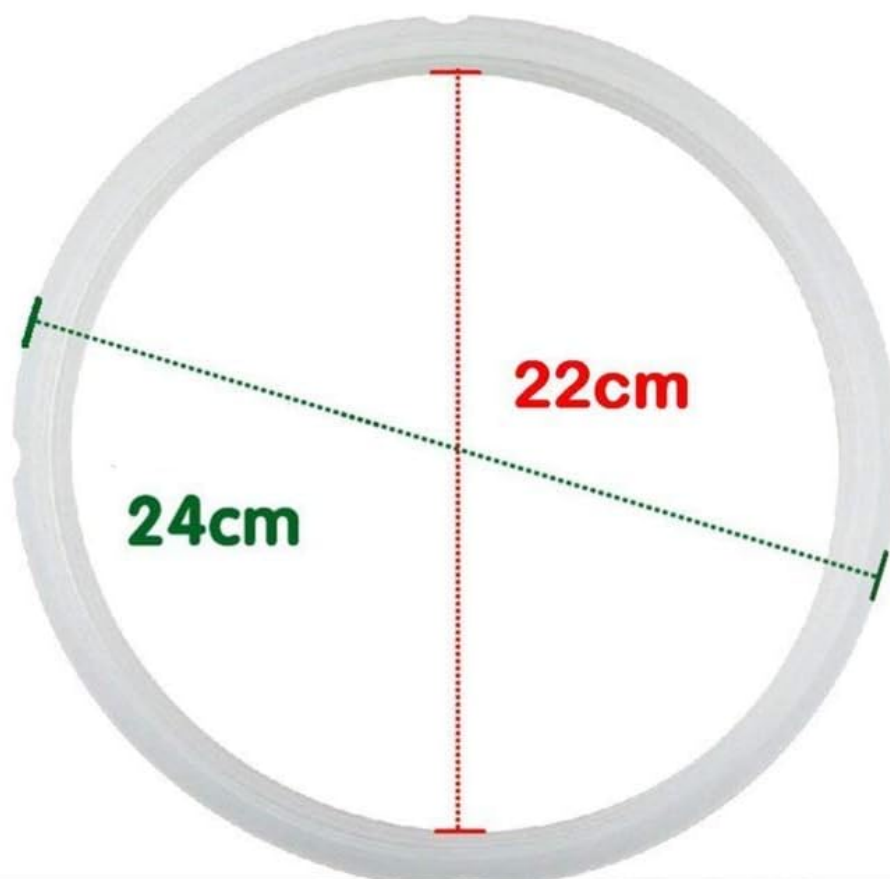

Please make sure that these dimensions are identical to your old ring

This image illustrates the precise dimensions of the GJS Gourmet rubber gasket, highlighting its 22 cm inner diameter and 24 cm outer diameter. These measurements are critical for ensuring compatibility with your pressure cooker.

The ring will fit the following pots

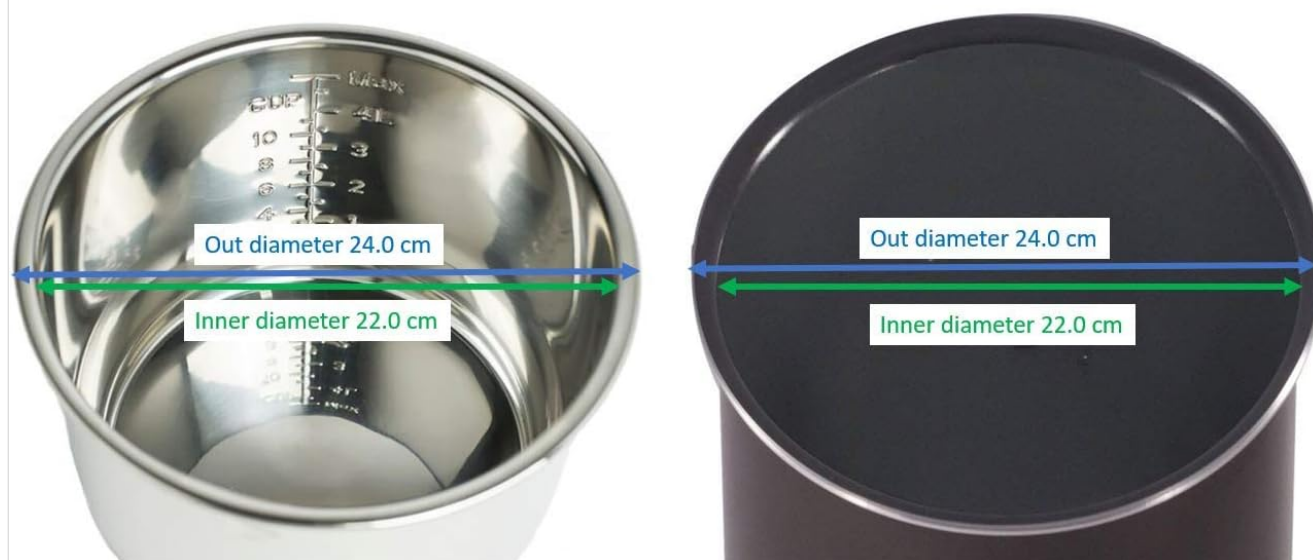

This diagram demonstrates how the GJS Gourmet rubber gasket is designed to fit into compatible pressure cooker pots. It visually confirms the 22 cm inner diameter and 24 cm outer diameter, ensuring a proper seal when installed correctly.

OPERATING WITH THE GASKET

The GJS Gourmet Rubber Gasket is an essential component for your pressure cooker's sealing mechanism. Once correctly installed, it creates an airtight seal between the lid and the pot, allowing pressure to build safely and efficiently during cooking.

- Always ensure the gasket is clean and properly seated before each use.
- A well-maintained gasket helps your pressure cooker operate at its intended performance, ensuring consistent cooking results.

MAINTENANCE

Regular maintenance of your gasket extends its lifespan and ensures the continued safe operation of your pressure cooker.

- **Cleaning:** The silicone gasket is dishwasher safe. For manual cleaning, wash with warm, soapy water.
- **Odor Removal:** If the gasket retains food odors, soaking it overnight in a solution of white vinegar, baking soda, and dish soap can help neutralize smells.
- **Inspection:** Regularly inspect the gasket for any signs of wear, cracks, tears, or deformation.
- **Replacement:** It is recommended to replace the gasket every 18-24 months, or immediately if any deformation or damage is noticed, to maintain optimal sealing performance and safety.

TROUBLESHOOTING

If you encounter issues after installing your new gasket, consider the following:

- **Lid is Hard to Close:** A new gasket can be stiffer than an old one, making the lid harder to close initially. This is often normal and the gasket will typically become more pliable after a few uses. Ensure the gasket is correctly seated in its groove.
- **Steam Leakage:** If steam leaks from the lid, first check that the gasket is installed correctly and is not twisted or pinched. Ensure the lid is properly aligned and locked. If the issue persists, verify that the gasket dimensions match your cooker's requirements, as an incorrect size can cause leaks.
- **Loss of Pressure:** A damaged or improperly installed gasket can lead to a loss of pressure. Inspect the gasket for any visible damage or signs of wear. If damaged, replace it.

SPECIFICATIONS

Brand	GJS Gourmet
Model Number	123ABC
Material	Silicone (Food-Grade)
Color	Clean
Interior Diameter	22.00 cm
Exterior Diameter	24.00 cm
Item Weight	0.6 Ounces (approx. 17 grams)
Package Dimensions	9.02 x 4.61 x 1.18 inches

Dishwasher Safe	Yes
Compatible Cooker Capacity	5 & 6 Quart Power Cooker XL models

SUPPORT

For further assistance or inquiries regarding your GJS Gourmet Rubber Gasket, please refer to the GJS Gourmet brand store or contact customer support through the retailer where the product was purchased.

You can visit the official GJS Gourmet store for more information:[GJS Gourmet Store](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question