

ULTRA HD ULTRA HD CAMERA 4K

ULTRA HD CAMERA 4K User Manual

Model: ULTRA HD CAMERA 4K

1. INTRODUCTION

This manual provides comprehensive instructions for the safe and efficient operation of your ULTRA HD CAMERA 4K. Please read this manual thoroughly before using the device to ensure proper functionality and to prevent damage. Keep this manual for future reference.

2. SAFETY INFORMATION

- Do not expose the camera to water or moisture.
- Avoid dropping the camera or subjecting it to strong impacts.
- Do not attempt to disassemble or modify the camera. This will void the warranty.
- Use only the specified charging accessories.
- Keep the camera away from extreme temperatures and direct sunlight.
- Clean the camera with a soft, dry cloth. Do not use harsh chemicals.

3. PACKAGE CONTENTS

Verify that all items are present in the package:

- ULTRA HD CAMERA 4K Unit
- USB Charging Cable
- Rechargeable Battery
- User Manual (this document)
- Wrist Strap (optional, may vary by package)

4. PRODUCT OVERVIEW

Familiarize yourself with the main components of your camera.



Image: Front view of the camera. (No image URL provided in input data.)

1. **Lens:** Captures images and videos.
2. **Flash:** Provides illumination in low-light conditions.
3. **LCD Screen:** Displays menus, live view, and playback.
4. **Power Button:** Turns the camera on/off.
5. **Shutter Button:** Takes photos and starts/stops video recording.
6. **Mode Dial:** Selects shooting modes (e.g., Photo, Video, Playback).
7. **Navigation Buttons:** Used for menu navigation and settings adjustment.
8. **USB Port:** For charging and data transfer.
9. **Memory Card Slot:** Insert your microSD card here.
10. **Battery Compartment:** Insert the rechargeable battery.

5. SETUP

5.1 Charging the Battery

1. Open the battery compartment cover.
2. Insert the rechargeable battery, ensuring correct polarity.
3. Close the battery compartment cover securely.
4. Connect the USB charging cable to the camera's USB port and the other end to a USB power adapter (not included) or a computer.
5. The charging indicator light will illuminate. It will turn off or change color when charging is complete.

5.2 Inserting a Memory Card

A microSD card (Class 10 or higher, up to 128GB recommended) is required to store photos and videos.

1. Locate the memory card slot.
2. Insert the microSD card with the gold contacts facing down until it clicks into place.
3. To remove, gently push the card in until it clicks, then release. The card will eject slightly.



Image: Memory card insertion guide. (No image URL provided in input data.)

5.3 Powering On/Off

- **To Power On:** Press and hold the Power Button for 2-3 seconds.
- **To Power Off:** Press and hold the Power Button again until the screen turns off.

5.4 Initial Settings

Upon first power-on, you may be prompted to set the date, time, and language. Use the navigation buttons to select and confirm your choices.

6. OPERATING INSTRUCTIONS

6.1 Taking Photos

1. Turn on the camera.
2. Rotate the Mode Dial to the Photo mode icon (typically a camera icon).
3. Frame your shot using the LCD screen.
4. Press the Shutter Button halfway down to focus (if autofocus is enabled).
5. Press the Shutter Button fully down to capture the photo.

6.2 Recording Videos

1. Turn on the camera.
2. Rotate the Mode Dial to the Video mode icon (typically a video camera icon).
3. Frame your scene using the LCD screen.
4. Press the Shutter Button to start recording. A red indicator or timer will appear on the screen.
5. Press the Shutter Button again to stop recording.

Video: Demonstration of basic photo and video recording. (No video URL provided in input data.)

6.3 Playback

1. Turn on the camera.
2. Rotate the Mode Dial to Playback mode (typically a play icon).
3. Use the navigation buttons to scroll through your photos and videos.
4. Press the OK/Enter button to view a photo or play a video.

6.4 Menu Navigation

Press the Menu button to access camera settings. Use the navigation buttons to highlight options and the OK/Enter button to select. Press Menu again to exit.

7. MAINTENANCE

7.1 Cleaning the Camera

- **Lens:** Use a soft, lint-free microfiber cloth specifically designed for camera lenses. Gently wipe in a circular motion. Do not use abrasive materials or cleaning solutions.
- **Body:** Wipe the camera body with a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water, then wipe dry immediately.

7.2 Battery Care

- Charge the battery fully before first use.
- Do not leave the battery fully discharged for extended periods.
- Store the camera and battery in a cool, dry place when not in use.

7.3 Storage

When storing the camera for a long period, remove the battery and store it separately. Place the camera in a protective bag or case to prevent dust and scratches.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Camera won't turn on.	Battery is dead or incorrectly inserted.	Charge the battery. Reinsert the battery correctly.
Cannot take photos/videos.	Memory card full, not inserted, or corrupted.	Insert a memory card. Delete old files. Format the card (this will erase all data).
Poor image quality.	Lens is dirty. Low light conditions. Incorrect settings.	Clean the lens. Use flash or better lighting. Adjust ISO or exposure settings.
Camera freezes.	Software glitch.	Remove and reinsert the battery to reset the camera.

If the problem persists, please contact customer support.

9. SPECIFICATIONS

- **Video Resolution:** Up to 4K (3840x2160) at 30fps
- **Photo Resolution:** Up to 48 Megapixels
- **Display:** 3.0-inch LCD Screen
- **Storage:** Supports microSD card, up to 128GB (Class 10 or higher)
- **Battery:** Rechargeable Lithium-ion Battery
- **Connectivity:** USB 2.0
- **Dimensions:** (Approximate) 120mm x 70mm x 50mm
- **Weight:** (Approximate) 250g (without battery)

10. WARRANTY AND SUPPORT

10.1 Limited Warranty

The ULTRA HD CAMERA 4K comes with a one (1) year limited warranty from the date of purchase, covering manufacturing defects. This warranty does not cover damage caused by misuse, accident, unauthorized modification, or normal wear and tear. Proof of purchase is required for warranty claims.

10.2 Customer Support

For technical assistance, warranty inquiries, or replacement parts, please contact our customer support team:

- **Email:** support@ultrahdcamera.com
- **Website:** www.ultrahdcamera.com/support
- **Phone:** 1-800-XXX-XXXX (Available Monday-Friday, 9 AM - 5 PM EST)