

[Manuals.plus](#) /

> [COSTWAY](#) /

> COSTWAY Compact Refrigerator Instruction Manual

COSTWAY 22672GR-CYEP

Instruction Manual for COSTWAY Compact Refrigerator

Brand: COSTWAY | Model: 22672GR-CYEP

1. INTRODUCTION

This manual provides important information regarding the installation, operation, and maintenance of your new COSTWAY Compact Refrigerator. Please read this manual thoroughly before using the appliance to ensure safe and efficient operation. Keep this manual for future reference.



Figure 1: Front view of the COSTWAY Compact Refrigerator. This compact unit features a sleek design suitable for various living spaces.

2. IMPORTANT SAFETY INFORMATION

To reduce the risk of fire, electric shock, or injury when using your refrigerator, follow these basic precautions:

- Read all instructions before using the appliance.
- Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.
- Ensure proper ventilation around the unit. Maintain at least 4 inches of space from walls.
- Do not allow children to climb, stand, or hang on the shelves of the refrigerator.
- Unplug the refrigerator before cleaning or performing any maintenance.
- Dispose of the appliance according to local regulations for flammable refrigerants and gases.

3. PARTS AND FEATURES

Familiarize yourself with the components of your refrigerator for optimal use.



Figure 2: Internal layout showing separate freezer compartment, PVC antibacterial door seal, wide angle LED lights, food grade inner material, transparent sterile fruit and vegetable box, and large bottle rack on the door.



Figure 3: Diagram illustrating the dual temperature areas: the freezer (0.95 Cu.Ft / 27L) for fast freezing and the cooler (2.25 Cu.Ft / 63L) for fresh food storage.

4. SETUP AND INSTALLATION

4.1 Unpacking

Carefully remove all packaging materials, including the foam base and adhesive tape. Inspect the refrigerator for any shipping damage. Keep packaging materials until you are satisfied with the product.

4.2 Placement

Place the refrigerator on a firm, level floor. Ensure there is adequate ventilation around the unit. Allow at least 4 inches (10 cm) of space on the sides and back, and 8 inches (20 cm) on top for proper air circulation. Avoid direct sunlight or heat sources.



Figure 4: Example placement of the compact refrigerator in a living space, demonstrating its compact footprint.

The refrigerator features adjustable feet to help level the unit on uneven surfaces. Rotate the feet clockwise or counter-clockwise to raise or lower the corresponding corner until the refrigerator is stable and level.



Figure 5: Illustration of the reversible door feature and adjustable feet for leveling the appliance.

4.3 Power Connection

Before plugging in, allow the refrigerator to stand upright for at least 2-4 hours. This allows the refrigerant to settle. Plug the appliance into a dedicated 115V AC, 60Hz grounded electrical outlet. Do not use extension cords or ungrounded adapters.

4.4 Reversible Door Installation

The refrigerator doors are reversible, allowing them to open from either the left or right side. If you wish to change the door swing direction, refer to the detailed instructions provided in the separate door reversal kit (if included) or contact customer support for guidance. This process typically involves moving hinges and door handles.

5. OPERATING YOUR REFRIGERATOR

5.1 Temperature Control

The refrigerator features a mechanical temperature control dial located inside the fresh food compartment. Turn the dial to adjust the cooling intensity. Settings range from 'Min' (least cold) to 'Max' (coldest). For general use, a medium setting is often sufficient. The cooling temperature setting range is 32°F-50°F (0°C-10°C) for the cooler and the lowest freezing temperature is 5°F (-15°C) for the freezer.

5.2 Fresh Food Compartment

The fresh food compartment has a capacity of 2.25 cu. ft. (63L). It includes removable glass shelves that can be adjusted to accommodate items of various heights. The transparent crisper drawer is designed to keep fruits and vegetables fresh.



Figure 6: Interior view of the refrigerator, showcasing the adjustable glass shelves and door storage for various food and beverage items.

5.3 Freezer Compartment

The separate freezer compartment has a capacity of 1 cu. ft. (27L) and is suitable for storing frozen foods and making ice. An ice tray is included for convenience.

5.4 Noise Level

The refrigerator operates at a noise level of approximately 45dB, which is comparable to a library environment. This ensures quiet operation suitable for dorms, offices, or bedrooms.



Figure 7: Chart illustrating the noise level of the refrigerator (40-50dB) in comparison to common sounds, indicating quiet operation.

6. MAINTENANCE AND CARE

6.1 Defrosting

This refrigerator features manual defrost. Frost will accumulate on the freezer walls. When the frost layer is about 0.2 inches (5 mm) thick, defrost the freezer. To defrost, unplug the refrigerator, remove all food, and leave the freezer door open. Place a towel or shallow pan to catch melting ice. Do not use sharp objects or heating devices to remove frost.

6.2 Cleaning

Clean the interior and exterior of the refrigerator regularly. Unplug the unit before cleaning. Use a soft cloth with a mild detergent and warm water. Avoid abrasive cleaners or solvents. Dry thoroughly after cleaning. The removable glass shelves can be washed with soap and water.

6.3 Power Outages and Vacations

In case of a power outage, keep the refrigerator doors closed to maintain temperature. For long vacations, unplug the unit, empty all contents, clean thoroughly, and leave the doors slightly ajar to prevent odors and mold growth.

7. TROUBLESHOOTING GUIDE

Before contacting customer service, please check the following common issues and solutions:

Problem	Possible Cause	Solution
Refrigerator does not operate.	Not plugged in; circuit breaker tripped; temperature control set to "OFF".	Ensure plug is secure; reset circuit breaker; turn temperature control to desired setting.
Temperature is too warm.	Door opened too frequently; large amount of warm food added; poor air circulation; temperature control set too low.	Minimize door openings; allow warm food to cool before placing inside; ensure proper clearance around unit; adjust temperature control to a colder setting.
Excessive noise.	Refrigerator is not level; parts are loose; normal operating sounds.	Adjust leveling feet; check for loose components; gurgling or humming sounds are normal.
Water on floor/inside.	Drain tube clogged; door not sealed properly; manual defrosting in progress.	Clear drain tube; check door seal and adjust if necessary; this is normal during manual defrost.

8. PRODUCT SPECIFICATIONS

Feature	Detail
Brand	COSTWAY
Model Info	22672GR-CYEP

Feature	Detail
Color	Grey
Capacity	3.2 Cubic Feet (Total)
Cooler Capacity	2.25 Cubic Feet (63L)
Freezer Capacity	1 Cubic Foot (27L)
Product Dimensions (D x W x H)	19 x 19.5 x 34 inches
Item Weight	52 Pounds
Rated Voltage	115 Volts (AC)
Rated Power	65W
Cooling Temperature Setting Range	32°F-50°F (0°C-10°C)
Lowest Freezing Temperature	5°F (-15°C)
Noise Level	45dB
Installation Type	Wall Mount
Defrost System	Manual
Door Hinges	Reversible
Shelf Type	Glass shelves, recessed
Included Components	1 x Compact Refrigerator



Figure 8: Detailed dimensions and key specifications of the COSTWAY Compact Refrigerator.

9. WARRANTY AND CUSTOMER SUPPORT

For warranty information, please refer to the warranty card included with your product or visit the official COSTWAY website. Keep your purchase receipt as proof of purchase for any warranty claims.

If you encounter any issues or have questions not covered in this manual, please contact COSTWAY customer support. You can typically find contact information on the product packaging, the official website, or through your retailer.

COSTWAY offers customer support and 30-day easy returns. For more details, visit the [COSTWAY Store on Amazon](#).

