

[manuals.plus](#) /› [Canon](#) /› [Canon EOS 77D Digital SLR Camera Instruction Manual](#)**Canon 1892C001**

Canon EOS 77D Digital SLR Camera Instruction Manual

Model: 1892C001

INTRODUCTION

The EOS 77D is a perfect combination of quality and control. Results are stunning thanks to an optical viewfinder and fast and accurate Dual Pixel CMOS AF with Phase detection, while a top-mounted LCD screen and rear quick control dial help you quickly check and change settings for the images and videos you want.

GETTING STARTED

Unpacking

Carefully unpack your Canon EOS 77D camera and ensure all components are present. The package should include:

- EOS 77D Body
- Eyecup Ef
- Camera Cover R-F-3
- Wide Strap EW-100DBV
- Battery Pack LP-E17 (with Battery Cover)
- Battery Charger LC-E17
- Printed Matter Unit



Image: Contents of the Canon EOS 77D package, including the camera body, battery, charger, and strap.

Battery Installation and Charging

Insert the provided Battery Pack LP-E17 into the Battery Charger LC-E17. Plug the charger into a power outlet. The charging indicator will show the charging status. Once fully charged, remove the battery and insert it into the camera body, ensuring it clicks into place.

Memory Card Insertion

The Canon EOS 77D uses SDXC flash memory cards. Open the memory card slot cover, insert the SDXC card with the label facing the front of the camera until it clicks, and then close the cover.

Attaching a Lens

Align the red or white index mark on the lens with the corresponding index mark on the camera body. Turn the lens clockwise until it clicks into place. The Canon EOS 77D is compatible with Canon EF mount lenses.



Image: Front view of the Canon EOS 77D camera body, highlighting the lens mount.

Initial Power On

Set the power switch to ON. The camera will prompt you to set the date, time, and time zone. Follow the on-screen instructions to complete the initial setup.

OPERATING THE CAMERA

Understanding Camera Controls

The EOS 77D features an intuitive control layout designed for ease of use. Key controls include the top-mounted LCD screen for quick settings review and a rear quick control dial for rapid adjustments.



Image: Top view of the Canon EOS 77D, illustrating the mode dial and top LCD screen.



Image: Rear view of the Canon EOS 77D, displaying the LCD screen and control layout.



Image: The articulated LCD screen of the Canon EOS 77D, shown in an extended position.

Shooting Modes

Rotate the mode dial to select your desired shooting mode (e.g., Program AE, Shutter-priority AE, Aperture-priority AE, Manual exposure). The 24.2 Megapixel CMOS (APS-C) sensor ensures high-quality images across various settings.

Recording Video

Switch to movie shooting mode. The camera supports HDR movie and time-lapse movie functions. Utilize the Dual Pixel CMOS AF for smooth and accurate focusing during video recording.

Connectivity (Wi-Fi, NFC, Bluetooth)

The EOS 77D features built-in Wi-Fi, NFC, and Bluetooth for seamless connectivity. Use Wi-Fi to transfer images to your smart device or control the camera remotely. NFC allows for quick pairing with compatible Android devices, while Bluetooth enables continuous connection for easy image transfer.

Additionally, the EOS Utility Webcam Beta Software (Mac and Windows) can turn your compatible Canon camera into a high-quality webcam.

MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your camera.

- **Cleaning:** Use a blower brush to remove dust from the lens and sensor. For stubborn smudges, use a lens cleaning solution and a microfiber cloth.
- **Storage:** Store the camera in a dry, cool place away from direct sunlight and extreme temperatures. Use a desiccant to prevent mold growth if storing for extended periods.
- **Battery Care:** Fully charge the battery before use and avoid completely draining it. Remove the battery if the camera will not be used for a long time.

TROUBLESHOOTING

If you encounter issues with your Canon EOS 77D, consider the following common solutions:

- **Camera not powering on:** Ensure the battery is fully charged and correctly inserted.

- **Images not saving:** Check if the memory card is inserted correctly and has sufficient free space.
- **Lens not focusing:** Verify the lens is securely attached and the autofocus mode is selected.
- **Connectivity issues:** Ensure Wi-Fi/Bluetooth is enabled on both the camera and your smart device. Refer to the camera's on-screen guide for specific connection steps.

For more detailed troubleshooting, please refer to the comprehensive user manual provided with your camera or visit the official Canon support website.

SPECIFICATIONS

Feature	Detail
Product Dimensions	3 x 5.2 x 3.9 inches
Item Weight	1.2 pounds
ASIN	B06VSTCWJ9
Item Model Number	1892C001
Batteries	1 Lithium Ion batteries required (included)
Date First Available	February 15, 2017
Manufacturer	Canon Cameras US
Compatible Mountings	Canon EF
Aspect Ratio	16:9
Photo Sensor Technology	CMOS
Supported File Format	JPEG
Image Stabilization	Optical
Maximum Focal Length	55 Millimeters
Optical Zoom	1 x
Maximum Aperture	2.8 Millimeters
Expanded ISO Minimum	100
Metering Description	Evaluative

OFFICIAL PRODUCT VIDEOS

No official product videos from the seller were found for embedding in this manual.

WARRANTY AND SUPPORT

For warranty information, technical support, or service inquiries, please visit the official Canon website or contact Canon customer service. You can find more information at the [Canon Store](#).

