

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [VTech](#) /
- › [VTech Go! Go! Smart Wheels Race & Play Adventure Park Instruction Manual \(Model 80-504000\)](#)

**VTech 80-504000**

# VTech Go! Go! Smart Wheels Race & Play Adventure Park Instruction Manual

Model: 80-504000

Brand: VTech

## INTRODUCTION

Welcome to the VTech Go! Go! Smart Wheels Race & Play Adventure Park. This interactive playset is designed to provide an engaging experience with its dynamic track features and SmartPoint technology. Join Gavin the Go-Kart as he navigates hills, loops, and various carnival-themed activities, triggering unique sounds, phrases, and music.



Image: The complete VTech Go! Go! Smart Wheels Race & Play Adventure Park playset, showcasing its various colorful tracks and features.

The playset includes a 360° loop, a spinning Ferris wheel, a tumble-down carnival game, a launcher, and a swinging gate. It features four SmartPoint locations that interact with Gavin the Go-Kart and other Go! Go! Smart Wheels, Go! Go! Smart Animals, and select Go! Go! Smart Friends figures (each sold separately), enhancing learning and play.



Image: Two young children actively engaged in playing with the VTech Go! Go! Smart Wheels Race & Play Adventure Park, demonstrating its interactive nature.

## What's in the Box

Please ensure all components are present before assembly.

- VTech Go! Go! Smart Wheels Race & Play Adventure Park Playset components
- Gavin the Go-Kart (with SmartPoint technology)
- Instruction Manual





Image: The retail packaging for the VTech Go! Go! Smart Wheels Race & Play Adventure Park, showing the playset and included go-kart.

## SETUP

### Assembly

Adult assembly is required. Please refer to the detailed assembly instructions provided in the included manual for step-by-step guidance. Ensure all track pieces and playset components are securely connected to prevent detachment during play.

### Battery Installation (Gavin the Go-Kart)

Gavin the Go-Kart requires 2 AAA batteries (included). To install or replace batteries:

1. Locate the battery compartment on the underside of Gavin the Go-Kart.
2. Using a screwdriver, open the battery compartment cover.
3. Insert 2 new AAA batteries, ensuring correct polarity (+/-).
4. Replace the cover and tighten the screw.

Ensure the Go-Kart's power switch is in the 'ON' position to activate sounds and phrases.

## OPERATING THE PLAYSET

## Gavin the Go-Kart and SmartPoint Technology

Gavin the Go-Kart is equipped with SmartPoint technology. When placed on any of the four SmartPoint locations on the track, the go-kart will respond with unique sounds, phrases, and music. This feature teaches the letter 'G' and the name of the vehicle.



Image: Gavin the Go-Kart positioned on a SmartPoint section of the track, illustrating the interactive sound feature.

## Playset Features

- **360° Loop:** Place Gavin the Go-Kart at the entrance of the loop and watch it race through.
- **Ferris Wheel:** Manually spin the Ferris wheel to transport vehicles or for interactive play.
- **Tumble-Down Carnival Game:** Engage with the carnival game feature for added fun.
- **Launcher:** Use the kid-powered launcher to propel Gavin the Go-Kart along the track.
- **Swinging Gate:** Interact with the swinging gate to direct Gavin the Go-Kart to different paths.





Image: A child's hand activating the playset's launcher, sending the go-kart into motion on the track.

### Compatibility

The VTech Go! Go! Smart Wheels Race & Play Adventure Park is compatible with other Go! Go! Smart Wheels playsets, Go! Go! Smart Animals tracks, and select Go! Go! Smart Friends tracks (each sold separately), allowing for expanded play possibilities.

Video: An overview of the VTech Go! Go! Smart Wheels Race & Play Adventure Park, demonstrating its features and interactive elements.

## MAINTENANCE

### Cleaning

Wipe the playset and Go-Kart with a slightly damp cloth. Do not immerse in water. Avoid using harsh chemicals or abrasive cleaners.

### Battery Care

Remove batteries from Gavin the Go-Kart if it will not be used for an extended period. Dispose of used batteries responsibly.

## TROUBLESHOOTING

- **Gavin the Go-Kart is not making sounds:**
  - Ensure the power switch on the Go-Kart is in the 'ON' position.
  - Check if the batteries are correctly installed and not depleted. Replace if necessary.
  - Verify that the Go-Kart is placed directly on a SmartPoint location.
- **Track pieces are not connecting securely:**
  - Ensure all connectors are properly aligned before pushing pieces together.
  - Check for any debris or damage in the connection points.

## SPECIFICATIONS

Feature	Detail
Product Dimensions	22.17 x 45.2 x 19.02 inches
Item Weight	2 pounds
Item Model Number	80-504000
Manufacturer Recommended Age	12 months - 5 years
Batteries	2 AAA batteries required (included)
Manufacturer	V Tech
Release Date	February 10, 2017

## WARRANTY AND SUPPORT

For warranty information, product registration, or customer support, please visit the official VTech website or contact their customer service department. Keep your purchase receipt for any warranty claims.

Official VTech Website: [VTech Store on Amazon](#)

