

Mr. Dj DJBT215

Mr. Dj DJBT215 Dual 15" 5000W Max Power Speaker Instruction Manual

Model: DJBT215

1. INTRODUCTION

Thank you for purchasing the Mr. Dj DJBT215 Dual 15" 5000W Max Power Speaker. This speaker is designed to deliver powerful and clear audio for various applications, including DJ sets, parties, and events. Featuring built-in Bluetooth, multiple input options, and an intuitive control panel, the DJBT215 offers versatility and robust performance. Please read this manual thoroughly to ensure proper setup, operation, and maintenance of your speaker.

2. SAFETY INSTRUCTIONS

- **Power Source:** This speaker operates on **Corded Electric** power only. It does not have a rechargeable battery. Always connect the speaker to a compatible wall outlet (110V/220V AC) using the provided power adapter.
- **Ventilation:** Ensure adequate ventilation around the speaker. Do not block any ventilation openings.
- **Water and Moisture:** Do not expose the speaker to water, rain, or excessive moisture. This product is not waterproof.
- **Heat:** Keep the speaker away from heat sources such as radiators, heat registers, stoves, or other apparatus that produce heat.
- **Cleaning:** Clean only with a dry cloth. Do not use liquid cleaners or aerosol cleaners.
- **Servicing:** Do not attempt to service this product yourself. Refer all servicing to qualified service personnel.
- **Placement:** Place the speaker on a stable, flat surface. Avoid placing it in locations where it could fall or be knocked over.

3. PACKAGE CONTENTS

Ensure all items are present in the package:

- Mr. Dj DJBT215 Speaker Unit
- Power Adapter
- Wireless Microphone
- Remote Control
- User Manual (this document)

4. PRODUCT OVERVIEW: CONTROLS AND PORTS

The DJBT215 features a user-friendly control panel located on the top of the unit, along with various input/output ports for versatile connectivity.

4.1 Front Panel





Description: The front panel showcases the dual 15-inch woofers, protected by a metal grille. Each woofer is surrounded by dynamic LED lights that illuminate in various colors and patterns, responding to the audio.


4.2 Rear Panel





Description: The rear panel features the main power input, a voltage selector switch, and a recessed area for the control panel. It also includes integrated handles and wheels for easy portability.

4.3 Top Control Panel

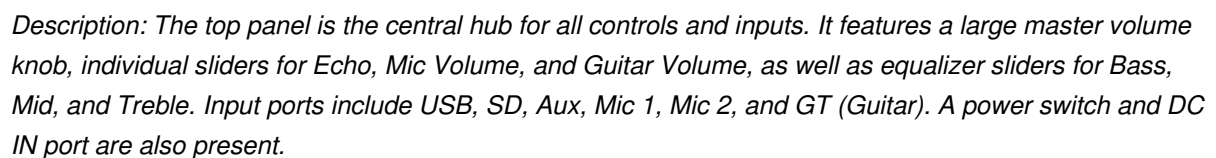

Description: This video provides a visual guide to the speaker's controls, including the power switch, various input ports (USB, SD, Aux, Mic, Guitar), volume controls, equalizer settings (Bass, Mid, Treble), and LED light functions. It demonstrates how to switch between input modes and activate Bluetooth.

5.1 Power Connection

1. Locate the AC input port on the rear panel of the speaker.

2. Ensure the voltage selector switch (if present) is set to your local voltage (110V or 220V).
3. Connect the provided power adapter to the AC input port and then to a wall outlet.
4. Flip the main power switch on the top panel to the 'ON' position (usually indicated by 'I' or 'II' for direct current).

5.2 Wireless Microphone Setup

1. Unscrew the bottom cap of the wireless microphone.
2. Insert two AA batteries (not included) into the battery compartment, observing polarity.
3. Screw the bottom cap back on.
4. Turn on the microphone using its power switch. The microphone should automatically pair with the speaker.

5.3 Wired Microphone/Guitar Connection

1. For wired microphones, connect a 1/4-inch cable from your microphone to either the 'MIC 1' or 'MIC 2' input on the top panel.
2. For a guitar, connect a 1/4-inch cable from your guitar to the 'GT' input on the top panel.
3. Adjust the 'MIC VOL' or 'GT.VOL' sliders to control the input level.

6. OPERATING INSTRUCTIONS

6.1 Power On/Off

To power on the speaker, flip the main power switch on the top panel to the 'ON' position. To power off, flip the switch to 'OFF'.

6.2 Input Source Selection

Press the 'MODE' button on the control panel to cycle through available input sources: Bluetooth, AUX, USB, and SD.

6.3 Bluetooth Pairing

1. Select 'Bluetooth' mode using the 'MODE' button. The LCD display will show 'BLUE'.
2. On your smartphone or Bluetooth-enabled device, enable Bluetooth and search for available devices.
3. Select 'Go Party ZR10' (or similar name) from the list to pair. A confirmation tone will sound upon successful pairing.

6.4 TWS (True Wireless Stereo) Pairing (for two DJBT215 speakers)

1. Ensure both DJBT215 speakers are powered on and in Bluetooth mode.
2. On one speaker (this will be your master speaker), press and hold the 'TWS' button for a few seconds.
3. The speakers will attempt to connect to each other. A confirmation tone will sound when TWS pairing is successful.
4. Once paired, connect your Bluetooth device to the master speaker as described in '6.3 Bluetooth Pairing'. Audio will now play in stereo across both speakers.

6.5 Volume Control

Adjust the large 'VOLUME' knob on the top panel to control the overall master volume of the speaker.

6.6 Equalizer Adjustment

Use the 'BASS', 'MID', and 'TREBLE' sliders on the top panel to fine-tune the audio frequency response to

your preference.

6.7 Microphone/Guitar Volume & Echo

Use the 'MIC VOL' and 'GT.VOL' sliders to adjust the individual volume levels for connected microphones and guitars. The 'ECHO' slider adds a reverberation effect to microphone inputs.

6.8 LED Light Modes

Press the 'LIGHT' button on the control panel to cycle through different LED light patterns and colors. The lights respond to the audio playback. Press and hold the 'LIGHT' button to turn the LED lights off or on.

6.9 Remote Control Usage

The included remote control allows for convenient operation of various functions from a distance, including power, mode selection, volume adjustment, track control, and equalizer presets.

7. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the speaker's exterior. Do not use abrasive cleaners, waxes, or solvents.
- **Storage:** When not in use for extended periods, store the speaker in a cool, dry place, away from direct sunlight and extreme temperatures.
- **Power Cord:** Regularly inspect the power cord for any damage. If damaged, replace it with an authorized Mr. Dj replacement cord.

8. TROUBLESHOOTING

- **No Power:** Ensure the power cord is securely connected to both the speaker and a working wall outlet. Check the main power switch.
- **No Sound:** Check the master volume level and ensure it is not muted. Verify the correct input source is selected. For Bluetooth, ensure the device is paired and playing audio. For wired inputs, check cable connections.
- **Bluetooth Pairing Issues:** Ensure the speaker is in Bluetooth mode. Turn off and on your device's Bluetooth, then try pairing again. Ensure no other devices are currently connected to the speaker.
- **Microphone/Guitar Not Working:** Check the microphone/guitar cable connection and ensure the 'MIC VOL' or 'GT.VOL' sliders are adjusted appropriately. For wireless microphones, check batteries and ensure it's powered on.
- **Distorted Sound:** Reduce the volume level on both the speaker and the audio source. Adjust the equalizer settings (Bass, Mid, Treble).

9. SPECIFICATIONS

Feature	Specification
Model Number	DJBT215
Brand	Mr. Dj
Output Wattage	5000 Watts (Max Power)
Speaker Amplification Type	Active

Number of Channels	2
Mounting Type	Floor Standing
Power Source	Corded Electric
Connectivity Technology	Bluetooth, RCA, USB, XLR
Audio Input	Bluetooth, USB, RCA, XLR, Mic (1/4"), Guitar (1/4"), Aux (3.5mm)
Compatible Devices	Smartphone, Tablet, Laptop, MP3 Player, CD Player, Guitar, Microphone
Item Weight	54 Pounds
Product Dimensions (L x W x H)	45 x 16 x 19.5 inches
Color	Black
LCD Display Size	1.5 inches
UPC	847169031397

10. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation included with your purchase or contact Mr. Dj customer service. Keep your proof of purchase for any warranty claims.