

Fossil FS5308

Fossil Men's Minimalist Quartz Stainless Steel Three-Hand Watch Instruction Manual

Model: FS5308

INTRODUCTION

This manual provides essential information for the proper setup, operation, and maintenance of your Fossil Men's Minimalist Quartz Stainless Steel Three-Hand Watch, Model FS5308. Please read these instructions carefully to ensure optimal performance and longevity of your timepiece.



Figure 1: Front view of the Fossil Men's Minimalist Quartz Stainless Steel Three-Hand Watch (Model FS5308).

PRODUCT OVERVIEW

The Fossil Minimalist watch features a 44mm black stainless steel case with a black satin dial and blue accents. It is equipped with a three-hand quartz movement and a black bracelet strap. The design emphasizes balance and proportion, inspired by mid-century modern aesthetics.

Key Features:

- **Case Diameter:** 44mm
- **Band Width:** 22mm
- **Movement:** Accurate Quartz movement with 3-hand analog display
- **Crystal:** Hardened mineral crystal lens, scratch-resistant
- **Water Resistance:** Up to 50 meters (165 feet) / 5 ATM
- **Strap:** Black stainless steel bracelet with fold-over clasp closure

- **Dial:** Black satin with Roman numeral stick indices and blue accents





Figure 2: Side view of the watch, highlighting the winding crown.



Figure 3: Rear view of the watch, displaying the stainless steel case back.

SETUP

1. Unboxing and Initial Inspection

Your Fossil watch comes packaged in a decorative tin box, protected by a paper sleeve. Carefully remove the watch from its packaging. Inspect the watch for any visible damage or defects. Ensure all protective films are removed from the crystal and case back.



Figure 4: Example of Fossil watch tin packaging.

2. Setting the Time

1. Locate the crown on the right side of the watch case (refer to Figure 2).
2. Gently pull the crown out to the first position.
3. Rotate the crown clockwise or counter-clockwise to set the hour and minute hands to the correct time.
4. Once the time is set, push the crown back in fully to its original position. The second hand will begin to move, indicating the watch is running.

3. Adjusting the Bracelet

The black stainless steel bracelet is designed for a customized fit. It features a fold-over clasp closure. If the bracelet is too loose or too tight, it may require adjustment by removing or adding links. It is recommended to have this adjustment performed by a professional jeweler or watch repair service to prevent damage to the bracelet.



Figure 5: The watch worn on a wrist, demonstrating fit.

4. Battery Information

Your watch is powered by a Quartz movement and includes one Lithium Metal battery. The battery is pre-installed and the watch should be running upon arrival. If the watch is not running, ensure the crown is fully pushed in. If the issue persists, the battery may need replacement.

OPERATING THE WATCH

Timekeeping

The watch operates with a precise three-hand quartz movement, displaying hours, minutes, and seconds. No additional functions are present on this minimalist model.

Water Resistance

This Fossil watch is water-resistant up to 50 meters (165 feet), or 5 ATM. This means it is suitable for short periods of recreational swimming, showering, or snorkeling. It is **not** recommended for scuba diving or high-impact water sports. Avoid operating the crown while the watch is wet or submerged to prevent water intrusion.

MAINTENANCE

Cleaning

- **Case and Crystal:** Wipe with a soft, damp cloth. Avoid harsh chemicals or abrasive materials.
- **Stainless Steel Bracelet:** Clean with a soft brush and mild soapy water. Rinse thoroughly and dry completely.

Battery Replacement

When the watch stops running, the battery will need to be replaced. It is recommended to have battery replacement performed by an authorized Fossil service center or a qualified watch technician to ensure proper sealing and maintain water resistance.

Storage

When not in use, store your watch in its original tin box or a soft pouch to protect it from dust, moisture, and scratches. Avoid exposing the watch to extreme temperatures or direct sunlight for prolonged periods.

TROUBLESHOOTING

- **Watch Not Running:**
 - Ensure the crown is fully pushed in.
 - If the watch still does not run, the battery may need replacement. Refer to the "Battery Replacement" section.
- **Condensation Under Crystal:**
 - This may indicate a loss of water resistance. Immediately take the watch to an authorized service center.
- **Inaccurate Timekeeping:**
 - Check if the crown is fully pushed in.
 - A weak battery can affect accuracy. Consider battery replacement.
 - Exposure to strong magnetic fields can affect quartz movement.

SPECIFICATIONS

Feature	Detail
Brand Name	Fossil
Model Name	FS5308
Item Model Number	FS5308
Case Material Type	Stainless Steel
Case Diameter	44 Millimeters
Case Thickness	8 Millimeters
Band Material Type	Stainless Steel
Band Width	22 Millimeters
Band Length	200 Millimeters
Band Color	Black
Dial Color	Black
Crystal	Mineral
Watch Movement Type	Quartz
Water Resistance Depth	50 Meters (165 Feet)
Power Source	Battery Powered (1 Lithium Metal battery included)

Clasp Type	Foldover Clasp
Item Weight	0.11 Kilograms (3.88 ounces)

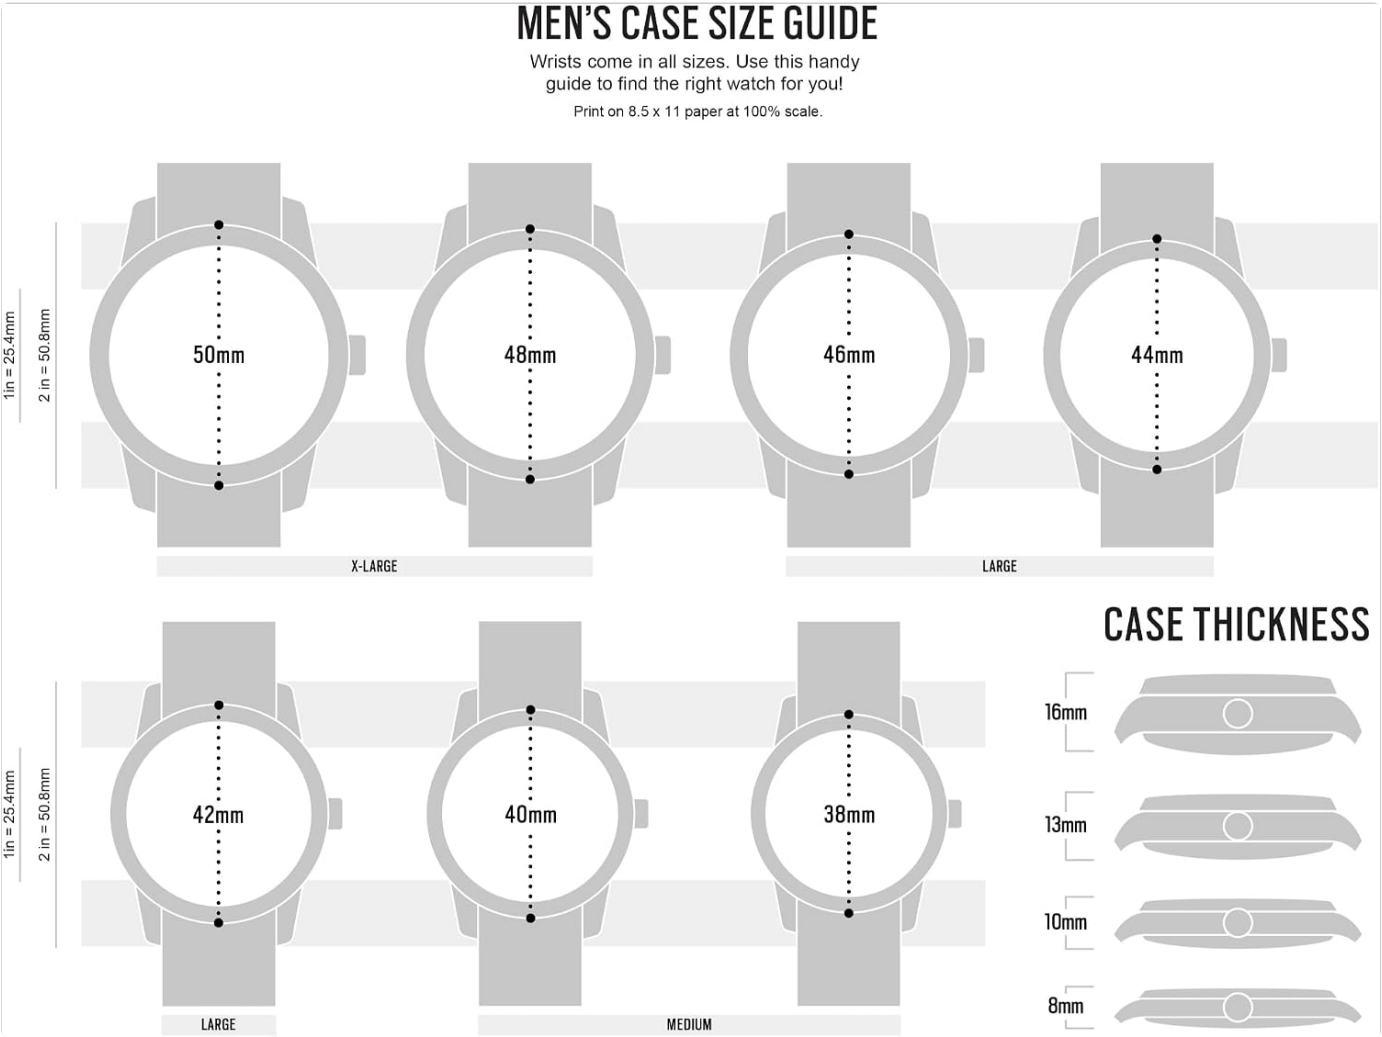


Figure 6: Men's watch case size guide for reference.

WARRANTY AND SUPPORT

Manufacturer's Warranty

This Fossil watch is covered by a manufacturer's warranty. Please refer to the warranty information provided with your purchase or visit the official Fossil website for details regarding coverage and terms. Protection plans are also available for extended coverage.

Customer Support

For any questions, service needs, or further assistance, please contact Fossil customer support. You can find contact information on the official Fossil website or through the retailer where the watch was purchased.

OFFICIAL PRODUCT VIDEO

Your browser does not support the video tag.

Video 1: Official product overview of the Fossil Men's Minimalist Quartz Stainless Steel Dress Watch, Model FS5308. This video provides a visual demonstration of the watch's features and design.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question