

[Manuals.plus](#) /

› [Cuddle Barn](#) /

› Cuddle Barn Crackin' Up Coco Animated Plush Monkey Instruction Manual

Cuddle Barn CB71125

Cuddle Barn Crackin' Up Coco Animated Plush Monkey

MODEL: CB71125 - INSTRUCTION MANUAL

1. Introduction

The Cuddle Barn Crackin' Up Coco is an animated plush monkey designed to provide interactive entertainment. This soft toy features movement and makes monkey sounds, engaging users through playful interaction. This manual provides essential information for the safe and proper use, setup, operation, and maintenance of your Crackin' Up Coco.



Image 1.1: Front view of the Cuddle Barn Crackin' Up Coco animated plush monkey. The monkey is brown with lighter brown accents on its face, ears, hands, and feet, and has a friendly, smiling expression.

2. Important Safety Information

- **Age Recommendation:** This product is recommended for ages 12 months and up.
- **Battery Safety:**
 - Use only the specified battery type (3 AA alkaline batteries).
 - Do not mix old and new batteries.
 - Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
 - Ensure batteries are inserted with correct polarity (+ and -).
 - Remove exhausted batteries promptly.
 - Remove batteries if the product is to be stored for an extended period.
 - Keep batteries out of reach of small children.
- **Cleaning:** Do not machine wash. Spot clean only with a damp towel. The product contains a mechanical module that can be damaged by water.

3. Package Contents

Upon opening the package, please ensure all items are present:

- 1 x Cuddle Barn Crackin' Up Coco Animated Plush Monkey
- 3 x AA Alkaline Batteries (pre-installed)

4. Setup Instructions

4.1 Battery Installation/Replacement

Your Crackin' Up Coco comes with 3 AA alkaline batteries pre-installed. If replacement is needed, follow these steps:

1. Locate the battery compartment on the bottom of the plush toy.
2. Using a PH1 Phillips head screwdriver, unscrew the small screw securing the battery compartment cover.
3. Remove the cover.
4. Carefully remove the old batteries and dispose of them properly.
5. Insert three new AA alkaline batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
6. Replace the battery compartment cover and secure it with the screw. Do not overtighten.

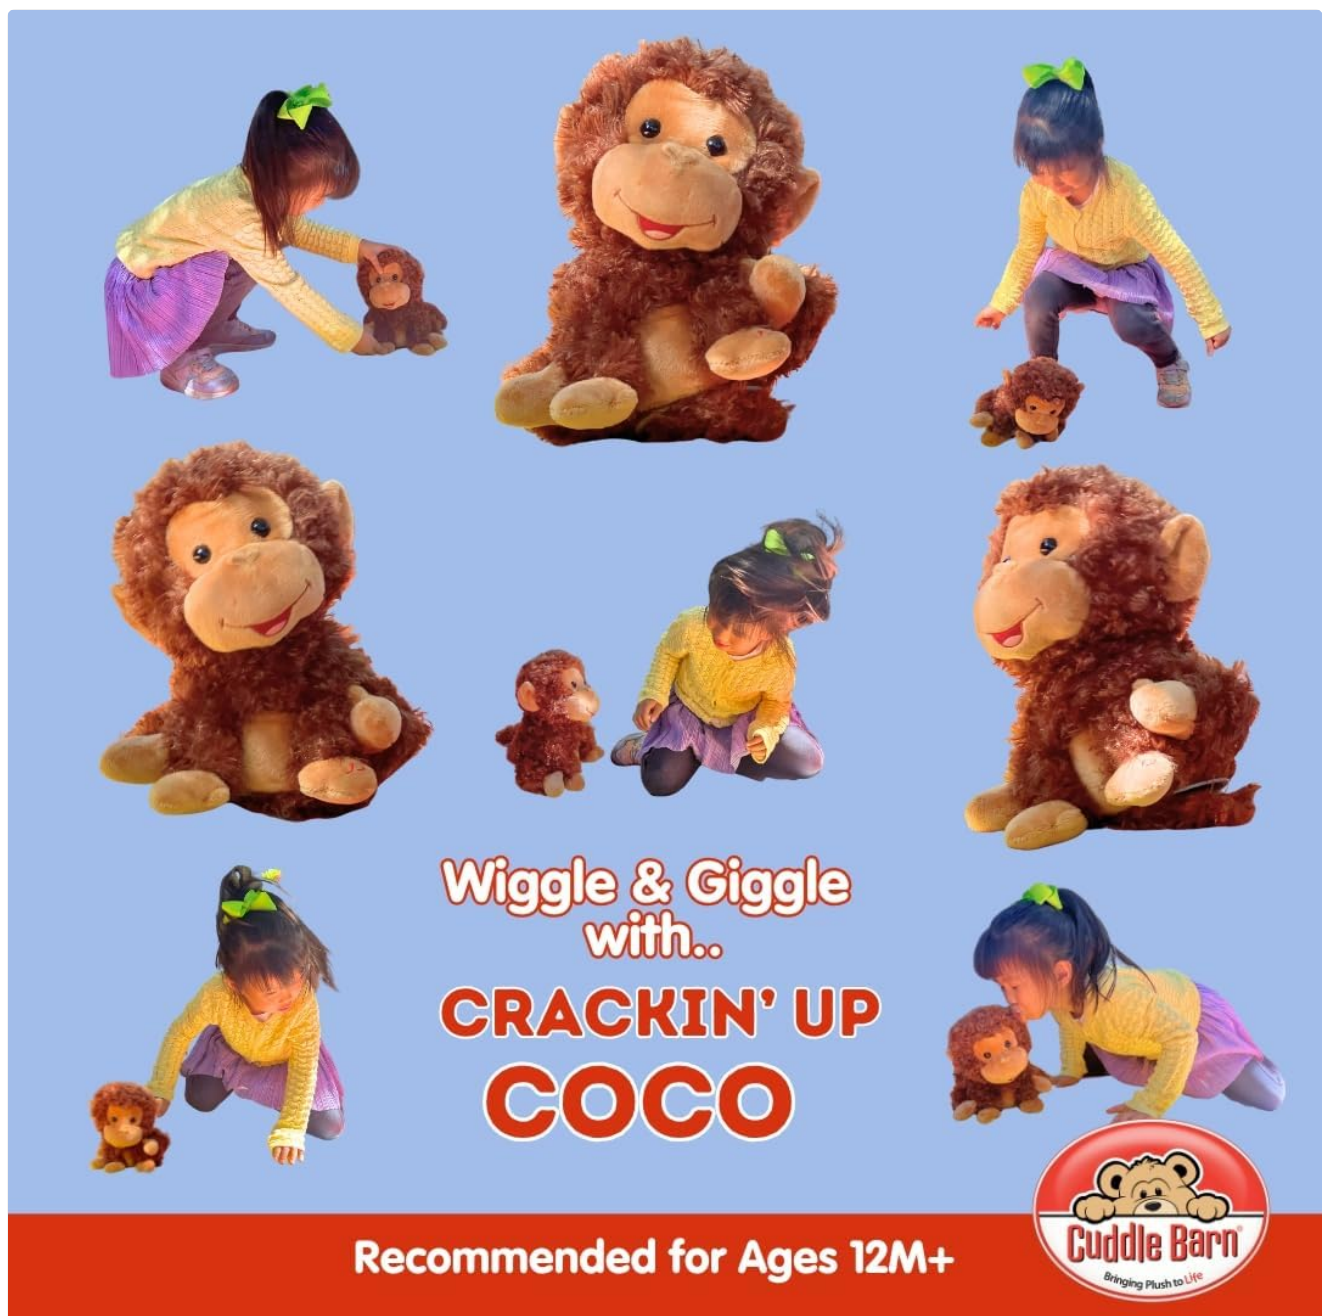


Image 4.1: This image illustrates the care instructions for Crackin' Up Coco, including details about the 3 AA alkaline batteries and the screw-secured battery compartment for child safety. It also advises against mixing battery types and machine washing.

5. Operating Your Crackin' Up Coco

5.1 Activating the Toy

To activate your Crackin' Up Coco, locate the activation point, typically a button or sensor on its paw or body. Pressing this point will initiate its animated movements and monkey sounds.



Wiggle & Giggle
with..
**CRACKIN' UP
COCO**

Recommended for Ages 12M+

Cuddle Barn
Bringing Plush to Life

Image 5.1: The Crackin' Up Coco monkey is shown in an active pose, highlighting its ability to hop, wiggle, jiggle, twirl, and make playful monkey noises, making it a fun and wiggly companion.



Image 5.2: This image shows a child gently petting the Crackin' Up Coco monkey, emphasizing its interactive nature and how it encourages imaginative play and empathy. The text also notes that moving toys promote active play and vocal development.

Note: No official product videos from the seller were provided in the product data for embedding in this manual.

6. Care and Maintenance

6.1 Cleaning Instructions

To maintain the quality and longevity of your Crackin' Up Coco, follow these cleaning guidelines:

- **Spot Clean Only:** Use a damp towel to gently clean any soiled areas.
- **Do Not Machine Wash:** The internal mechanical components are not waterproof and will be damaged by machine washing.
- **Air Dry:** Allow the plush to air dry completely after spot cleaning. Do not use a dryer or apply direct heat.

Refer to Image 4.1 for visual guidance on care instructions.

7. Troubleshooting

If your Crackin' Up Coco is not functioning as expected, please consult the table below for common issues and solutions:

Problem	Possible Cause	Solution
Toy does not move or make sounds.	Batteries are low or depleted.	Replace with fresh AA alkaline batteries (refer to Section 4.1).
Toy moves slowly or sounds are distorted.	Batteries are weak.	Replace with fresh AA alkaline batteries.
Toy stops working intermittently.	Loose battery connection or faulty batteries.	Check battery compartment for secure fit. Replace batteries if necessary.

8. Product Specifications

Detailed specifications for the Cuddle Barn Crackin' Up Coco:

- **Model Number:** CB71125
- **Product Dimensions:** 9 x 7.5 x 4 inches
- **Item Weight:** 0.32 ounces
- **Power Source:** 3 x AA batteries (included)
- **Recommended Age:** 12 months and up
- **Material:** Soft polyester material



Image 8.1: This image provides a visual representation of the Crackin' Up Coco's dimensions, showing its height, width, and depth, including the tail length.

9. Warranty Information

For specific warranty details regarding your Cuddle Barn Crackin' Up Coco, please refer to the packaging or contact Cuddle Barn customer support directly. Warranty terms typically cover manufacturing defects for a limited period from the date of purchase.

10. Support Information

If you have further questions, require assistance, or need to report an issue with your Crackin' Up Coco, please visit the official Cuddle Barn website or contact their customer service department. Contact information can typically be found on the product packaging or the brand's official website.

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question