

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

> [Magnavox](#) /

> [Magnavox MTFT750-BK Portable 7-inch TFT DVD/CD Player User Manual](#)

## Magnavox MTFT750-BK

# Magnavox MTFT750-BK Portable 7-inch TFT DVD/CD Player User Manual

Model: MTFT750-BK

## 1. INTRODUCTION

---

This manual provides detailed instructions for the safe and efficient operation of your Magnavox MTFT750-BK Portable 7-inch TFT DVD/CD Player. Please read this manual thoroughly before using the device and retain it for future reference.

The Magnavox MTFT750-BK is a versatile portable media player designed for both home and travel use. It features a 7-inch TFT screen, built-in stereo speakers, and a rechargeable battery for extended playback. It supports DVD, CD, CD-R, CD-RW, and JPEG disc formats.

# FEATURES



DVD/CD/CD-R  
/CD-RW/JPEG  
compatible



Built-in  
Rechargeable  
battery



TFT  
Display



Built-in  
Stereo  
Speaker



Headphone  
jack for  
playback



MAGNAVOX

**Image Description:** This graphic highlights the key features of the Magnavox MTFT750-BK Portable DVD Player. It lists compatibility with DVD/CD/CD-R/CD-RW/JPEG, a 2.5-hour built-in rechargeable battery, a 7-inch TFT display, built-in stereo speakers, and a 3.5mm headphone jack for playback. The player itself is shown open, displaying a scenic image on its screen.

## 2. IMPORTANT SAFETY INFORMATION

- **Power Source:** Use only the provided AC adapter or car adapter. Do not use unauthorized power sources.
- **Battery Care:** Do not expose the battery to excessive heat or direct sunlight. Do not attempt to disassemble or replace the built-in rechargeable battery.
- **Water and Moisture:** Keep the device away from water, rain, and excessive humidity. Do not operate with wet hands.
- **Ventilation:** Ensure proper ventilation around the device. Do not block ventilation openings.
- **Cleaning:** Disconnect the power before cleaning. Use a soft, dry cloth. Do not use liquid or aerosol cleaners.
- **Service:** Do not attempt to service this product yourself. Refer all servicing to qualified service personnel.
- **Disc Handling:** Handle discs by their edges. Keep discs clean and free from scratches.

### 3. PACKAGE CONTENTS

---

Verify that all items listed below are included in your package. If any items are missing or damaged, contact customer support.

- Magnavox MTFT750-BK Portable DVD/CD Player
- Remote Control (2 AAA batteries included)
- AC Power Adapter
- Car Power Adapter
- User Manual (this document)



**Image Description:** This image displays the Magnavox MTFT750-BK Portable DVD Player's included accessories. From left to right, it shows an AC power adapter, the remote control with two AAA batteries, and a car power adapter. These are laid out on a textured surface, indicating the complete set of items provided with the player.

### 4. PRODUCT OVERVIEW

---

Familiarize yourself with the various parts and controls of your portable DVD player.



**Image Description:** This image shows the Magnavox MTFT750-BK Portable DVD Player in its open position, revealing the 7-inch TFT screen and the disc tray. A remote control is positioned to the left of the player, displaying its various buttons for power, navigation, volume, and playback functions. The player has a black casing with silver accents and a white handle.

#### 4.1 Front View

- **7-inch TFT Screen:** Displays video content.
- **Disc Tray:** For inserting DVDs and CDs.
- **Control Buttons:** Play, Pause, Stop, Skip, Volume, Menu, etc. (located around the disc tray).
- **Built-in Speakers:** For audio output.

#### 4.2 Side View (Ports and Connections)

- **DC IN Port:** For connecting the AC or car power adapter.
- **Headphone Jack (3.5mm):** For connecting headphones for private listening.
- **AV OUT Jack:** For connecting to an external display or audio system.
- **Power ON/OFF Switch:** To turn the device on or off.



**Image Description:** This image shows a side profile of the Magnavox MTFT750-BK Portable DVD Player, highlighting its compact design and dimensions. The player is shown closed, with measurements indicating a width of approximately 10 inches, a length of 12 inches, and a thickness of 2.8 inches. The side panel reveals various ports and controls, including the power switch, headphone jack, and DC input.

## 5. SETUP

### 5.1 Charging the Battery

Before initial use, fully charge the built-in rechargeable battery.

1. Connect the AC power adapter to the DC IN port on the side of the player.

2. Plug the AC power adapter into a standard wall outlet.
3. The charging indicator light will illuminate. Allow approximately 3 hours for a full charge.
4. Once fully charged, the player can operate for up to 2.5 hours on battery power.

## 5.2 Installing Remote Control Batteries

The remote control requires two AAA batteries (included).

1. Open the battery compartment cover on the back of the remote control.
2. Insert two AAA batteries, ensuring correct polarity (+ and -).
3. Close the battery compartment cover.

## 6. OPERATING INSTRUCTIONS

---

### 6.1 Powering On/Off

- To turn on: Slide the Power ON/OFF switch to the "ON" position. The screen will illuminate.
- To turn off: Slide the Power ON/OFF switch to the "OFF" position.

### 6.2 Playing a DVD or CD

1. Open the disc cover gently.
2. Place a DVD or CD onto the spindle with the label side facing up. Ensure the disc is securely seated.
3. Close the disc cover.
4. The player will automatically detect the disc and begin playback. If not, press the **PLAY** button on the player or remote.



**Image Description:** This image illustrates the dual functionality of the Magnavox MTFT750-BK Portable DVD Player. The left side shows a person listening to music with headphones, while the player's screen displays a music interface. The right side shows two people watching a movie, with the player's screen displaying a video scene. This highlights the ability to both listen to music and watch movies.

### 6.3 Using the Remote Control

Point the remote control directly at the infrared sensor on the player for optimal response.

- **Power:** Turns the player on or off.
- **Play/Pause:** Starts or pauses playback.
- **Stop:** Stops playback.
- **Skip (<< / >>):** Skips to the previous or next track/chapter.
- **Volume (+ / -):** Adjusts the audio volume.
- **Menu:** Accesses the disc menu.
- **Setup:** Accesses the system setup menu.
- **OSD (On-Screen Display):** Displays playback information.

## 6.4 Connecting Headphones

For private listening, plug any standard 3.5mm headphones into the headphone jack on the side of the player. The built-in speakers will automatically mute.



**Image Description:** This image shows a person in a car connecting a 3.5mm audio jack into the headphone port of the Magnavox MTFT750-BK Portable DVD Player. The player is open, displaying its screen, and is positioned on the center console. This illustrates the use of the AUX headphone output for personal audio.

## 6.5 Using in a Vehicle

The included car adapter allows you to power the player using your vehicle's 12V power outlet.

1. Connect the car adapter to the DC IN port on the player.
2. Plug the other end of the car adapter into your vehicle's 12V power outlet (cigarette lighter socket).
3. Ensure the vehicle's ignition is on for power supply.

## 7. MAINTENANCE

---

## 7.1 Cleaning the Player

- Always disconnect the power adapter before cleaning.
- Use a soft, dry, lint-free cloth to wipe the exterior surfaces.
- For the screen, use a screen-specific cleaning solution and a microfiber cloth, applying gentle pressure.
- Do not use abrasive cleaners, waxes, or solvents.

## 7.2 Disc Care

- Handle discs by their edges to avoid fingerprints.
- Clean discs with a soft, lint-free cloth, wiping from the center outwards.
- Store discs in their cases to prevent scratches and dust accumulation.

---

## 8. TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	Battery drained; Power adapter not connected; Power switch off.	Charge the battery; Connect power adapter securely; Slide power switch to ON.
Disc not playing	Disc inserted incorrectly; Disc is dirty or scratched; Unsupported disc format.	Reinsert disc correctly; Clean or replace disc; Ensure disc is DVD/CD/CD-R/CD-RW/JPEG.
No sound	Volume too low; Headphones connected; Mute function active.	Increase volume; Disconnect headphones if using speakers; Check mute setting.
Remote control not working	Batteries drained or incorrectly inserted; Obstruction between remote and player; Remote not pointed at sensor.	Replace batteries, check polarity; Remove obstructions; Point remote directly at the player's IR sensor.
Screen is blank or distorted	Player is off; Connection issue (if using AV out); Screen settings.	Turn player on; Check AV cable connection; Reset display settings if accessible.

---

## 9. SPECIFICATIONS

Model Number	MTFT750-BK
Screen Size	7 Inches
Display Type	TFT LCD
Compatible Media	DVD, CD, CD-R, CD-RW, JPEG
Battery Life	Up to 2.5 hours (rechargeable)
Audio Output	Built-in Stereo Speakers, 3.5mm Headphone Jack, AV OUT Jack
Power Source	AC Adapter (100-240V), Car Adapter (12V)
Dimensions (L x W x H)	12.04 x 10.04 x 2.83 inches (approx.)
Weight	2.16 pounds (approx.)

## 10. WARRANTY AND SUPPORT

---

### 10.1 Warranty Information

Magnavox products are designed for reliability and performance. For specific warranty details regarding your MTFT750-BK Portable DVD/CD Player, please refer to the warranty card included in your product packaging or visit the official Magnavox website. Keep your purchase receipt as proof of purchase for warranty claims.

### 10.2 Customer Support

If you encounter issues not covered in the troubleshooting section or require further assistance, please contact Magnavox customer support.

- **Online Support:** Visit the official Magnavox website for FAQs, product registration, and support contact information.
- **Telephone Support:** Refer to your product packaging or the Magnavox website for the most current customer service telephone numbers.

When contacting support, please have your model number (MTFT750-BK) and purchase date available.

