

Dirt Devil BD22052

Dirt Devil Power Swerve Pet Cordless Stick Vacuum Cleaner User Manual

Model: BD22052 | Brand: Dirt Devil (Manufactured by Hoover)

1. INTRODUCTION

The Dirt Devil Power Swerve Pet Cordless Stick Vacuum Cleaner is designed for efficient cleaning across various floor types. This lightweight, bagless, and rechargeable vacuum offers powerful, fade-free suction for both carpet and hard floors, making it ideal for homes with pets. Its versatile design allows for easy maneuverability and convenient storage.



Figure 1: Dirt Devil Power Swerve Pet Cordless Stick Vacuum Cleaner

2. IMPORTANT SAFETY INFORMATION

Please read all instructions carefully before using this appliance. Failure to follow these instructions may result in electric shock, fire, or serious injury. Keep this manual for future reference.

- Always disconnect the charger from the power outlet before cleaning or performing maintenance.
- Do not use outdoors or on wet surfaces.
- Do not allow children to operate the vacuum. Close supervision is necessary when used near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Keep cord away from heated surfaces.
- Do not handle plug or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.

- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Use extra care when cleaning on stairs.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Store the appliance indoors in a cool, dry area.

3. PACKAGE CONTENTS

Your Dirt Devil Power Swerve Pet Cordless Stick Vacuum Cleaner package includes the following items:

- Cordless Stick Vacuum
- Charger

4. SETUP

4.1 Assembly

1. Carefully remove all components from the packaging.
2. Attach the handle to the main vacuum body until it clicks securely into place.
3. Connect the floor nozzle to the main vacuum body, ensuring a firm connection.

4.2 Initial Charging

Before first use, fully charge the vacuum's 16V lithium battery. Charging typically takes approximately 60 minutes. The battery provides faster charging, longer runtime, and powerful, fade-free suction.



Figure 2: Side view of the vacuum, illustrating its compact design.

5. OPERATING INSTRUCTIONS

5.1 Powering On/Off

Press the power button located on the handle to turn the vacuum on or off.

5.2 Using as a Stick Vacuum

For general floor cleaning, use the vacuum in its upright stick configuration. The premium SPIN3PRO brush roll is optimized for effective cleaning and pet hair removal on both carpet and hard floors. Built-in headlights illuminate the cleaning path, and swivel steering allows for easy navigation around furniture.



Figure 3: Man demonstrating the vacuum's use on carpet.



Figure 4: The vacuum in use in a typical home setting.

5.3 Converting to Handheld Mode

The main vacuum body detaches from the handle and floor nozzle to function as a handheld vacuum. This mode is ideal for cleaning upholstery, stairs, car interiors, and other hard-to-reach areas.



Figure 5: Close-up view of the SPIN3PRO brush roll.

6. MAINTENANCE

Regular maintenance ensures optimal performance of your vacuum cleaner.

6.1 Emptying the XL Dirt Cup

The XL dirt cup means fewer trips to the trashcan. To empty, press the release button and detach the dirt cup. Dispose of collected debris into a waste bin. Reattach the dirt cup securely.

6.2 Cleaning the Carbon Pet Filter

The carbon pet filter helps prevent odors. Remove the filter from the dirt cup and tap it gently over a trash can to remove loose dirt. For deeper cleaning, rinse the filter with water and allow it to air dry completely before reinserting. Do not operate the vacuum with a wet filter.

6.3 Cleaning the SPIN3PRO Brush Roll

Periodically check the brush roll for tangled hair or debris. To clean, remove the brush roll cover (refer to the diagram in your printed manual for specific instructions) and carefully cut away any wrapped hair or fibers. Reinstall the brush roll and cover securely.

7. TROUBLESHOOTING

If you encounter issues with your Dirt Devil Power Swerve Pet Cordless Stick Vacuum, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Vacuum does not turn on	Battery is not charged; Power button not pressed.	Ensure battery is fully charged. Press the power button firmly.

Problem	Possible Cause	Solution
Reduced suction	Dirt cup is full; Filter is clogged; Obstruction in nozzle/hose.	Empty dirt cup. Clean or replace filter. Check for and remove any obstructions.
Brush roll not spinning	Hair or debris tangled in brush roll; Brush roll mechanism worn.	Clean brush roll of tangled hair. If mechanism is worn, contact customer support for replacement parts or service.

8. SPECIFICATIONS

Feature	Detail
Brand	Dirt Devil
Model Name	Power Swerve Pet
Item Model Number	BD22052
Special Feature	Cordless
Filter Type	Disk
Included Components	Vacuum, Charger
Capacity	0.5 Liters
Wattage	6 watts
Charging Time	60 minutes
Form Factor	Stick, Upright
Color	Red
Product Dimensions	10"L x 7"W x 44"H
Battery Description	Lithium-Ion (1 included)
Noise Level	75 Decibels
Amperage	16 Amps
Item Weight	5.2 pounds
Indoor/Outdoor Usage	Indoor
Specific instructions for use	Hard Floor, Carpet
Assembly required	Yes

9. WARRANTY AND SUPPORT

This Dirt Devil Power Swerve Pet Cordless Stick Vacuum Cleaner comes with a 2-year limited warranty. For warranty claims, technical support, or to order replacement parts, please contact Dirt Devil customer service. Contact information can typically be found on the product packaging or the official Dirt Devil website.

	Dirt Devil Vibe 3-in-1 Vacuum Cleaner Owner's Manual and Operating Instructions Comprehensive guide for the Dirt Devil Vibe 3-in-1 Vacuum Cleaner (SD20020), covering assembly, operation, maintenance, troubleshooting, and warranty information.
	Dirt Devil Vibe 3-in-1 Corded Bagless Stick Vacuum Owner's Manual and Guide Comprehensive owner's manual for the Dirt Devil Vibe 3-in-1 Corded Bagless Stick Vacuum (Model SD20020). Includes operating instructions, safety warnings, troubleshooting guide, and limited warranty information.
	Dirt Devil Endura Upright Vacuum Cleaner User Manual This user manual provides instructions for assembling, operating, and maintaining the Dirt Devil Endura Upright Carpet + Hard Floor Cyclonic Upright Vacuum Cleaner. Includes troubleshooting and warranty information.
	Dirt Devil Cordless Standing Stick Vacuum User Manual Comprehensive user manual for the Dirt Devil Cordless Standing Stick Vacuum, models BD57000V and BD57010V. Covers essential safety warnings, step-by-step assembly, operating instructions, maintenance procedures, troubleshooting tips, and warranty information.
	Dirt Devil Corded Stick Vacuum User Manual: Operation, Safety, and Troubleshooting This user manual provides essential information for the Dirt Devil Corded Stick Vacuum, covering safe operation, assembly, maintenance, troubleshooting common issues, and warranty details. Learn how to use your vacuum effectively and safely.
	Dirt Devil Carpet + Hard Floor Cyclonic Upright User Manual Comprehensive user manual for the Dirt Devil Carpet + Hard Floor Cyclonic Upright vacuum cleaner. Includes setup, operation, maintenance, troubleshooting, and warranty information for models UD70180, UD70183, and UD70185.