

Parkside PNTS 1300 C3

Parkside PNTS 1300 C3 Wet and Dry Vacuum Cleaner Dust Bags

Instruction Manual

INTRODUCTION

This manual provides essential information for the correct installation, operation, and maintenance of your Parkside PNTS 1300 C3 Wet and Dry Vacuum Cleaner Dust Bags. Please read these instructions carefully before use to ensure optimal performance and safety.

These 20-liter paper filter bags are specifically designed for use with Parkside PNTS wet and dry vacuum cleaners, including model PNTS 1300 C3. They are constructed from high-quality, tear-resistant paper to effectively capture dust and debris.

SAFETY INFORMATION

Always follow the safety guidelines provided with your Parkside wet and dry vacuum cleaner. These dust bags are designed for dry vacuuming applications only. Do not use these paper bags for wet vacuuming, as this can damage the bag and the vacuum cleaner.

- Ensure the vacuum cleaner is unplugged from the power supply before installing or replacing dust bags.
- Do not attempt to vacuum hazardous materials, hot ashes, or sharp objects that could puncture the bag.
- Replace the dust bag when it is full to maintain vacuum performance and prevent damage to the motor.
- Keep packaging materials away from children to prevent suffocation hazards.

PACKAGE CONTENTS

Your package should contain the following items:

- 5 x Parkside PNTS 1300 C3 Wet and Dry Vacuum Cleaner Dust Bags (20 Liters, Brown, Paper)



DE Filtertüten für Nass- und Trockensauger GB Vacuum Cleaner Dust Bags
FR Sacs pour aspirateur IT Sacchetti filtranti ES Bolsas de filtro



DE Geeignet für folgende Modelle ES Adecuado para los siguientes modelos
GB Suitable for the following models IT Adatto ai seguenti modelli
FR Convient pour les modèles suivants PNTS 1250, 1300, PWD 12

Image: Five 20L paper dust bags, indicating a pack of 5 and compatibility with PNTS 1250, 1300, and PWD 12 models.

SETUP: INSTALLING THE DUST BAG

1. **Prepare the Vacuum Cleaner:** Ensure your Parkside wet and dry vacuum cleaner is unplugged from the power outlet. Open the vacuum cleaner housing according to its specific instructions to access the internal drum.
2. **Remove Old Bag (if applicable):** If an old dust bag is present, carefully remove it. Dispose of the full bag responsibly.
3. **Insert New Dust Bag:** Take one new Parkside 20L paper filter bag. Locate the cardboard collar with the opening. Align this opening with the vacuum cleaner's suction inlet inside the drum.
4. **Secure the Bag:** Push the cardboard collar firmly onto the suction inlet until it is securely seated. Ensure the bag unfolds properly inside the drum without obstructing the lid closure.



DE Filtertüten für Nass- und Trockensauger GB Vacuum Cleaner Dust Bags
FR Sacs pour aspirateur IT Sacchetti filtranti ES Bolsas de filtro



DE Leicht austauschbar FR Facilement interchangeable
GB Easily interchangeable IT Facilmente intercambiabile
ES Fácilmente intercambiabile

Image: A new paper dust bag being installed into the vacuum cleaner's internal compartment, showing the cardboard collar fitting over the inlet.



DE Filtertüten für Nass- und Trockensauger GB Vacuum Cleaner Dust Bags
FR Sacs pour aspirateur IT Sacchetti filtranti ES Bolsas de filtro



DE 2-lagig mit Verschluss FR Filtre en papier double couche avec fermeture
GB 2-ply paper filter IT a 2 veli con chiusura ES de 2 capas con cierre

Image: Detailed view of the dust bag's opening mechanism, highlighting the durable cardboard and rubber seal for a secure fit.

OPERATING WITH DUST BAGS

Once the dust bag is correctly installed and the vacuum cleaner housing is closed and secured, you can begin dry vacuuming. The paper filter bag is designed to collect dry debris, dust, and fine particles, preventing them from reaching the motor and maintaining air quality.

These bags are versatile and suitable for various dry cleaning tasks, from workshop debris to household dust.



DE Filtertüten für Nass- und Trockensauger GB Vacuum Cleaner Dust Bags
FR Sacs pour aspirateur IT Sacchetti filtranti ES Bolsas de filtro



DE vielseitig einsetzbar GB versatile FR polyvalent ES versátil IT versatile

Image: Illustrates the versatility of the dust bags for different dry cleaning applications, showing various nozzles and debris types.



DE Filtertüten für Nass- und Trockensauger GB Vacuum Cleaner Dust Bags
FR Sacs pour aspirateur IT Sacchetti filtranti ES Bolsas de filtro



DE Papier aus verantwortungsvollen Quellen FR Papier issu de sources responsables
ES Papel procedente de fuentes responsables GB Paper from responsible sources
IT Carta da fonti gestite in maniera responsabile

Image: A Parkside vacuum cleaner actively cleaning a floor, demonstrating typical usage. The FSC Mix logo indicates responsible sourcing of materials.

MAINTENANCE: REPLACING THE DUST BAG

For optimal vacuum performance and to prevent strain on the motor, it is crucial to replace the dust bag regularly. Replace the bag when it is full, or when you notice a significant decrease in suction power.

1. **Power Off and Unplug:** Always turn off and unplug the vacuum cleaner before performing any maintenance.
2. **Open Housing:** Open the vacuum cleaner housing.
3. **Remove Full Bag:** Carefully detach the full dust bag from the suction inlet. The bags are designed with high tear resistance to minimize the risk of tearing during removal.
4. **Dispose:** Seal the opening of the full bag (if applicable) and dispose of it according to local waste disposal regulations.
5. **Install New Bag:** Follow the "Setup: Installing the Dust Bag" instructions to insert a new bag.



DE Filtertüten für Nass- und Trockensauger GB Vacuum Cleaner Dust Bags
FR Sacs pour aspirateur IT Sacchetti filtranti ES Bolsas de filtro



DE Hohe Reißfestigkeit IT Elevata resistenza del riso
GB High rice strength FR grande résistance au riz ES Alta resistencia del arroz

Image: The dust bag highlighting its high tear resistance feature, ensuring durability during use and removal.

TROUBLESHOOTING

• Reduced Suction Power:

- Check if the dust bag is full and replace it if necessary.
- Ensure the dust bag is correctly installed and securely attached to the suction inlet.
- Inspect the vacuum cleaner's hose, nozzles, and filters for blockages.

• Dust Escaping:

- Verify that the dust bag is properly sealed around the suction inlet.
- Check for any tears or damage to the dust bag. Replace if damaged.
- Ensure the vacuum cleaner housing is closed and sealed correctly.

SPECIFICATIONS

Brand	Parkside
Model Compatibility	Parkside PNTS 1300 C3 (also PNTS 1250, PWD 12)
Item Model Number	30250132 1300C3 270424
Material	Paper
Color	Brown
Capacity	20 Liters
Number of Items	5
Special Features	Tear-resistant
Package Dimensions	32.6 x 19.2 x 4.3 cm
Package Weight	350 grams
Manufacturer	Grizzly

WARRANTY AND SUPPORT

For specific warranty information regarding your Parkside vacuum cleaner or its accessories, please refer to the documentation provided with your vacuum cleaner unit. These dust bags are consumable items.

If you have questions or require further assistance, please contact Parkside customer support or the retailer where you purchased the product.

© 2026 Parkside. All rights reserved. Information subject to change without notice.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question