

[Manuals.plus](#) /

› [CIARRA](#) /

› CIARRA CBCS6201 Cooker Hood User Manual

CIARRA CBCS6201

CIARRA CBCS6201 Cooker Hood User Manual

Model: CBCS6201 | Brand: CIARRA

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation, installation, and maintenance of your CIARRA CBCS6201 Cooker Hood. Please read this manual thoroughly before installation and use, and keep it for future reference.



Image: The CIARRA CBCS6201 cooker hood in silver, showcasing its A++ energy efficiency rating and included carbon filters.

2. SAFETY INFORMATION

Always adhere to local regulations regarding the discharge of exhaust air. Ensure proper ventilation in the room when the cooker hood is operating simultaneously with other appliances burning gas or other fuels. Do not flambé under the cooker hood. Regularly clean the appliance and its filters to prevent fire hazards. Disconnect the appliance from the power supply before any cleaning or maintenance. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

3. SETUP AND INSTALLATION

The CIARRA CBCS6201 cooker hood is designed for wall-mounted installation. It offers a straightforward installation process with all necessary accessories included.

3.1 Included Components

- 1 x Bag of screws
- 1 x Pair of carbon filters (CBCF002X2)
- 2 x Aluminum grease filters

- 2 x Chimney extensions (40+40 cm)
- 1 x Exhaust pipe (1.5 m)
- 1 x Instruction manual
- 1 x Standard plug



Image: All components supplied for the installation of the CIARRA CBCS6201 cooker hood, including the manual, filters, screws, and ducting.

3.2 Installation Steps (General)

1. Unpack the cooker hood and all accessories.
2. Determine the desired mounting height above your cooking surface. Refer to the detailed instruction manual for specific height recommendations for different hob types (gas, electric, induction).
3. Mark the drilling points on the wall using the provided template.
4. Drill holes and insert wall plugs.
5. Mount the cooker hood securely to the wall.

6. Install the chimney extensions.
7. Connect the exhaust pipe for external evacuation or install the carbon filters for recirculation mode.
8. Connect the power supply.

Note: For detailed, step-by-step installation instructions, please refer to the dedicated instruction manual included in the packaging.

4. OPERATING INSTRUCTIONS

The CIARRA CBCS6201 features an intuitive control panel for easy operation.

4.1 Control Panel



Image: Close-up of the mechanical push-button control panel on the CIARRA cooker hood, showing controls for power, fan speeds, and lighting.

The front-mounted ergonomic buttons allow you to easily adjust fan speed and lighting.

4.2 Fan Speed Settings

The cooker hood offers 3 levels of fan speed to effectively ventilate your kitchen, even in spacious areas. This helps eliminate fumes and odors quickly.

- **Speed 1:** For light cooking, simmering, or maintaining air quality.
- **Speed 2:** For general cooking, frying, or moderate steam/odor.
- **Speed 3:** For intense cooking, deep frying, or strong odors.



Image: The CIARRA cooker hood in operation, demonstrating its strong extraction capabilities with steam rising from pots on a hob.

4.3 Lighting

The integrated LED lighting illuminates your cooking area for better visibility. Press the light button on the control panel to turn the light on or off.



Image: Close-up of the energy-efficient LED light strip on the underside of the CIARRA cooker hood, providing illumination to the cooking surface.

4.4 Ventilation Modes

The cooker hood supports two ventilation modes:

- **External Evacuation (Ducted Mode):** Air is extracted and discharged outside through the included 1.5m exhaust pipe. This mode offers maximum efficiency in removing cooking fumes and odors.
- **Recirculation Mode (Ductless Mode):** Air is filtered through the included CBCF002X2 carbon filters and then recirculated back into the kitchen. This mode is suitable when external venting is not possible.



Image: Diagram illustrating the air flow in recirculation mode, where air is filtered and returned to the kitchen.



Image: Diagram illustrating the air flow in ducted extraction mode, where air is expelled outside.

Important: When purchasing active carbon filters, pay attention to the new and old versions to ensure compatibility.

5. MAINTENANCE

Regular maintenance ensures optimal performance and longevity of your cooker hood.

5.1 Cleaning Grease Filters

The aluminum grease filters are designed to capture grease particles from cooking fumes. They should be cleaned regularly (approximately every 2-4 weeks, depending on usage) to maintain effective suction.

- Remove the grease filters by releasing their latches.
- Wash the filters by hand in hot soapy water or in a dishwasher on a low-temperature cycle.
- Ensure filters are completely dry before re-installing.



Image: A detailed view of the aluminum grease filter mesh, designed to trap cooking fats.

5.2 Replacing Carbon Filters (for Recirculation Mode)

Carbon filters absorb odors and should be replaced every 3-6 months, depending on usage. They cannot be washed or

regenerated.

- Remove the grease filters to access the carbon filters.
- Twist or unclip the old carbon filters and remove them.
- Install new carbon filters, ensuring they are securely in place.
- Re-install the grease filters.



Image: A pair of circular carbon filters, used for odor absorption in recirculation mode.

5.3 General Cleaning

Clean the exterior of the cooker hood regularly with a soft cloth and a mild, non-abrasive detergent. Avoid using harsh chemicals or abrasive materials that could damage the stainless steel finish.

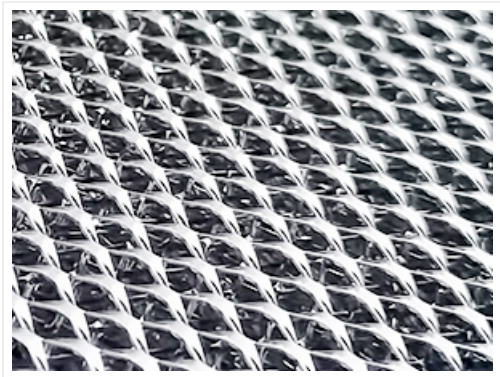


Image: A hand wiping the exterior of the CIARRA cooker hood with a soft cloth, demonstrating ease of cleaning.

6. TROUBLESHOOTING

This section addresses common issues you might encounter with your cooker hood.

Problem	Possible Cause	Solution
Cooker hood not working	No power supply; Power cord disconnected; Fuse blown.	Check power connection; Ensure plug is fully inserted; Check household fuse/circuit breaker.
Insufficient suction	Grease filters clogged; Carbon filters saturated (recirculation mode); Exhaust pipe blocked or too long/narrow; Incorrect installation height.	Clean grease filters; Replace carbon filters; Check exhaust pipe for obstructions; Verify installation height according to manual.

Problem	Possible Cause	Solution
Excessive noise	Loose components; Motor imbalance; Exhaust pipe not properly secured or too restrictive.	Check for loose screws or parts; Ensure exhaust pipe is correctly installed and not kinked; Contact customer support if noise persists.
Light not working	LED lamp faulty; Wiring issue.	Contact customer support for lamp replacement or wiring inspection. (Note: LED lamps are generally not user-replaceable).



Image: A graph comparing the noise level of the CIARRA cooker hood (62dB) to a vacuum cleaner (70-80dB) and normal speaking (40-60dB), indicating its operational sound.

7. SPECIFICATIONS

Feature	Specification
Model Number	CBCS6201
Material	Stainless Steel, Aluminum
Mounting Type	Wall-mounted
Dimensions (L x W x H)	48.2 x 60 x 57.3 cm
Weight	7.31 kg
Airflow Capacity	370 m³/h
Noise Level	63 dB(A)
Fan Speeds	3
Controls	Push Button
Voltage	220 Volt
Light Source	LED
Power (Light)	40 Watt
Filter Type	Aluminum (Grease), Carbon (Odor)
Ventilation Type	Ductless/Recirculation and Ducted/Vented
Energy Efficiency Class	A++
UPC	603981973136
Country of Origin	China

8. WARRANTY AND SUPPORT

For information regarding warranty and returns, please refer to the Amazon return policy. If you wish to return a product within 30 days of receipt because you have changed your mind, please consult the Amazon help page on returns. If you have received a defective or damaged product, please consult the Amazon help page on defective or damaged products. For specific information on purchases made on the Marketplace, please consult the Amazon help page on Marketplace purchases.

For product-specific support or technical assistance, please contact CIARRA customer service. Contact details can typically be found on the manufacturer's website or within the product packaging.

