

[Manuals.plus](#) /

› [Sector No Limits](#) /

› Sector No Limits Men's Chronograph Watch R3253575006 Instruction Manual

Sector No Limits R3253575006

Sector No Limits Men's Chronograph Watch R3253575006 Instruction Manual

Model: R3253575006

1. INTRODUCTION

Thank you for choosing the Sector No Limits R3253575006 Men's Chronograph Watch. This manual provides detailed instructions for the proper setup, operation, and maintenance of your new timepiece. Please read this manual thoroughly to ensure optimal performance and longevity of your watch.



Image 1.1: Front view of the Sector No Limits R3253575006 chronograph watch. This image displays the watch's silver dial, chronograph subdials, and the steel bracelet with dark accents.

2. SETUP

2.1 Unboxing and Initial Inspection

Upon receiving your watch, carefully remove it from its packaging. Inspect the watch for any visible damage. Ensure all protective films are removed before use.



Image 2.1: The Sector No Limits watch packaging. The black box features the brand logo and is designed to securely hold the watch.

2.2 Setting the Time

1. Pull the crown (B) out to the second click position.
2. Rotate the crown (B) to set the hour and minute hands to the correct time.
3. Once the time is set, push the crown (B) back into its normal position.



Image 2.2: Side view of the watch, highlighting the crown (B) and chronograph pushers (A and C). The case back with water resistance marking is also visible.

2.3 Chronograph Hand Zero Reset

If the chronograph hands (small seconds, minute, or 24-hour subdial hands) are not aligned to the zero position, they can be reset:

1. Pull the crown (B) out to the second click position.
2. Press pusher A (top pusher) to adjust the chronograph second hand.
3. Press pusher C (bottom pusher) to adjust the chronograph minute hand or 24-hour hand (if applicable).
4. Once all chronograph hands are at their zero positions, push the crown (B) back into its normal position.

3. OPERATING THE CHRONOGRAPH

Your Sector No Limits R3253575006 watch features a chronograph function for measuring elapsed time.

1. **Start:** Press pusher A (top pusher) to start the chronograph. The chronograph second hand will begin to move.
2. **Stop:** Press pusher A again to stop the chronograph. The elapsed time will be indicated by the chronograph hands.
3. **Reset:** After stopping the chronograph, press pusher C (bottom pusher) to reset all chronograph hands to their zero positions.
4. **Intermediate Time (Split Time):** This model may not support split time. Refer to the movement's specific manual if more advanced functions are desired.

4. MAINTENANCE

4.1 Cleaning Your Watch

To maintain the appearance of your watch, wipe the case and bracelet regularly with a soft, dry cloth. For metal bracelets, a slightly damp cloth can be used, followed by a dry cloth. Avoid using harsh chemicals or abrasive materials.

4.2 Water Resistance

Your watch is water resistant up to 10 ATM (100 meters). This rating means the watch is suitable for swimming and snorkeling. However, it is not recommended for scuba diving. Ensure the crown is fully pushed in before any contact with water. Do not operate the crown or pushers while the watch is wet or submerged.

4.3 Battery Replacement

This watch is powered by a CR2 battery. When the battery power is low, the watch may stop or the second hand may move in two-second intervals. Battery replacement should be performed by a qualified watch technician to ensure proper sealing and water resistance. Attempting to replace the battery yourself may void the warranty.

4.4 Strap Care

The metal bracelet is designed for durability. To clean, use a soft brush and mild soapy water, then rinse thoroughly and dry with a soft cloth. Avoid exposing the bracelet to harsh chemicals or extreme temperatures.

5. TROUBLESHOOTING

5.1 Watch Not Running

- Check if the crown (B) is fully pushed in.
- The battery may be depleted. Refer to Section 4.3 for battery replacement.

5.2 Chronograph Not Functioning or Resetting Correctly

- Ensure the crown (B) is in its normal, pushed-in position.
- Perform a chronograph hand zero reset as described in Section 2.3.
- If the issue persists, the watch may require professional service.

6. SPECIFICATIONS

Model Number	R3253575006
Brand	Sector No Limits
Case Size	52 x 45 mm
Dial Color	Sandblasted with white silver accents
Strap Material	Metal
Strap Color	Steel (with dark accents)
Water Resistance	10 ATM (100 meters)
Battery Type	1 CR2 (included)
Product Dimensions	14 x 13.8 x 9.2 cm; 179 grams (packaging dimensions)
Manufacturer	SECTOR

7. WARRANTY AND SUPPORT

Your Sector No Limits R3253575006 watch comes with **atwo-year warranty** from the date of purchase, covering manufacturing defects. Please retain your proof of purchase for warranty claims.

Additionally, you have a **30-day return period** for many products, subject to specific terms and conditions. For detailed information on warranty and return policies, please refer to the official Sector No Limits website or your point of purchase.

For technical support, service, or warranty inquiries, please contact the authorized Sector No Limits service center or your retailer.