

Bytech ABC-AU-BS-101-BK

Biconic Bluetooth Waterproof Wireless Speaker

Model: ABC-AU-BS-101-BK

Brand: Bytech

INTRODUCTION

Thank you for choosing the Biconic Bluetooth Waterproof Wireless Speaker. This manual provides essential information for setting up, operating, and maintaining your speaker to ensure optimal performance and longevity. This portable speaker is designed for robust outdoor use, featuring enhanced bass, wireless connectivity, and IPX7 waterproofing.



Image: Front view of the Biconic Bluetooth Waterproof Wireless Speaker, showcasing its rugged design and integrated handle.

PRODUCT FEATURES

- **Wireless Connectivity:** Seamlessly connect to your smartphone or tablet via Bluetooth for untethered audio playback.
- **IPX7 Waterproof Rating:** Designed to withstand immersion in water up to 1 meter for 30 minutes, making it ideal for outdoor and wet environments. Can float right side up.
- **Enhanced Bass:** Delivers superior sound quality with powerful bass for a rich audio experience.
- **Extended Playtime:** Enjoy up to 7 hours of continuous music playback on a single charge.
- **Portable Design:** Features a durable handle for easy transport, perfect for beach trips, hiking, or parties.
- **Full Range Sound:** Provides comprehensive audio output across various frequencies.



Image: The Biconic speaker covered in water droplets, illustrating its waterproof capability.

PACKAGE CONTENTS

Please check the box for the following items:

- Biconic Bluetooth Waterproof Wireless Speaker
- USB Charging Cable
- User Manual (this document)



Image: The Biconic speaker shown within its retail packaging, highlighting key features like IPX7 waterproof rating and Bluetooth connectivity.

CONTROLS AND INDICATORS

The speaker features intuitive controls located on the top panel:

Button/Indicator	Function
Power Button	Press and hold to power ON/OFF. Short press to check battery status (if applicable).
Play/Pause Button	Press to play or pause music. Press to answer or end a phone call.
Volume Up / Next Track Button	Short press to increase volume. Long press to skip to the next track.
Volume Down / Previous Track Button	Short press to decrease volume. Long press to go to the previous track.
Mode (M) Button	Press to switch between available modes (e.g., Bluetooth, AUX).
LED Indicator	Indicates power status, Bluetooth pairing status, and charging status.

SETUP

1. Charging the Speaker

Before first use, fully charge the speaker. Connect the supplied USB charging cable to the charging port on the speaker and the other end to a USB power adapter (not included) or a computer's USB port.

- The LED indicator will illuminate during charging.
- The LED indicator will change color or turn off once charging is complete.
- A full charge provides up to 7 hours of playtime.

2. Powering On/Off

Press and hold the **Power Button** for approximately 3 seconds to turn the speaker ON or OFF. A sound prompt will indicate the power status.

3. Bluetooth Pairing

1. Ensure the speaker is powered ON and in Bluetooth pairing mode. The LED indicator will typically flash rapidly, indicating it's ready to pair.
2. On your mobile device (smartphone, tablet, etc.), enable Bluetooth.
3. Search for available Bluetooth devices. You should see "Biconic Speaker" or a similar name in the list.
4. Select the speaker from the list to connect. Once successfully paired, the LED indicator will typically stop flashing and remain solid, and a sound prompt will confirm the connection.
5. If prompted for a password, enter "0000".

The speaker will automatically attempt to reconnect to the last paired device when powered on, if that device is within range and has Bluetooth enabled.

OPERATING INSTRUCTIONS

Playing Music

- **Play/Pause:** Press the **Play/Pause Button** to start or pause playback.
- **Volume Control:** Short press the **Volume Up (+)** or **Volume Down (-)** buttons to adjust the volume.
- **Next/Previous Track:** Long press the **Volume Up (+)** button for the next track. Long press the **Volume Down (-)** button for the previous track.

Answering Calls (Hands-Free Function)

When connected to your phone via Bluetooth, the speaker can be used for hands-free calls:

- **Answer Call:** Press the **Play/Pause Button** once to answer an incoming call.
- **End Call:** Press the **Play/Pause Button** once during a call to end it.
- **Reject Call:** Press and hold the **Play/Pause Button** for 2 seconds to reject an incoming call.

Mode Switching

Press the **Mode (M) Button** to cycle through available input modes, such as Bluetooth and AUX (if an AUX port is present and cable connected).

MAINTENANCE

- **Cleaning:** Wipe the speaker with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- **Water Resistance:** Ensure the charging port cover is securely closed before exposing the speaker to water. While waterproof, avoid prolonged submersion beyond specified limits (IPX7: 1 meter for 30 minutes). Rinse with fresh water after exposure to saltwater or chlorinated water.
- **Storage:** Store the speaker in a cool, dry place when not in use. Avoid extreme temperatures.
- **Battery Care:** To preserve battery life, charge the speaker regularly, even if not used frequently. Avoid fully discharging the battery for extended periods.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Speaker does not turn on.	Battery is depleted.	Charge the speaker fully.
Cannot pair with Bluetooth device.	Speaker is not in pairing mode; Device Bluetooth is off; Speaker is too far from device; Speaker is already connected to another device.	Ensure speaker is in pairing mode (flashing LED). Turn Bluetooth ON on your device. Move speaker closer to device. Disconnect from other devices.
No sound or low volume.	Volume on speaker or device is too low; Speaker is not connected; Incorrect mode selected.	Increase volume on both speaker and device. Re-pair Bluetooth. Press Mode button to select correct input.
Sound distortion.	Volume too high; Device too far from speaker; Low battery.	Reduce volume. Move device closer to speaker. Charge the speaker.

SPECIFICATIONS

Feature	Detail
Model Number	ABC-AU-BS-101-BK
Brand	Bytech
Connectivity Technology	Bluetooth
Speaker Maximum Output Power	3 Watts
Audio Output Mode	Surround
Mounting Type	Tabletop
Product Dimensions	2.54 x 2.54 x 2.54 cm
Item Weight	907.18 g
Waterproof Rating	IPX7 (up to 1 meter for 30 minutes)
Playtime	Up to 7 hours

RUGGED



- Bluetooth® Technology
- IPX 7 Weatherproof and Waterproof
- Hands-Free Function
- Great for Outdoor Use
- 10 Watt Bass-Boosting Sound
- Durable handle
- Operating range: Up To 33 Feet
- Up To 20 Hours Playing Time
- Floats in Water up to 30 Min

RUGGED

Item No.: BC-AU-BS-101-BK
UPC: 805112024667

Contact:
2685 West 13th Street
Brooklyn, N.Y. 11223
© 2016 BYTECH NY INC.

Bluetooth®

10W
Super Bass
10 Watt Speaker

20h+
Up to 20 Hours
Play Time

Hands-Free
Durable
Handle



WEATHER PROOF & WATER PROOF
IPX7

WATERPROOF WIRELESS SPEAKER



Image: Marketing material for the Biconic speaker, detailing features such as Bluetooth technology, IPX7 waterproofing, 10W bass-boosting sound, and durable handle. Note: Specific power output and playtime details should refer to the product specifications section.

WARRANTY AND SUPPORT

Bytech products are designed for reliability and performance. For specific warranty information and support, please refer to the warranty card included with your purchase or visit the official Bytech website. Keep your proof of purchase for warranty claims.

For technical assistance or customer service inquiries, please contact Bytech customer support through the contact information provided on their official website or product packaging.