

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Secret Jardin](#) /

› [Secret Jardin DARKROOM 3.0 DR150 Grow Tent User Manual](#)

## Secret Jardin SJDR150V30

# Secret Jardin DARKROOM 3.0 DR150 Grow Tent User Manual

Model: SJDR150V30

## INTRODUCTION

---

This manual provides detailed instructions for the assembly, operation, and maintenance of your Secret Jardin DARKROOM 3.0 DR150 Grow Tent. Designed for professional use, this grow tent offers a controlled environment for plant cultivation. Please read this manual thoroughly before setup and operation to ensure proper use and longevity of your product.

## SAFETY INFORMATION

---

- Ensure the grow tent is assembled on a flat, stable surface.
- Keep all electrical components (lights, fans, etc.) away from water sources.
- Do not overload the tent's frame with excessive weight. Refer to specifications for weight limits.
- Always disconnect power to any electrical equipment before performing maintenance inside the tent.
- Keep children and pets away from the grow tent during operation.

## PACKAGE CONTENTS

---

Before beginning assembly, verify that all components listed below are present and undamaged:

- Tent fabric (outer canvas with Mylar interior)
- Stainless steel frame poles
- Connectors for frame assembly
- Removable water tray
- Accessory kit (CableIT clips, PocketIT, HookIT, StrapIT, Space Booster, WebIT)
- Instruction manual (this document)

## SETUP INSTRUCTIONS

---

Follow these steps to assemble your DARKROOM 3.0 DR150 Grow Tent:

1. **Unpack Components:** Carefully remove all parts from the packaging and lay them out on a clean,

flat surface.

2. **Assemble Base Frame:** Connect the shortest frame poles using the appropriate corner connectors to form the base rectangle. Ensure all connections are secure.
3. **Install Vertical Poles:** Insert the vertical poles into the base connectors.
4. **Assemble Top Frame:** Connect the remaining horizontal poles to form the top rectangle, then attach them to the vertical poles using the upper corner connectors.
5. **Drape Tent Fabric:** Carefully drape the tent fabric over the assembled frame. Ensure the zippers are aligned correctly for easy access.
6. **Zip Up Tent:** Begin zipping the tent fabric around the frame. It may be snug; gently pull the fabric to fit.
7. **Insert Water Tray:** Place the removable water tray at the bottom of the tent.
8. **Attach Accessories:** Utilize the provided CableIT clips for cable management, HookIT for hanging equipment, StrapIT for securing items, and WebIT for plant support. The Space Booster helps maintain tent shape.



**Figure 1:** An assembled Secret Jardin DARKROOM 3.0 DR150 Grow Tent. This image shows the tent's black canvas exterior, reflective Mylar interior, and the internal frame structure with a shelf. Ventilation socks and cable ports are visible on the sides.

## OPERATING INSTRUCTIONS

The DARKROOM 3.0 DR150 is designed for optimal environmental control. Consider the following for operation:

- **Ventilation:** Utilize the multiple socks and windows for intake and exhaust fans. Ensure adequate airflow to maintain temperature and humidity levels.
- **Cable Management:** Use the designated cable ports and CableIT clips to route electrical cords safely and neatly, preventing light leaks.
- **Equipment Hanging:** The robust frame supports various grow lights, fans, and filters. Use HookIT accessories to securely hang equipment. Distribute weight evenly.
- **Plant Support:** The WebIT net can be installed to provide horizontal support for plants as they grow, aiding in canopy management.

## MAINTENANCE

- **Cleaning:** The Mylar interior can be wiped down with a damp cloth and mild, non-abrasive cleaner. Ensure the tent is dry before resuming operation. The exterior canvas can be spot cleaned.
- **Water Tray:** Regularly empty and clean the removable water tray to prevent water accumulation and potential issues.
- **Zipper Care:** Keep zippers clean and free of debris. Lubricate with a zipper lubricant if they become stiff.
- **Frame Inspection:** Periodically check all frame connections to ensure they remain secure.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Light leaks around zippers	Zipper not fully closed or fabric stretched	Ensure zippers are fully closed. Adjust fabric tension. Check zipper covers.
Difficulty zipping/unzipping	Debris in zipper teeth or lack of lubrication	Clean zipper teeth. Apply zipper lubricant.
Tent bowing inwards/outwards	Improper fan pressure or uneven frame assembly	Adjust fan speed/pressure. Re-check frame connections. Use Space Booster if needed.
Water accumulation on floor	Spillage or condensation	Empty and clean the water tray. Improve ventilation to reduce condensation.

## SPECIFICATIONS

Feature	Detail
Model	SJDR150V30
Dimensions (L x W x H)	59" x 59" x 93" (150cm x 150cm x 235cm)
Brand	Secret Jardin

Feature	Detail
Outer Material	Heavy-duty Canvas
Inner Material	Highly Reflective Mylar
Frame Material	Stainless Steel
Item Weight	42.5 pounds (19.28 kg)
Color	Black
Accessories Included	CableIT clips, PocketIT, HookIT, StrapIT, Space Booster, WebIT

## WARRANTY AND SUPPORT

---

For warranty information and technical support, please refer to the official Secret Jardin website or contact their customer service department. Keep your proof of purchase for any warranty claims.

*Note: Specific warranty terms may vary by region and retailer.*