

UHPPOTE UT-XYL-440

UHPPOTE 4 Channel Color Quad System Video Splitter

INSTRUCTION MANUAL - MODEL UT-XYL-440

1. Introduction

This manual provides comprehensive instructions for the installation, operation, and maintenance of your UHPPOTE 4 Channel Color Quad System Video Splitter, Model UT-XYL-440. This device is designed to process and display video feeds from up to four CCTV cameras simultaneously on a single monitor, offering various display modes and control options for effective surveillance monitoring.

2. Safety Information

- Ensure the device is placed on a stable, flat surface to prevent accidental falls.
- Operate the device within the specified voltage range (DC 12V) using the provided power adapter.
- Avoid exposing the unit to moisture, rain, or extreme temperatures. This device is intended for indoor use only.
- Do not open the casing or attempt to repair the unit yourself. Refer all servicing to qualified personnel.
- Maintain adequate ventilation around the unit to prevent overheating.

3. Package Contents

Please verify that all items are present in your package:

- UHPPOTE 4 Channel Color Quad System Video Splitter (UT-XYL-440)
- Infrared Remote Control
- BNC Adapters (7 pieces)
- Power Adapter (DC 12V)



Image 3.1: UHPPOTE 4 Channel Color Quad System Video Splitter, remote control, and BNC adapters.

4. Product Overview

Familiarize yourself with the components and controls of your video splitter.

4.1. Front Panel



Image 4.1: Front panel controls and indicators.

- **MENU:** Accesses the on-screen display (OSD) menu for settings adjustment.
- **ENTER:** Confirms selections within the OSD menu.
- **A/B:** Switches between different display modes or channels.
- **PB:** Playback control (if connected to a VCR).
- **Directional Arrows (Up/Down/Left/Right):** Navigate through menu options and adjust values.
- **ZOOM:** Activates the digital zoom function.
- **FREEZE:** Freezes the current video frame.
- **MODE:** Cycles through various display modes (Quad, Full Screen, PIP, Dual Split).
- **AUTO:** Activates the auto-sequence display mode.
- **POWER:** On/Off switch for the unit.

4.2. Rear Panel



Image 4.2: Rear panel video input/output ports and power input.

- **VIDEO 1-4:** BNC inputs for connecting up to four CCTV cameras.
- **VCR IN:** BNC input for connecting a VCR or other recording device.
- **VCR OUT:** BNC output for connecting to a VCR or other recording device.
- **MONITOR:** BNC output for connecting to a display monitor.
- **DC 12V:** Power input jack for the DC 12V power adapter.

4.3. Remote Control



Image 4.3: Infrared remote control for convenient operation.

The remote control provides convenient access to all functions, mirroring the front panel controls and offering direct channel selection.

5. Setup

Follow these steps to set up your UHPPOTE Video Splitter:

1. **Connect Cameras:** Connect your CCTV cameras to the **VIDEO 1**, **VIDEO 2**, **VIDEO 3**, and **VIDEO 4** BNC input ports on the rear panel. Ensure secure connections.
2. **Connect Monitor:** Connect your display monitor to the **MONITOR** BNC output port on the rear panel.
3. **Connect VCR (Optional):** If you wish to record video, connect the **VCR IN** and **VCR OUT** BNC ports to your VCR or recording device.
4. **Connect Power:** Insert the DC 12V power adapter into the **DC 12V** input jack on the rear panel, then plug the adapter into a standard electrical outlet.
5. **Power On:** Press the **POWER** button on the front panel or remote control to turn on the unit.

6. Operating Instructions

6.1. Power On/Off

Press the **POWER** button on the front panel or the remote control to switch the unit on or off.

6.2. Display Modes

The unit supports various display configurations. Use the **MODE** button on the front panel or remote to cycle through them:

- **QUAD Split Mode:** Displays all four camera feeds simultaneously in a four-way split screen.
- **Full Screen Mode:** Displays a single camera feed in full screen. Use the directional arrows or number buttons (1-4) on the remote to select the desired camera.
- **PIP (Picture-in-Picture) Mode:** Displays one main camera feed with a smaller window of another camera feed. The position of the PIP window can often be adjusted via the menu.
- **Dual Split Mode:** Displays two camera feeds simultaneously (e.g., side-by-side or top-bottom).
- **Auto Sequence Mode:** Automatically cycles through full-screen views of each connected camera. Activate using the **AUTO** button on the front panel or remote.

6.3. Menu Navigation and Settings

To access and adjust system settings:

1. Press the **MENU** button on the front panel or remote control. The On-Screen Display (OSD) menu will appear.
2. Use the **Up/Down** directional arrows to navigate between menu options.
3. Press **ENTER** to select an option or enter a sub-menu.
4. Use the **Left/Right** directional arrows to adjust values (e.g., brightness, contrast) or change settings.
5. Press **MENU** again to exit the menu.

Key Settings:

- **Video Adjustments:** Adjust Brightness, Contrast, Saturation, Hue, and Sharpness for optimal image quality.
- **System Format:** Select between NTSC (for North America, Japan, etc.) or PAL (for Europe, Asia, etc.) based on your region's video standard. ***Incorrect selection can lead to distorted or black and white images.***
- **Overlay Information:** Configure display of Camera Title, Real Time and Date, and Alarm/Loss/Motion messages.
- **Event Report:** Review event logs and configure buzzer/relay output settings.

6.4. Zoom Function

In full-screen mode, press the **ZOOM** button on the front panel or remote to activate digital zoom. Use the directional arrows to select the area to zoom in on.

6.5. Freeze Function

Press the **FREEZE** (FRZ) button on the front panel or remote to pause the current video frame. Press it again to resume live video.

7. Maintenance

- **Cleaning:** Use a soft, dry cloth to clean the exterior of the unit. Do not use liquid or aerosol cleaners.

- **Ventilation:** Ensure the ventilation holes are not obstructed to prevent overheating.
- **Storage:** If storing the unit for an extended period, disconnect it from power and store in a cool, dry place.

8. Troubleshooting

Problem	Possible Cause	Solution
No video signal on monitor	<ul style="list-style-type: none">• Loose BNC connections• Incorrect video format (NTSC/PAL)• Camera not powered or faulty• Monitor input not selected correctly	<ul style="list-style-type: none">• Check all BNC cable connections.• Verify the system format (NTSC/PAL) in the OSD menu matches your cameras and monitor.• Ensure cameras are powered and functioning.• Select the correct input on your monitor.
Distorted, black & white, or rolling image	<ul style="list-style-type: none">• Incorrect video format (NTSC/PAL)• Poor cable quality or interference	<ul style="list-style-type: none">• Adjust the system format (NTSC/PAL) in the OSD menu.• Use high-quality BNC cables. Ensure cables are not too long or near strong electrical interference sources.
Remote control not working	<ul style="list-style-type: none">• Dead battery• Obstruction between remote and unit• Remote sensor blocked	<ul style="list-style-type: none">• Replace the CR2 battery in the remote control.• Ensure a clear line of sight between the remote and the unit's IR sensor.• Check if anything is blocking the IR sensor on the unit.
Constant buzzing sound	<ul style="list-style-type: none">• Alarm/event trigger• Internal fault	<ul style="list-style-type: none">• Check alarm settings in the OSD menu and disable if not needed.• If the issue persists, contact customer support.

9. Specifications


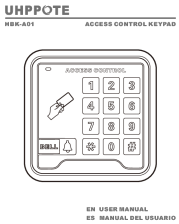
Feature	Detail
Model Number	UT-XYL-440
Video Inputs	4 BNC (for cameras), 1 BNC (VCR In)
Video Outputs	1 BNC (Monitor), 1 BNC (VCR Out)



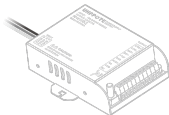
Feature	Detail
Video Resolution	720x480 (NTSC 60Hz), 720x576 (PAL 50Hz)
Display Modes	Quad Split, Full Screen, PIP, Dual Split, Auto Sequence
Image Adjustments	Brightness, Contrast, Saturation, Hue, Sharpness
Special Functions	Freeze Function, Zoom Function, Video Loss Detection, Motion Detection
Power Supply	DC 12V
Item Weight	13.4 ounces (approx. 380g)
Package Dimensions	8.54 x 6.06 x 2.4 inches (approx. 21.7 x 15.4 x 6.1 cm)
Remote Battery	1 x CR2 battery (required)

10. Warranty and Support

UHPPOTE products are designed for reliability and performance. For warranty information, technical support, or service inquiries, please refer to the contact information provided with your purchase or visit the official UHPPOTE website. Please have your model number (UT-XYL-440) available when contacting support.

Related Documents - UT-XYL-440

 The image shows the cover of the UHPPOTE HBK-A02 Access Control Keypad User Manual. It features a keypad with a numeric keypad (0-9), a star key, and a hash key. The text 'UHPPOTE' and 'HBK-A02 ACCESS CONTROL KEYPAD' is at the top. Below the keypad image, it says 'EN USER MANUAL' and 'ES MANUAL DEL USUARIO'.	<p>UHPPOTE HBK-A02 Access Control Keypad User Manual</p> <p>Comprehensive user manual for the UHPPOTE HBK-A02 Access Control Keypad, detailing installation, specifications, operation, wiring, and troubleshooting. Supports RFID cards and PIN access.</p>
 The image shows the cover of the UHPPOTE HBK-A01 Access Control Keypad User Manual. It features a keypad with a numeric keypad (0-9), a star key, and a hash key. The text 'UHPPOTE' and 'HBK-A01 ACCESS CONTROL KEYPAD' is at the top. Below the keypad image, it says 'EN USER MANUAL' and 'ES MANUAL DEL USUARIO'.	<p>UHPPOTE HBK-A01 Access Control Keypad User Manual</p> <p>User manual for the UHPPOTE HBK-A01 Access Control Keypad, detailing installation, specifications, features, operation, and troubleshooting.</p>

<div><div>UHPPOTE</div><div>2.4-inch TFT RFID</div><div>HBK-A04T Access Control Terminal</div></div> <div></div> <div><div>USER MANUAL</div></div>	<p>UHPPOTE HBK-A04T 2.4-inch TFT RFID Access Control Terminal User Manual</p> <p>User manual for the UHPPOTE HBK-A04T 2.4-inch TFT RFID Access Control Terminal, detailing installation, setup, user management, door settings, device configuration, and Tuya Smart APP integration.</p>
<div><div>UHPPOTE</div><div>HBK-R01 REMOTE CONTROL</div></div> <div></div> <div><div>EN USER MANUAL</div><div>ES MANUAL DEL USUARIO</div></div>	<p>UHPPOTE HBK-R01 Remote Control User Manual</p> <p>This manual provides instructions and specifications for the UHPPOTE HBK-R01 Remote Control system, including features, wiring diagrams, operating settings, and troubleshooting.</p>
<div><div>UHPPOTE</div><div>HBK-RW01 REMOTE CONTROL</div></div> <div></div> <div><div>EN USER MANUAL</div></div>	<p>UHPPOTE HBK-RW01 Remote Control User Manual</p> <p>User manual for the UHPPOTE HBK-RW01 Remote Control, detailing features, specifications, wiring diagrams, operating settings, and WiFi pairing instructions using the Tuya Smart app.</p>
<div><div>SWITCHING POWER SUPPLY</div><div>USER MANUAL</div></div> <div></div> <div><div>UHPPOTE</div><div>Model:HBK-P01</div></div>	<p>UHPPOTE HBK-P01 Switching Power Supply User Manual</p> <p>User manual for the UHPPOTE HBK-P01 switching power supply, detailing its features, specifications, and wiring diagrams for access control systems. Provides 12VDC output for electric locks and access controllers.</p>