

Rowenta VU2660

Rowenta Turbo Silence Extreme Table Fan VU2660 Instruction Manual

INTRODUCTION

This manual provides essential information for the safe and efficient operation, assembly, and maintenance of your Rowenta Turbo Silence Extreme Table Fan, model VU2660.


The Rowenta Turbo Silence Extreme Table Fan is designed to deliver powerful airflow with ultra-quiet performance, suitable for various indoor environments such as bedrooms and offices. It features 5 speed settings, including a Silent Night mode and a Turbo Boost mode, and comes with a convenient remote control.

IMPORTANT SAFETY INSTRUCTIONS

- Read all instructions thoroughly before using the appliance.
- Ensure the voltage indicated on the fan's rating label matches your local mains voltage.
- Do not operate the fan with a damaged power cord or plug. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons to prevent hazards.
- **Always unplug the fan from the power outlet before cleaning, assembly, or disassembly.**
- Do not immerse the fan in water or other liquids.
- Keep fingers, pencils, or any other objects away from the fan grille when it is running.
- Do not use the fan near windows where it may be exposed to rain, as this could create an electrical hazard.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Do not use abrasive cleaning products, as they may damage the fan's appearance or finish.


PRODUCT OVERVIEW

Familiarize yourself with the components of your Rowenta Turbo Silence Extreme Table Fan.

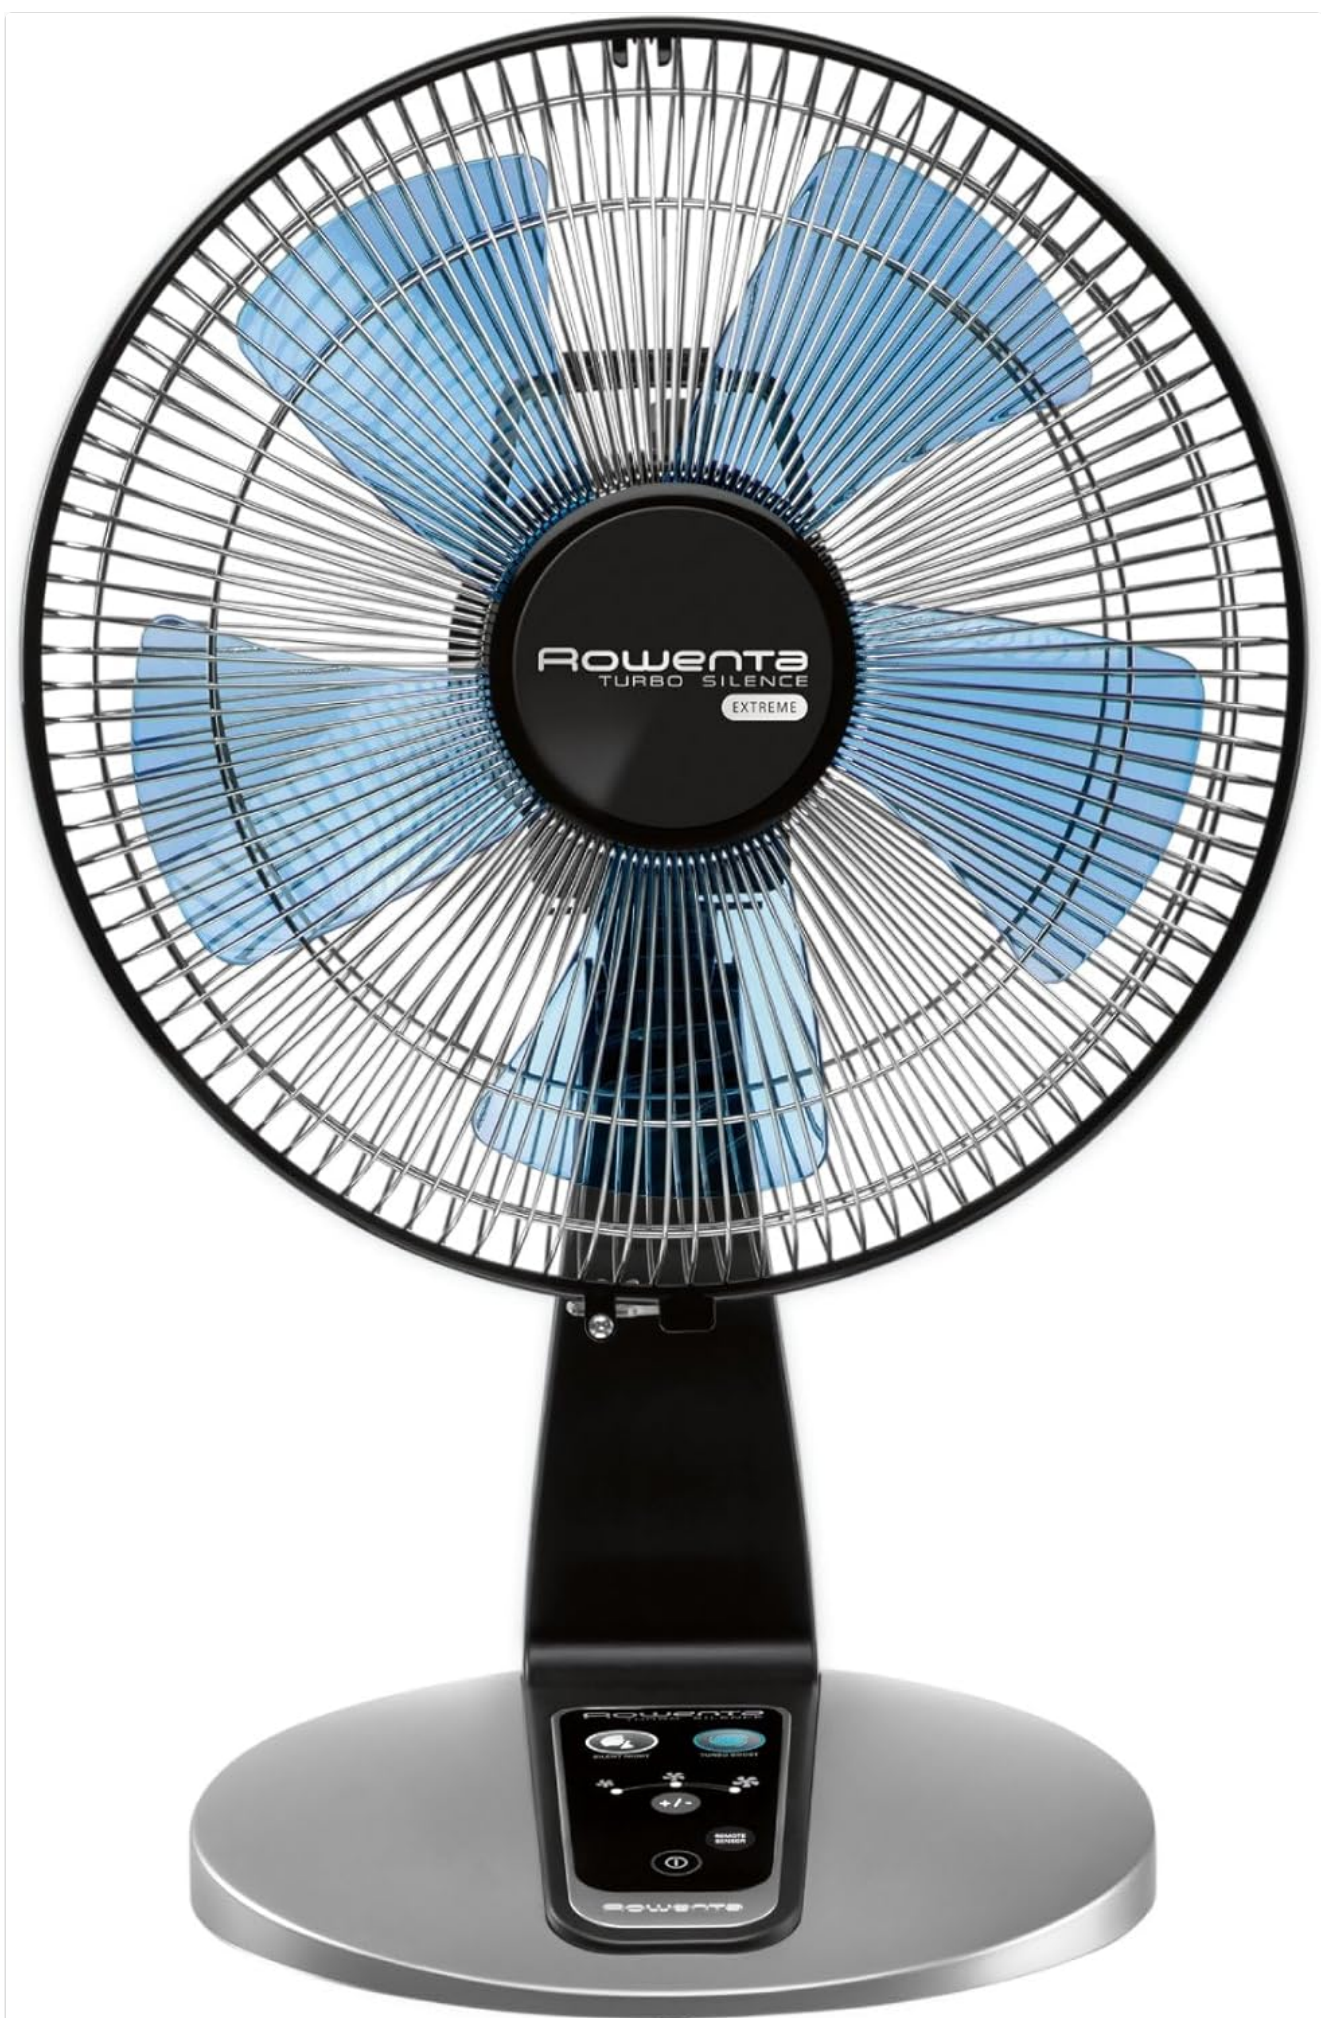

Front view of the Rowenta Turbo Silence Extreme Table Fan VU2660.

Components Diagram

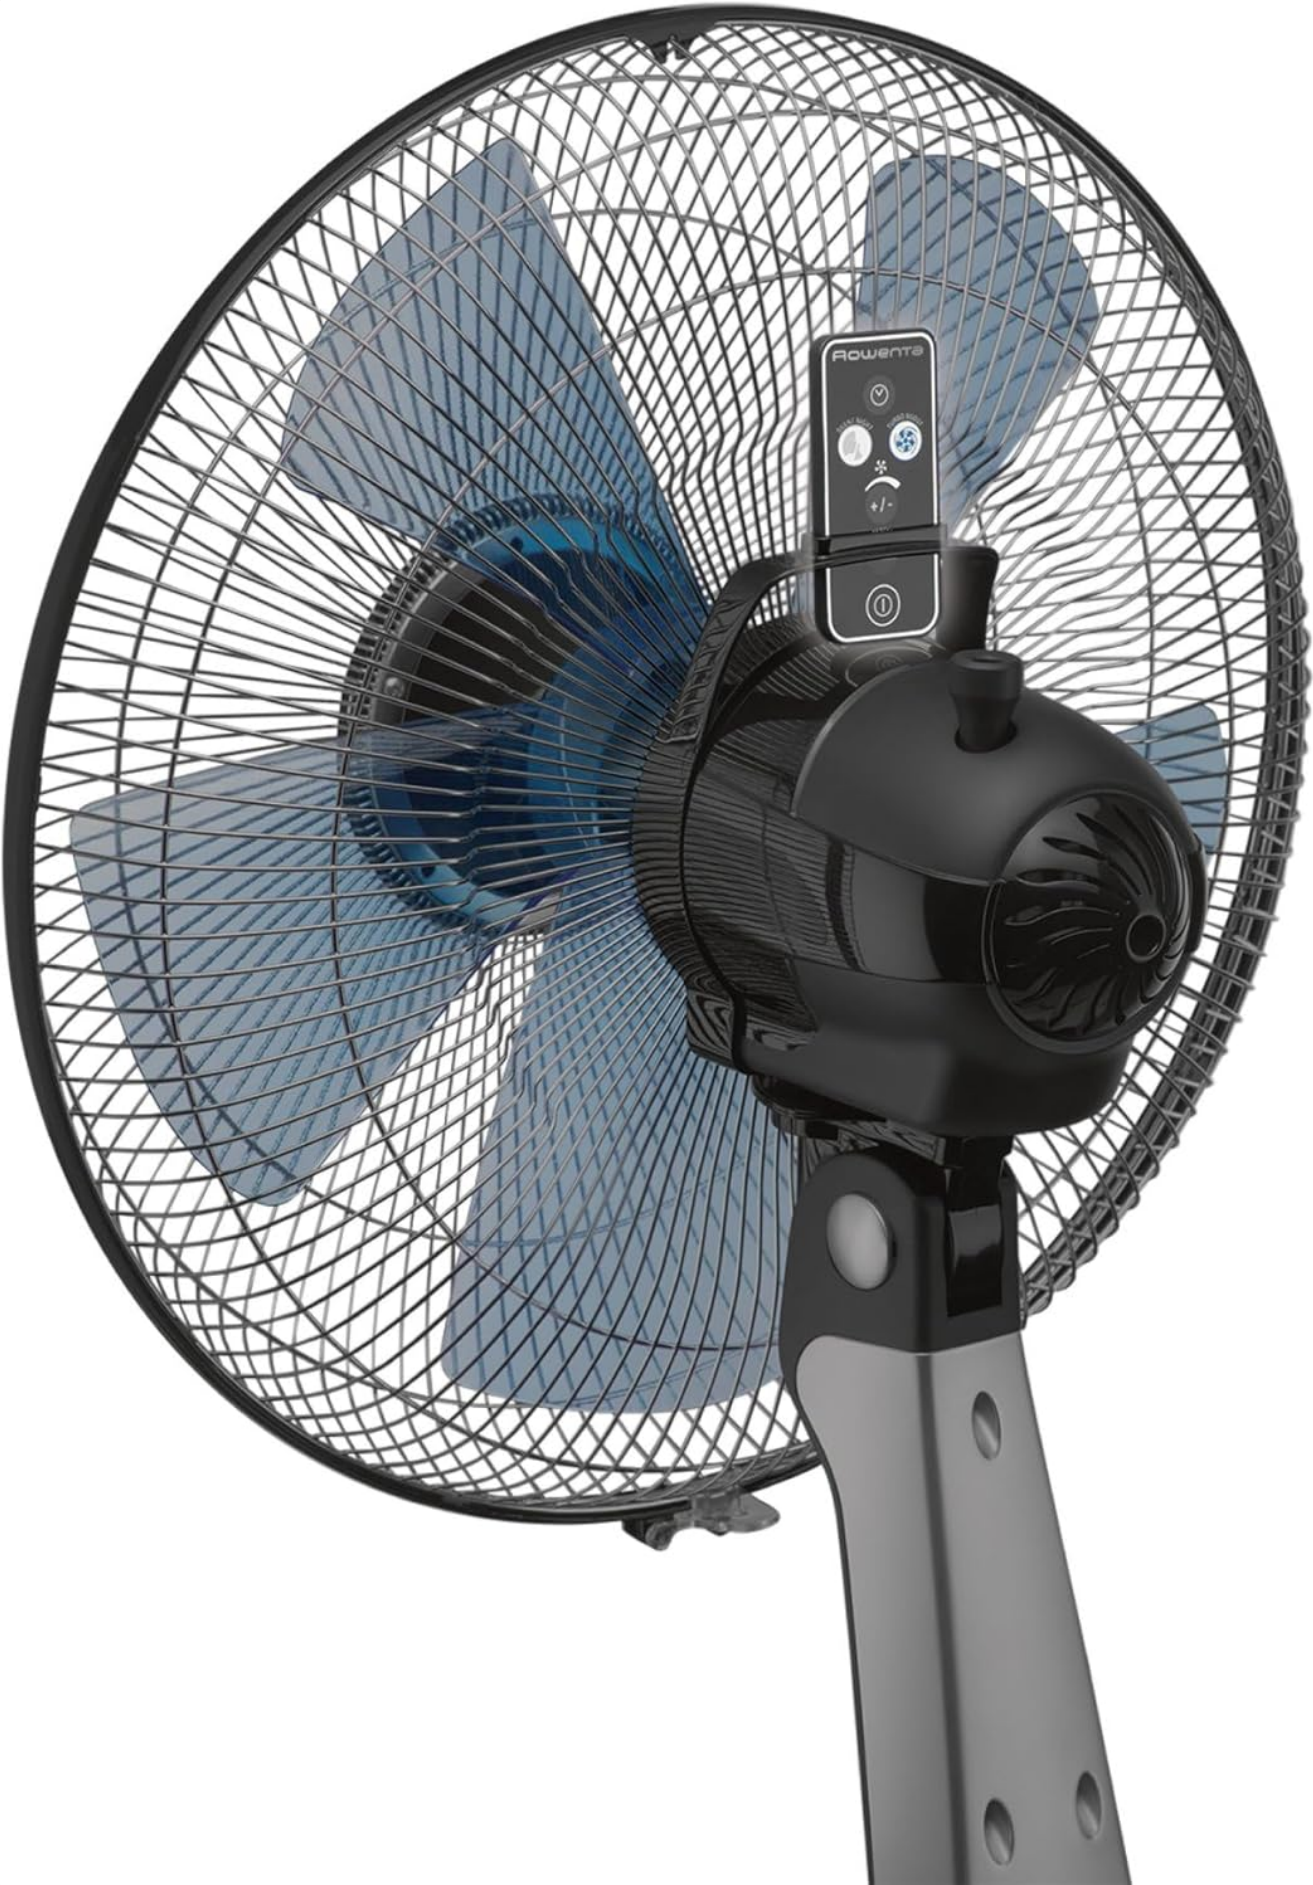

This diagram illustrates the key features of the fan, including its 12-inch diameter, 5-blade propeller, remote control, easy-to-use control panel, and 5 speed settings.

ASSEMBLY INSTRUCTIONS

The Rowenta Turbo Silence Extreme Table Fan requires minimal assembly before first use.

Required Tools:

- Philips screwdriver

Steps:

1. Carefully unpack all components from the packaging.
2. Attach the rear grille to the motor housing. Ensure it is securely fastened, typically with a threaded knob that may require **clockwise** rotation to tighten (this is often a reverse thread).
3. Place the fan blade onto the motor shaft, ensuring it is properly seated.
4. Secure the front grille to the rear grille. This usually involves aligning the two grilles and securing them with a plastic band and a single Philips screw. Ensure the grilles are properly aligned for safety and optimal performance.
5. Ensure all parts are firmly attached and stable before plugging in the fan.

OPERATING INSTRUCTIONS

Control Panel

The fan features an electronic control panel located on its base, allowing for direct control of its functions.

Power On/Off

Press the power button (ⓘ) on the control panel or remote control to turn the fan on or off.

Speed Settings

The fan offers 5 distinct speed settings. Use the '+' and '-' buttons on the control panel or remote to adjust the fan speed.

- **Silent Night Mode:** This mode provides ultra-quiet operation, ideal for undisturbed sleep, delivering a gentle and consistent breeze.
- **Turbo Boost Mode:** This mode delivers maximum airflow for rapid and intense cooling.

Oscillation

To activate or deactivate the oscillation feature, press the oscillation button (↔) on the control panel or remote control. When active, the fan head will sweep from side to side to distribute air across a wider area.

REMOTE CONTROL

The fan includes a compact remote control for convenient operation from a distance.



The remote control for the Rowenta Turbo Silence Extreme fan.

Remote Control Functions:

- **Power Button:** Turns the fan on or off.
- **Silent Night Button:** Activates the ultra-quiet mode.
- **Turbo Boost Button:** Activates the maximum power mode.
- **Speed Adjustment (+/-):** Increases or decreases fan speed.
- **Oscillation Button:** Toggles oscillation on or off.

Battery Installation:

The remote control typically uses a CR2032 coin cell battery. To install or replace the battery, open the battery compartment on the back of the remote control and insert the battery with the correct polarity. Close the compartment securely.

MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the lifespan of your fan. Dust and debris can accumulate on the blades and grilles, reducing airflow efficiency.

Before Cleaning:

Always unplug the fan from the power outlet before performing any maintenance or cleaning to prevent electrical shock.

Cleaning the Exterior:

Wipe the exterior surfaces of the fan with a slightly damp, soft cloth. Do not allow water to enter the unit's motor housing or control panel.

Cleaning the Grilles and Blades:

For thorough cleaning of the grilles and blades, the fan head can be partially disassembled:

1. Using a Philips screwdriver, loosen the screw that secures the plastic band holding the front and rear grilles together.
2. Carefully remove the front grille.
3. To remove the fan blade, rotate the knob holding it to the motor shaft **CLOCKWISE** (this is a reverse thread).
4. To remove the rear grille, rotate the plastic knob **COUNTER-CLOCKWISE** (normal thread).
5. Clean the fan blades and grilles with a soft, damp cloth or a vacuum cleaner to remove accumulated dust.
6. Reassemble the fan by reversing these steps. Ensure all parts are securely fastened before plugging in and using the fan.

Do not use abrasive cleaning products, harsh chemicals, or solvents, as they may damage the fan's finish or components.

TROUBLESHOOTING

If you encounter issues with your fan, refer to the following common problems and solutions:

Fan Does Not Turn On:

- Ensure the fan is properly plugged into a working electrical outlet.
- Check if the power button on the fan's control panel or remote control has been pressed.
- Verify that the circuit breaker for the outlet has not tripped.

Weak Airflow:

- Check the selected speed setting; increase it if necessary.

- Ensure the grilles and blades are clean and free from dust buildup. Refer to the Maintenance section for cleaning instructions.

Unusual Noise:

- Ensure all parts, especially the grilles and blades, are securely assembled. Loose parts can cause rattling.
- Check for any foreign objects obstructing the fan blades.

Remote Control Not Working:

- Check and replace the battery (CR2032) if necessary.
- Ensure there are no obstructions between the remote control and the fan's infrared receiver.
- Make sure you are within the effective range of the remote control.

SPECIFICATIONS

Feature	Specification
Model Name	Rowenta VU2660 Turbo Silence Extreme Electronic Table Fan
Brand	Rowenta
Electric Fan Design	Table Fan
Color	Silver/Black
Product Dimensions (DxWxH)	11.02"D x 13.77"W x 21.25"H
Item Weight	8 Pounds
Power Source	AC (110 Volts)
Noise Level	As low as 35 dB
Number of Blades	5
Blade Length	12 Inches
Air Flow Capacity	Up to 1695 Cubic Feet Per Minute
Number of Power Levels	5
Control Method	Remote, Electronic Control Panel
Indoor/Outdoor Usage	Indoor
Assembly Required	Yes

WARRANTY AND SUPPORT

Rowenta products are manufactured to high-quality standards and are subject to rigorous quality control. For detailed warranty information, please refer to the warranty card included with your product packaging or visit the official Rowenta website for your region.

For technical assistance, troubleshooting, or customer support, please contact Rowenta customer service through

their official channels. Protection plans may be available for extended coverage; please check with your retailer for details at the time of purchase.