

[Manuals.plus](#) /

› [Mixpresso](#) /

› Mixpresso Single Serve Coffee Maker 2-in-1 Brewer Instruction Manual

## Mixpresso 0722589233463

# Mixpresso Single Serve Coffee Maker 2-in-1 Brewer Instruction Manual

## INTRODUCTION

This manual provides instructions for the Mixpresso Single Serve Coffee Maker, Model 0722589233463. This compact 2-in-1 brewer is designed for both K-Cup pods and ground coffee, offering quick and convenient single-cup brewing. Please read these instructions carefully before first use and retain for future reference.

## IMPORTANT SAFETY INSTRUCTIONS

- Read all instructions before operating the appliance.
- Do not immerse the power cord, plug, or the appliance itself in water or other liquids to protect against electrical hazards.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock, or injury to persons.
- Do not use outdoors.
- Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach the plug to the appliance first, then plug the cord into the wall outlet. To disconnect, turn any control to "off," then remove the plug from the wall outlet.
- Do not use the appliance for other than intended use.
- Use on a flat, stable surface away from the edge of the counter.
- Exercise extreme caution when handling hot water and steam.

## PRODUCT COMPONENTS



Image: Overview of the Mixpresso Single Serve Coffee Maker highlighting its key components.

- **Filter Basket:** Used for brewing ground coffee.
- **Pods Holder:** Designed to hold K-Cup compatible pods.
- **Pods Needle:** Pierces the K-Cup pod for brewing.
- **Lighted On/Off Switch:** Activates the brewing process and indicates power status.
- **Water Tank:** Reservoir for water, maximum capacity 14 oz.
- **Drip Tray:** Collects drips and spills, removable for cleaning.

## INITIAL SETUP

1. Unpack the coffee maker and all accessories. Remove any packaging materials.
2. Place the coffee maker on a dry, level, and stable surface.
3. Wash the removable parts (K-Cup pod holder, reusable filter basket, drip tray) with warm, soapy water. Rinse thoroughly and dry.

4. Perform an initial cleaning cycle: Fill the water tank with clean, cold water (up to 14 oz). Place an empty mug on the drip tray. Close the lid and press the power button to start a brew cycle without coffee. Discard the water. Repeat this process 2-3 times to ensure the internal components are clean.

## OPERATING INSTRUCTIONS

Your browser does not support the video tag.

Video: Demonstration of the Mixpresso 2-in-1 Coffee Brewer, compatible with K-Cups and ground coffee.

### Brewing with K-Cup Pods



Image: The coffee maker actively dispensing brewed coffee into a mug.

1. Ensure the coffee maker is plugged into a standard electrical outlet.
2. Lift the lid and insert a K-Cup compatible pod into the pods holder. Close the lid firmly until it clicks.
3. Fill the water tank with fresh, cold water. For optimal flavor, 8-12 oz is recommended, though the tank holds up to 14 oz. Do not exceed the MAX fill line.

4. Place your mug (up to 4.5 inches tall) on the drip tray.
5. Press the power button to start brewing. The indicator light will illuminate.
6. The coffee maker will preheat for 1-2 minutes, then begin brewing. Brewing will stop automatically when complete.
7. Carefully remove your hot mug. The brewing temperature reaches approximately 75°C (167°F).

### Brewing with Ground Coffee



Image: The two methods for brewing coffee: using ground coffee in the reusable filter or a compatible K-Cup pod.

1. Ensure the coffee maker is plugged into a standard electrical outlet.
2. Lift the lid. If the K-Cup pod holder is in place, remove it.
3. Insert the reusable filter basket into the coffee maker.
4. Add your desired amount of medium-grind ground coffee into the reusable filter basket. Do not overfill.
5. Fill the water tank with fresh, cold water. For optimal flavor, 8-12 oz is recommended, though the tank holds up to 14 oz. Do not exceed the MAX fill line.
6. Place your mug (up to 4.5 inches tall) on the drip tray.

- 7. Press the power button to start brewing. The indicator light will illuminate.
- 8. The coffee maker will preheat for 1-2 minutes, then begin brewing. Brewing will stop automatically when complete.
- 9. Carefully remove your hot mug.

CLEANING AND MAINTENANCE

Daily Cleaning

- Always unplug the coffee maker and allow it to cool completely before cleaning.
- Remove the K-Cup pod holder or reusable filter basket and rinse under running water. These parts are detachable for easy cleaning.
- Empty and clean the drip tray.
- Wipe the exterior of the coffee maker with a damp, soft cloth. Do not use abrasive cleaners or scouring pads.

Descaling (Monthly or as needed)

Mineral deposits can build up over time, affecting performance. Descale your coffee maker regularly:

1. Fill the water tank with a mixture of 1 part white vinegar and 2 parts water.
2. Place a large empty mug on the drip tray.
3. Run a brew cycle without any coffee pod or grounds.
4. After the cycle, let the coffee maker sit for 30 minutes with the vinegar solution inside.
5. Run another brew cycle to empty the remaining solution.
6. Run 2-3 cycles with fresh, clean water to thoroughly rinse out any vinegar residue.

TROUBLESHOOTING

| Problem                     | Possible Cause                                                       | Solution                                                                                                        |
|-----------------------------|----------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------|
| Coffee maker does not brew. | No power, insufficient water, lid not closed.                        | Check power connection. Ensure water tank has enough water. Close lid firmly.                                   |
| Coffee is weak.             | Too much water, too little coffee, coarse grind.                     | Use less water (8-10 oz recommended). Increase amount of ground coffee. Use a medium grind.                     |
| Coffee is not hot enough.   | Unit not fully preheated.                                            | Allow 1-2 minutes for preheating before brewing.                                                                |
| Grounds in coffee.          | Reusable filter not seated correctly, fine grind, overfilled filter. | Ensure reusable filter is properly inserted. Use medium grind coffee. Do not overfill the filter basket.        |
| Unit leaks.                 | Drip tray not in place, K-cup/filter not inserted correctly.         | Ensure drip tray is correctly positioned. Verify K-cup or reusable filter is properly seated and lid is closed. |

SPECIFICATIONS

**Brand:** Mixpresso  
**Model Name:** 2 in 1 Brewer  
**Model Number:** 0722589233463

**Capacity:** 14 ounces (water tank)

**Power:** 120V~60Hz, 1000W

**Product Dimensions:** 10.4" (H) x 4.5" (W) x 6.6" (L)

**Coffee Input Type:** Pods and Ground Coffee

**Compatible Coffee Pods:** K-Cup

**Special Features:** Removable Tank, Fast Brew System, Auto Shut-Off

**Material:** Plastic

WARRANTY AND SUPPORT

The Mixpresso Single Serve Coffee Maker is backed by a 1-year warranty, providing peace of mind for long-lasting use. For technical support, warranty claims, or any product-related inquiries, please contact Mixpresso customer service through their official website or the retailer where the product was purchased. Please have your model number (0722589233463) and proof of purchase available when contacting support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

---

Open the live page

<https://manuals.plus/asin/B06WLJBVDV>

More documents and user manuals: <https://manuals.plus/>