

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [USARMT](#) /

› [USARMT AVOL MA001 Remote Control Instruction Manual for AET32300M TV](#)

USARMT MA001

USARMT AVOL MA001 Remote Control Instruction Manual

For AVOL AET32300M Television Models

1. INTRODUCTION

Thank you for choosing the USARMT AVOL MA001 Remote Control. This remote is designed to provide seamless control for your AVOL AET32300M television. It comes pre-programmed and requires no additional setup or programming. Simply insert batteries, and it is ready for use.

2. SAFETY INFORMATION

- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Always remove exhausted batteries promptly to prevent leakage.
- Dispose of batteries according to local regulations.
- Keep the remote control away from moisture and extreme temperatures.

3. PACKAGE CONTENTS

- 1 x USARMT AVOL MA001 Remote Control

Note: Batteries are not included and must be purchased separately.

4. SETUP: BATTERY INSTALLATION

Follow these steps to install batteries into your remote control:

1. Locate the battery compartment on the back of the remote control.
2. Press down on the tab and slide the battery cover downwards to open it.
3. Insert two AAA batteries (not included), ensuring the positive (+) and negative (-) terminals match the diagrams inside the compartment.
4. Slide the battery cover back into place until it clicks securely.





SOURCE

1

2

3

4

5

6

7

8

9

CH.list

0



PICTURE

SOUND

SLEEP

ZOOM

MUTE



OK





Image: Front view of the USARMT AVOL MA001 Remote Control. The remote is black with various buttons for TV operation.

5. OPERATING INSTRUCTIONS: BUTTON FUNCTIONS

This section describes the function of each button on your USARMT AVOL MA001 Remote Control.

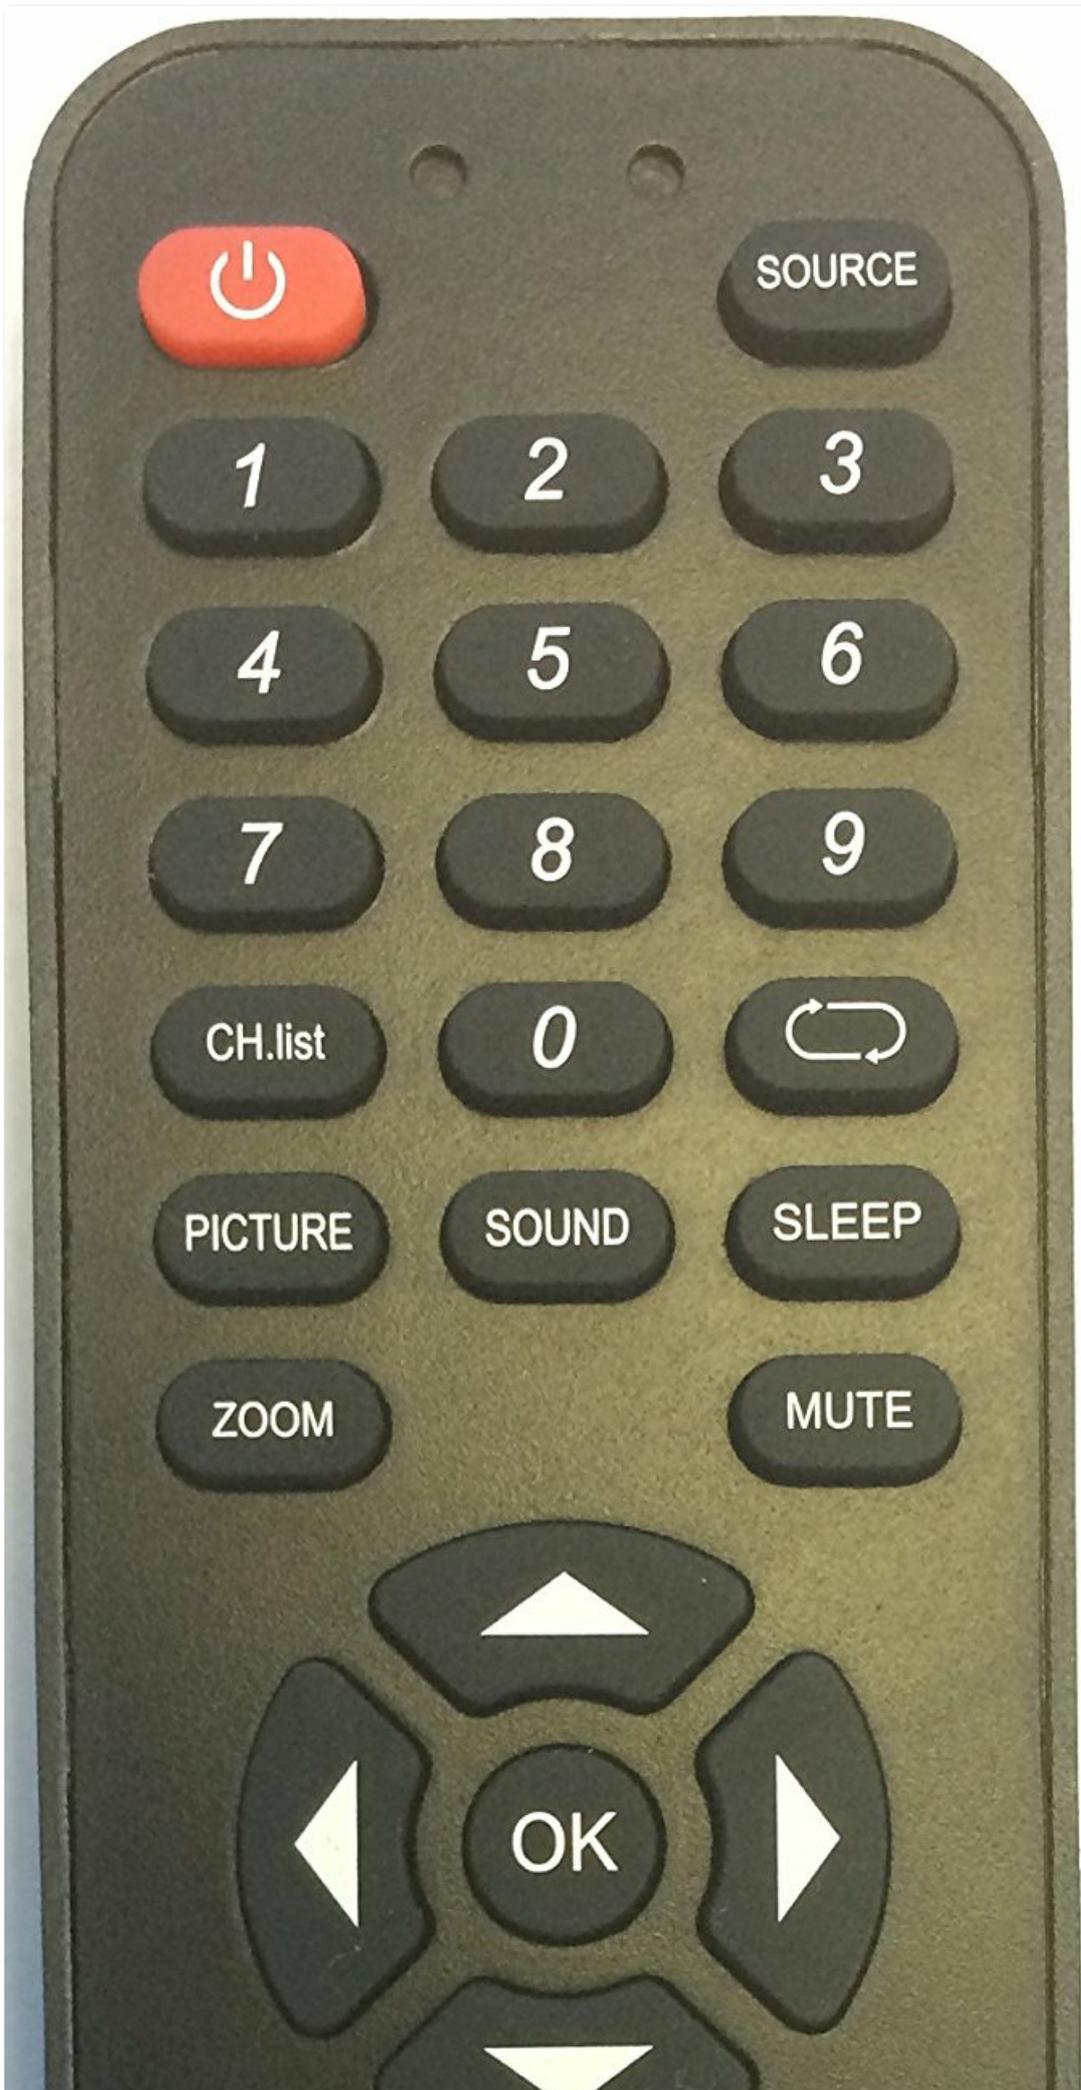




Image: Front view of the USARMT AVOL MA001 Remote Control, showing all buttons and their labels.

Power (): Turns the TV on or off.

SOURCE: Selects the input source (e.g., HDMI, AV).

Number Buttons (0-9): Directly selects TV channels.

CH.list: Displays the channel list.

PICTURE: Adjusts picture settings.

SOUND: Adjusts sound settings.

SLEEP: Sets the sleep timer.

ZOOM: Adjusts the screen zoom level.

MUTE: Mutes or unmutes the TV sound.

Navigation Pad (Up, Down, Left, Right, OK): Navigates menus and confirms selections.

SUBTITLE: Toggles subtitles on or off.

DISPLAY: Shows on-screen information.

FAV: Accesses favorite channels.

VOL+ / VOL-: Increases or decreases the volume.

CH+ / CH-: Changes channels up or down.

MENU: Opens the main menu.

EXIT: Exits the current menu or function.

TV/TXT: Switches between TV mode and Teletext.

SIZE: Adjusts Teletext display size.

SUBPAGE: Selects Teletext subpages.

HOLD: Holds the current Teletext page.

ROOT / INDEX / REVEAL: Teletext navigation functions.

Media Control Buttons (◀◀, ▶▶, ■, ▶||): Rewind, Fast Forward, Stop, Play/Pause for media playback.

NICAM/A2: Selects audio modes.

SLOW: Slow motion playback.

LANG.: Changes audio language.

GOTO: Jumps to a specific time in media.

REP.: Repeats media playback.

Colored Buttons (Red, Green, Yellow, Blue): Functions vary depending on the TV menu or application.

6. CARE AND MAINTENANCE

- Clean the remote control with a soft, dry cloth. Do not use liquid or aerosol cleaners.
- Avoid dropping the remote control or subjecting it to strong impacts.
- If the remote will not be used for an extended period, remove the batteries to prevent leakage.

7. TROUBLESHOOTING

Remote Control Not Responding

- **Check Batteries:** Ensure batteries are inserted correctly with the correct polarity (+/-). Replace old or

depleted batteries with new ones.

- **Line of Sight:** Make sure there are no obstructions between the remote control and the TV's infrared sensor. Point the remote directly at the TV.
- **Distance:** Ensure you are within the effective operating range of the TV's infrared sensor.
- **TV Power:** Confirm that the TV is powered on and not in standby mode.

8. SPECIFICATIONS

Model Number	MA001
Brand	USARMT
Compatible Devices	AVOL AET32300M Television
Max Number of Supported Devices	1
Color	Black
Special Feature	Ergonomic
Power Source	2 x AAA Batteries (not included)

9. WARRANTY AND SUPPORT

This product is backed by a 30-day hassle-free return policy. For any issues or further assistance, please refer to your purchase documentation or contact the retailer.