

[Manuals.plus](#) /

› [USARMT](#) /

› USARMT Replacement Remote Control User Manual for Roku 1, 2, & 3

USARMT 0688934115795



USARMT Replacement Remote Control User Manual

For Roku 1, Roku 2, & Roku 3 Streaming Devices

INTRODUCTION

This manual provides instructions for the USARMT Replacement Remote Control, designed for use with Roku 1, Roku 2, and Roku 3 streaming devices. This remote is pre-programmed and requires no additional setup beyond battery installation.





Image: Front view of the USARMT Replacement Remote Control. It features a black body with a purple directional pad and various control buttons, including dedicated app buttons for MGO, Amazon, Netflix, and Blockbuster.

SETUP

1. Battery Installation:

Locate the battery compartment on the back of the remote control. Slide the cover downwards to open. Insert two (2) AAA batteries, ensuring correct polarity (+/-) as indicated inside the compartment. Close the battery cover by sliding it back into place until it clicks.



Image: The USARMT Replacement Remote Control shown at an angle, highlighting its ergonomic design. The back of the remote, where the battery compartment is typically located, is partially visible.

2. Initial Use:

The USARMT Replacement Remote Control is pre-programmed and does not require any manual setup or pairing with your Roku 1, 2, or 3 device. Once batteries are installed, the remote is ready for immediate use.

OPERATING INSTRUCTIONS

The remote control features standard buttons for navigating and controlling your Roku device. Refer to the diagram below for button identification and their functions.





Image: Detailed view of the USARMT Replacement Remote Control, illustrating the layout of all buttons for operational reference.

- **Arrow Buttons (Up, Down, Left, Right):** Navigate menus and selections.
- **OK Button:** Confirm selections.
- **Back Button (←):** Return to the previous screen or menu.
- **Home Button (△):** Return to the Roku home screen.
- **Replay Button (↺):** Replay the last few seconds of video.
- **Options Button (*):** Access additional options or settings within an app or menu.
- **Rewind (⏮), Play/Pause (⏸), Fast Forward (⏭):** Control media playback.
- **Dedicated App Buttons (MGO, Amazon, Netflix, Blockbuster):** Provide direct access to these streaming applications.

MAINTENANCE

- **Battery Replacement:** Replace batteries when the remote's response becomes inconsistent or stops working. Always replace both AAA batteries at the same time with new ones. Do not mix old and new batteries, or different types of batteries.
- **Cleaning:** To clean the remote, gently wipe the surface with a soft, dry cloth. Avoid using liquid cleaners or abrasive materials, as these can damage the remote's finish or internal components.
- **Storage:** Store the remote in a dry place away from extreme temperatures and direct sunlight. If the remote will not be used for an extended period, it is recommended to remove the batteries to prevent leakage.

TROUBLESHOOTING

- **Remote Not Responding:**
 1. Ensure the batteries are inserted correctly with the proper polarity.
 2. Replace the batteries with a fresh pair of AAA batteries.
 3. Ensure there are no obstructions between the remote and your Roku device.
 4. Verify that your Roku device is powered on.
- **Specific Buttons Not Working:**

If only certain buttons are unresponsive, try cleaning around the buttons with a dry cotton swab to remove any debris that might be preventing proper contact. If the issue persists after replacing batteries, the remote may require replacement.

SPECIFICATIONS

Brand	USARMT
Model Number	0688934115795
Compatible Devices	Roku 1, Roku 2, Roku 3 Streaming Devices
Power Source	2 x AAA Batteries (not included)
Color	Black
Special Feature	Ergonomic Design

WARRANTY AND SUPPORT

This USARMT Replacement Remote Control comes with a**30-day hassle-free return policy**. For any issues or questions regarding your remote control, please refer to the retailer's return and support policies where the product was purchased. Ensure to keep your purchase receipt for warranty and return purposes.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question