

[Manuals.plus](#) /

> [USARMT](#) /

> USARMT Replacement Remote Control AKB72914238 User Manual for LG TVs

USARMT AKB72914238

USARMT Replacement Remote Control AKB72914238 User Manual for LG TVs

1. INTRODUCTION

This manual provides instructions for the USARMT replacement remote control, model AKB72914238. It is designed to function as a direct replacement for various LG TV models and original LG remote controls, offering immediate functionality without complex setup.

2. PRODUCT OVERVIEW

The USARMT AKB72914238 is a pre-programmed infrared remote control. It is ready for use once batteries are installed, requiring no additional setup or programming.





Image description: A black USARMT replacement remote control, model AKB72914238, featuring a standard layout of buttons including power, number pad, volume, channel, menu, and navigation controls. The model number AKB72914238 is printed at the bottom.

3. SETUP

3.1 Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Open the battery compartment cover.
3. Insert two AAA batteries (not included), ensuring correct polarity (+ and -).
4. Close the battery compartment cover securely.

3.2 Initial Use

This remote control is pre-programmed and ready for use. Once batteries are installed, it will function immediately with compatible LG televisions. No pairing or code entry is required.

4. OPERATING INSTRUCTIONS

The remote control features standard buttons for navigating your television. Ensure a clear line of sight between the remote and the TV's infrared receiver for optimal performance.

- **Power (Red Button):** Turns the television on or off.
- **Input:** Selects the video input source (e.g., HDMI, AV).
- **TV:** Switches to TV mode.
- **Number Pad (0-9):** Direct channel selection.
- **VOL +/-:** Adjusts the volume level.
- **CH ^/v:** Changes channels up or down.
- **MUTE:** Mutes or unmutes the television audio.
- **MENU:** Accesses the main menu of the television.
- **Q.MENU:** Accesses the quick menu.
- **Navigation Pad (Up, Down, Left, Right, ENTER):** Navigates through menus and confirms selections.
- **BACK:** Returns to the previous screen or menu.
- **EXIT:** Exits the current menu or function.
- **INFO:** Displays information about the current program or input.
- **Color Buttons (Red, Green, Yellow, Blue):** Functions vary depending on the television model and current menu.
- **Playback Controls (Rewind, Play/Pause, Fast Forward):** Controls media playback if supported by the TV.

5. COMPATIBLE MODELS

This USARMT replacement remote control is compatible with the following LG TV models and can replace the specified LG original remote control models:

5.1 Compatible LG TV Models:

- 42PJ350
- 42PJ350-UB
- 50PJ350
- 42LD450

5.2 Replaces LG Original Remote Control Models:

- AKB72914201
- AKB72914238
- AKB72914207
- AKB72914209
- AKB73615322

6. SPECIFICATIONS

Feature	Detail
---------	--------

Feature	Detail
Brand	USARMT
Model Number	AKB72914238
Connectivity Technology	Infrared
Controller Type	Button Control
Compatible Devices	Television
Special Feature	Ergonomic
Item Weight	3.84 ounces
Batteries Required	2 x AAA (not included)

7. TROUBLESHOOTING

7.1 Remote Not Responding

- Check Batteries:** Ensure batteries are inserted correctly with the proper polarity. Replace old batteries with new ones.
- Line of Sight:** Make sure there is a clear, unobstructed line of sight between the remote control and the TV's infrared receiver.
- TV Sensor:** Confirm the TV's remote sensor is not blocked or dirty.
- TV Power:** Verify that the television is powered on and not in standby mode.

7.2 Limited Functionality

While this remote is designed for broad compatibility, some advanced or smart TV specific functions might not be directly accessible if they require a specialized original remote. For such functions, refer to your TV's original user manual.

8. WARRANTY AND SUPPORT

This USARMT replacement remote control comes with a 30-day hassle-free return policy. For any product-related issues or support inquiries, please refer to the retailer or seller from whom the product was purchased.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for

conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B06WLQ89JZ>

More documents and user manuals: <https://manuals.plus/>