

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Evenflo](#) /
- › [Evenflo Evolve Platinum 3-in-1 Combination Booster Seat User Manual](#)

## Evenflo Evolve Platinum 3-in-1 Combination Booster Seat

# Evenflo Evolve Platinum 3-in-1 Combination Booster Seat User Manual

Model: Evolve Platinum 3-in-1 Combination Booster Seat

### INTRODUCTION

This manual provides comprehensive instructions for the safe and proper use of your Evenflo Evolve Platinum 3-in-1 Combination Booster Seat. This versatile car seat is designed to adapt to your child's growth, offering three modes of use: a 5-point harness booster, a high back booster, and a no back booster. Please read all instructions carefully before installation and use to ensure maximum safety and comfort for your child.



Image: Front view of the Evenflo Evolve Platinum 3-in-1 Combination Booster Seat in pink and grey.

## IMPORTANT SAFETY INFORMATION

Your Evenflo Evolve Platinum booster seat meets or exceeds all applicable federal safety standards. It has also undergone Evenflo's comprehensive Side Impact and industry-leading Rollover Test Standards, providing enhanced protection.

### E3 Side Impact Protection

This seat incorporates E3 (Energy Cube) Side Impact Protection, which significantly reduces forces during side impact crashes through energy absorption and an expanded area of protection around your child's head and body.

### Weight and Height Requirements:

- **Harnessed Booster Mode:** For children weighing 22 - 65 lbs (10 - 29.5 kg) and measuring 28 - 50 inches (71 - 127 cm) in height. Child must be at least 12 months old.

- **High Back Booster Mode (Seat Belt):** For children weighing 40 - 120 lbs (18 - 54.4 kg) and measuring 44 - 57 inches (112 - 145 cm) in height.
- **No Back Booster Mode (Seat Belt):** For children weighing 40 - 120 lbs (18 - 54.4 kg) and measuring 44 - 57 inches (112 - 145 cm) in height.

Always ensure your child meets the minimum and maximum weight and height requirements for the chosen mode of use.

## PRODUCT FEATURES

- **3-in-1 Design:** Transitions from 5-point harness to high back booster to no back booster.
- **Outlast Performance Fabrics:** Temperature-regulating fabric for comfort in various weather conditions.
- **Dual Cup Holders:** Integrated cup holders for convenience.
- **Upfront 1-Position Recline:** Easily adjust the seat recline.
- **Upfront Harness Fitting:** Simple adjustment of the harness system.
- **2 Crotch Buckle Positions:** Accommodates growing children.
- **Harness Covers and Buckle Pockets:** For added comfort and to keep buckles cool.
- **LATCH System:** Equipped for secure installation in compatible vehicles.

## SETUP AND INSTALLATION

Proper installation is crucial for child safety. Refer to your vehicle's owner's manual for specific car seat installation instructions and LATCH system locations.

### 1. Harnessed Booster Installation (22-65 lbs)

This mode uses the car seat's internal 5-point harness system. Ensure the harness straps are at or slightly above your child's shoulders. Secure the seat using either the vehicle's LATCH system or the vehicle's seat belt, following the instructions provided in the full product manual.



Image: Detail of the 5-point harness and buckle system.

## 2. High Back Booster Installation (40-120 lbs)

For this mode, the internal harness is removed, and the child is secured using the vehicle's lap and shoulder belt. The vehicle's shoulder belt must pass through the red belt guide on the booster seat's headrest. Adjust the headrest so the shoulder belt guide is positioned correctly for your child.



Image: The car seat configured as a high back booster, ready for vehicle seat belt use.



Image: Close-up of the red seat belt guide for high back booster mode.



Image: A child properly secured in the high back booster mode using the vehicle's seat belt.

### **3. No Back Booster Installation (40-120 lbs)**

To convert to a no back booster, remove the backrest of the seat. The child is then secured directly by the vehicle's lap and shoulder belt. Ensure the lap belt fits low across the hips and the shoulder belt crosses the center of the child's shoulder and chest.



Image: The car seat base used as a no back booster.

## OPERATING INSTRUCTIONS

### Adjusting the Headrest and Harness Height

The headrest and harness height can be adjusted simultaneously. Locate the adjustment handle at the top of the headrest. Squeeze the handle and slide the headrest up or down to the desired position. In harnessed mode, ensure the harness straps are at or slightly above your child's shoulders. In high back booster mode, ensure the shoulder belt guide is correctly aligned with your child's shoulder.



Image: Adjusting the headrest height using the top handle.



Image: Rear view illustrating the harness routing and headrest mechanism.

## Recline Adjustment

The seat features an upfront 1-position recline. Locate the recline handle at the front base of the seat. Pull the handle and adjust the seat to the desired recline position. Ensure the seat is securely locked in place after adjustment.



Image: Close-up of the recline adjustment handle.

## Securing Your Child

Always ensure the harness or vehicle seat belt is snug against your child's body, without any slack. The chest clip (in harnessed mode) should be positioned at armpit level. The lap belt should be low on the hips, touching the thighs, and the shoulder belt should cross the center of the shoulder and chest.

## CARE AND MAINTENANCE

### Cleaning the Harness

The harness can be wiped clean with mild soap and water. Allow the harness to air dry completely before re-use. Do not machine wash or submerge the harness straps, as this can weaken the material.

### Cleaning Fabric Pads

Refer to the care labels on the fabric pads for specific cleaning instructions. Typically, fabric pads are machine washable on a gentle cycle with cold water and mild detergent. Air dry or tumble dry on low heat.

## Cleaning Plastic and Metal Parts

Plastic and metal parts can be wiped clean with a damp cloth and mild soap. Avoid using abrasive cleaners or solvents.

## TROUBLESHOOTING

- **Harness Covers Missing:** If harness covers were not included or are missing, contact Evenflo customer service for assistance. Harness covers are important for comfort and proper fit, especially for smaller children.
- **Difficulty Buckling:** Ensure both buckle tongues are fully inserted into the buckle receiver until a click is heard. If the buckle is stiff, check for debris and clean as per maintenance instructions.
- **Seat Feels Loose After Installation:** Re-read the installation instructions carefully. Ensure the LATCH connectors or vehicle seat belt are tightened as much as possible, removing all slack. The car seat should not move more than one inch side-to-side or front-to-back at the belt path.
- **Child's Head Slumps Forward:** Adjust the recline position of the car seat. Ensure the headrest is properly adjusted to support the child's head.

## PRODUCT SPECIFICATIONS

Feature	Detail
Minimum Weight Recommendation	22 Pounds (10 kg)
Maximum Weight Recommendation	120 Pounds (54.4 kg)
Maximum Height Recommended	57 Inches (145 cm)
Installation Type	Seat Belt, LATCH
Orientation	Forward Facing
Harness Type	5-Point
Number of Height Positions	1 (Adjustable Headrest)
Item Dimensions (D x W x H)	19.5"D x 20"W x 27.8"H (49.5 cm D x 50.8 cm W x 70.6 cm H)
Item Weight	20 Pounds (9.1 kg)
Material Type	Fabric
Color	Pink & Grey
ASIN	B06WP4PZ1P
UPC	032884193639, 032884191567



Image: Product dimensions diagram.

## WARRANTY AND CUSTOMER SUPPORT

For warranty information, product registration, or to contact customer support, please visit the official Evenflo website or refer to the warranty card included with your product. It is recommended to register your product to receive important safety updates and recall information.

**Evenflo Official Website:** [www.evenflo.com](http://www.evenflo.com)

