

[Manuals.plus](#) /

› [Emporio Armani](#) /

› Emporio Armani Men's AR11053 Analog Display Japanese Quartz Watch User Manual

Emporio Armani AR11053

Emporio Armani Men's AR11053 Watch

USER INSTRUCTION MANUAL

Introduction

This manual provides essential instructions for the proper setup, operation, maintenance, and troubleshooting of your Emporio Armani Men's AR11053 Analog Display Japanese Quartz Watch. Please read this manual thoroughly before using your watch to ensure optimal performance and longevity.

The Emporio Armani AR11053 watch features a contemporary design with a blue sunray dial, date window, gunmetal IP case, and a fluid mesh bracelet. It is powered by a reliable Japanese quartz movement.

Product Overview



Image: Front view of the Emporio Armani AR11053 watch, showcasing its blue sunray dial, silver-tone hour markers, hands, and date window at 3 o'clock. The watch features a gunmetal-toned case and a matching mesh bracelet.

The Emporio Armani AR11053 is an analog watch designed for men, featuring a Japanese quartz movement for accurate timekeeping. Key features include:

- **Case Diameter:** 43 mm
- **Case Thickness:** 9 mm
- **Band Width:** 22 mm
- **Band Material:** Stainless steel mesh
- **Movement Type:** Three-hand Japanese quartz with date function
- **Water Resistance:** 5 ATM (50 meters / 165 feet)

Setup

1. Setting the Time

1. Pull the crown (the small knob on the side of the watch case) out to position 2.
2. Rotate the crown clockwise or counter-clockwise to set the hour and minute hands to the correct time. Ensure you distinguish between AM and PM if setting the date.
3. Once the time is set, push the crown back into position 1 (normal operating position).

2. Setting the Date

1. Pull the crown out to position 1 (the first click).
2. Rotate the crown clockwise to advance the date. Do not rotate counter-clockwise as this may damage the movement.
3. If the date changes during the day, advance the time by 12 hours.
4. Once the date is set, push the crown back into position 0 (normal operating position).

3. Adjusting the Mesh Bracelet

The mesh bracelet features an adjustable clasp. To adjust the length:

1. Locate the small lever on the clasp.
2. Carefully lift the lever using a small, flat tool (e.g., a small screwdriver).
3. Slide the clasp along the mesh band to the desired length.
4. Press the lever back down firmly to secure the clasp in place. Ensure it clicks securely to prevent accidental opening.



Image: Rear view of the Emporio Armani AR11053 watch, displaying the solid stainless steel case back with engraved brand logo and model number. The adjustable clasp of the mesh bracelet is also visible.

Operating

Timekeeping

Your Emporio Armani AR11053 watch is powered by a Japanese quartz movement, providing accurate and reliable timekeeping. Once the time and date are set, the watch will operate continuously until the battery requires replacement.

Water Resistance

This watch is water resistant to 5 ATM (50 meters / 165 feet). This rating means it is suitable for short periods of recreational swimming, such as in a pool or ocean. It is **not** suitable for diving, snorkeling, or high-impact water sports. Avoid operating the crown or pushers while the watch is wet or submerged to prevent water intrusion.

Maintenance

Cleaning

To maintain the appearance of your watch:

- Wipe the case and crystal with a soft, dry cloth regularly.
- For the stainless steel mesh bracelet, a slightly damp cloth can be used, followed by immediate

drying. Avoid harsh chemicals or abrasive materials.

Battery Replacement

The watch is powered by one CR2 battery. When the watch stops running, the battery needs to be replaced. It is recommended to have battery replacement performed by a qualified watch technician to ensure proper sealing and maintain water resistance.

Storage

When not wearing your watch, store it in a cool, dry place, away from direct sunlight and extreme temperatures. The original watch box is ideal for storage.

Troubleshooting

Problem	Possible Cause	Solution
Watch stops running	Depleted battery	Replace the battery. It is recommended to seek professional service.
Incorrect time/date	Crown not fully pushed in, or time/date not set correctly	Ensure the crown is fully pushed in. Re-set the time and date as per the 'Setup' section.
Condensation under crystal	Exposure to extreme temperature changes or water intrusion	Immediately seek professional service. Do not attempt to open the watch yourself.

If you encounter issues not listed here, or if the suggested solutions do not resolve the problem, please contact an authorized service center for assistance.

Specifications

Feature	Detail
Model Number	AR11053
Movement	Japanese Quartz, Three-Hand with Date
Case Material	Stainless Steel (Gunmetal IP)
Case Diameter	43 mm
Case Thickness	9 mm
Band Material	Stainless Steel Mesh
Band Width	22 mm
Water Resistance	5 ATM (50 meters / 165 feet)
Battery Type	1 CR2 (included)
Product Dimensions	5.91 x 5.91 x 5.91 inches; 8.8 ounces

Warranty Information

Your Emporio Armani AR11053 watch comes with a manufacturer's warranty covering defects in materials and workmanship under normal use. The specific terms and duration of your warranty are detailed in the warranty booklet included with your purchase.



Image: The Emporio Armani watch box, instruction manual, and warranty card, indicating the included documentation for the product.

Please retain your proof of purchase and the warranty booklet for any future warranty claims. The warranty typically does not cover normal wear and tear, accidental damage, or damage resulting from improper use or unauthorized repairs.

Support

For further assistance, service, or inquiries regarding your Emporio Armani watch, please refer to the contact information provided in your warranty booklet or visit the official Emporio Armani website. You may also visit the [Emporio Armani Store on Amazon](#) for additional product information.

Safety Information

- Keep the watch out of reach of small children to prevent choking hazards from small parts.
- Avoid exposing the watch to extreme temperatures (above 60°C / 140°F or below 0°C / 32°F) or strong magnetic fields, as this may affect accuracy.
- Do not attempt to open the watch case or replace the battery yourself unless you are a qualified technician, as this may void the warranty and compromise water resistance.
- If skin irritation occurs, discontinue use and consult a medical professional.

