

[Manuals.plus](#) /

› [BELLISSIMA](#) /

› Bellissima Intellisense B24 100 Hair Straightener and Curler User Manual

BELLISSIMA 11493

Bellissima Intellisense B24 100 Hair Straightener and Curler User Manual

Model: 11493

PRODUCT OVERVIEW

The Bellissima Intellisense B24 100 is an intelligent hair straightener designed to respect your hair while providing optimal straightening and curling results. It utilizes Intellistyle technology to select the most effective minimum temperature for your hair type, reducing heat exposure by up to 60°C compared to traditional straighteners.

Equipped with Active Plates technology, this straightener adapts to your hair during styling, allowing for both straight and wavy styles. The Gloss & Shine ceramic coating ensures even heat distribution and smooth gliding, making styling quick and easy. Its rounded design facilitates creating waves and curls. Long heating plates ensure effective styling from the roots.

The Thermo Control system allows manual temperature selection between 140°C and 220°C. The Quick Heating system ensures the straightener is ready for use in seconds, saving valuable time.



Image: The Bellissima Intellisense B24 100 hair straightener, showcasing its sleek design and ceramic plates.

SAFETY WARNINGS

- **Burn Hazard:** Surfaces become extremely hot during use. Avoid direct contact with skin.
- **Electric Shock Hazard:** Keep away from water. Do not use near bathtubs, sinks, or other water sources.
- **Fire Hazard:** Unplug when not in use. Do not leave unattended when plugged in.
- Keep out of reach of children.

SETUP

1. Ensure the straightener is clean and free from any debris.
2. Place the straightener on a heat-resistant surface.
3. Plug the straightener into a suitable electrical outlet. The Quick Heating system will prepare the device for use in seconds.



Image: The Bellissima Intellisense B24 100 hair straightener resting on its integrated stand, ready for use.

OPERATING INSTRUCTIONS

1. Preparing Your Hair

- Ensure your hair is clean, dry, and detangled before use.
- Separate your hair into manageable sections using clips.

2. Selecting Temperature with Intellistyle Technology

- Turn on the straightener.
- On the straightener's display, select your hair type. The Intellistyle technology will automatically set the optimal minimum temperature for effective styling while protecting your hair.
- Alternatively, you can manually adjust the temperature using the Thermo Control buttons, choosing between 140°C and 220°C to suit your preference.



Image: A close-up view of the Intellistyle display on the straightener, showing hair type selection icons.

3. Straightening Hair

1. Take a small section of hair.
2. Place the section between the heating plates, close to the roots.
3. Gently glide the straightener down the hair section from root to tip in one smooth motion. Avoid holding the straightener in one place for too long.
4. Repeat for all sections until desired straightness is achieved.

4. Curling Hair

1. Take a small section of hair.
2. Clamp the hair section between the plates, close to the roots.
3. Rotate the straightener 180 degrees away from your face, then slowly pull it down the hair shaft to create a curl.
4. Release the hair and allow the curl to cool before styling further.
5. Repeat for all sections until desired curls are achieved.



Image: A close-up of the ceramic heating plates, highlighting their smooth surface for effortless gliding.

5. After Use

- Turn off the appliance and unplug it from the electrical outlet.
- Allow the straightener to cool completely before storing.

MAINTENANCE

- Always ensure the appliance is unplugged and completely cool before cleaning.

- Wipe the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- Do not immerse the appliance in water or any other liquid.
- Regularly check the power cord for any signs of damage. If damaged, discontinue use and contact customer support.
- Store the straightener in a dry, safe place, away from moisture and extreme temperatures.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Straightener does not heat up.	Not plugged in correctly or power outlet issue.	Ensure the plug is fully inserted into a working outlet. Check the power switch.
Hair is not straightening or curling effectively.	Incorrect temperature setting or hair section too large.	Increase temperature if suitable for your hair type. Work with smaller hair sections. Ensure hair is completely dry.
Burning smell.	Product residue on plates or hair product burning.	Unplug and let cool. Clean plates thoroughly. Ensure hair is free of excessive styling products.

SPECIFICATIONS

- **Brand:** BELLISSIMA
- **Model Number:** 11493
- **Product Dimensions (L x W x H):** 5.91 x 3.94 x 0.01 cm
- **Weight:** 0.38 grams
- **Heating Surface Material:** Ceramic (Gloss & Shine coating)
- **Maximum Temperature Setting:** 220°C
- **Temperature Control:** Intellistyle Technology (automatic) and Manual Thermo Control (140°C - 220°C)
- **Special Features:** Active Plates, Quick Heating System, Rounded Design for curling
- **Power Source:** Corded Electric
- **Color:** Rose
- **Country of Origin:** China

WARRANTY AND SUPPORT

This Bellissima product is covered by a standard manufacturer's warranty. Please refer to the warranty card included in your product packaging for specific terms and conditions, including the warranty period and coverage details.

For technical assistance, troubleshooting not covered in this manual, or warranty claims, please contact Bellissima customer support. Contact information can typically be found on the official Bellissima website or on the product packaging.

Please retain your proof of purchase for any warranty-related inquiries.

© 2023 BELLISSIMA. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question