Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- Sharp /
- > Sharp R360SLM Microwave Oven User Manual

Sharp R360SLM

Sharp R360SLM Microwave Oven User Manual

Model: R360SLM

1. IMPORTANT SAFETY INSTRUCTIONS

Read all instructions carefully before using the appliance. Keep this manual for future reference.

- Do not attempt to operate this oven with the door open as this can result in harmful exposure to microwave energy.
- Do not place any object between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces.
- Do not operate the oven if it is damaged. It is particularly important that the oven door closes properly and that there is no damage to the: (1) door (bent), (2) hinges and latches (broken or loosened), (3) door seals and sealing surfaces.
- The oven should not be adjusted or repaired by anyone except properly qualified service personnel.
- Ensure the appliance is properly grounded.
- Do not use corrosive chemicals or vapors in this appliance.
- · Always use microwave-safe cookware.
- · Liquids or other foods must not be heated in sealed containers since they are liable to explode.
- The microwave oven is intended for heating food and beverages. Drying of clothing and heating of warming pads, slippers, sponges, damp cloth and similar may lead to risk of injury, ignition or fire.

2. PRODUCT OVERVIEW

The Sharp R360SLM is a 23-litre solo microwave oven designed for efficient and convenient food preparation. It features a flatbed interior for increased usable space and easy cleaning, along with intuitive touch controls and multiple automatic programs.



Figure 2.1: Front view of the Sharp R360SLM Microwave Oven. This image displays the sleek silver and black design with the control panel on the right.

Key Features:

- 23 Litre Capacity: Spacious interior suitable for various dish sizes.
- Flatbed Design: Eliminates the need for a turntable, providing more usable space and simplifying cleaning.
- 900W Microwave Power: Efficient heating and cooking performance.
- Touch Controls: User-friendly interface for selecting settings.
- 8 Automatic Programs: Pre-set cooking options for common foods.
- 5 Power Levels: Adjustable power for diverse cooking needs, from defrosting to rapid heating.
- Defrost Program: Dedicated function for quick and even defrosting.
- Child Lock: Safety feature to prevent unintended operation.

SHARP

YEAR MANUFACTURERS PARTS & LABOUR WARRANTY INCLUDED

You can have peace of mind that if anything does go wrong, you're covered

Figure 2.2: Overview of key features including 900W power, flatbed interior, variable power, and childlock.



Figure 2.3: Close-up of the flatbed interior, highlighting the absence of a turntable and the increased usable space.

3. INSTALLATION AND SETUP

Proper installation ensures optimal performance and safety.

3.1 Unpacking

Carefully remove the microwave oven and all packing materials from the carton. Check the oven for any damage, such as dents or a misaligned door. Do not operate the oven if it is damaged. Contact customer support if any damage is found.

3.2 Placement

- Place the oven on a flat, stable surface that can support its weight and the heaviest food likely to be cooked in the
- Ensure adequate ventilation. Leave a minimum of 10 cm (4 inches) clearance at the rear, 20 cm (8 inches) at the top, and 5 cm (2 inches) on each side for proper airflow.
- · Do not block air vents.
- Keep the oven away from heat sources and strong magnetic fields.
- This appliance is designed for countertop installation.

SHARP 900w **Flatbed Interior Variable Power** Childlock 1 Year Warranty

Figure 3.1: Side view of the microwave with approximate dimensions (Height: 287mm, Width: 490mm, Depth: 392mm) for placement reference.

3.3 Electrical Connection

Plug the oven into a properly installed and grounded wall outlet. Do not use extension cords or adapters.

4. OPERATING INSTRUCTIONS

This section details how to use your Sharp R360SLM microwave oven.

4.1 Control Panel Overview

The control panel features a digital display and touch-sensitive buttons for various functions. Familiarize yourself with the layout before operation.

4.2 Setting the Clock

1. Press the "SET CLOCK" button.

- 2. Use the time adjustment buttons (e.g., "10 Min", "1 Min", "10 Sec") to set the current hour.
- 3. Press "SET CLOCK" again to confirm the hour.
- 4. Use the time adjustment buttons to set the current minutes.
- 5. Press "SET CLOCK" one last time to finalize the clock setting.

4.3 Microwave Cooking

- 1. Place food in a microwave-safe container inside the oven.
- 2. Close the door securely.
- 3. Select the desired power level by pressing the "MICRO POWER" button repeatedly (e.g., P100 for 100% power, P80 for 80%, etc.). There are 5 power levels available.
- 4. Use the time adjustment buttons to set the cooking time.
- 5. Press "START / QUICK START" to begin cooking.

4.4 Quick Start Function

For quick heating at full power:

- Press "START / QUICK START" repeatedly to add 30 seconds of cooking time at 100% power with each press.
- The maximum quick start time is typically 99 minutes and 99 seconds.

4.5 Auto Menu Programs

The oven includes 8 automatic programs for convenient cooking:

- Beverages: For heating drinks.
- Jacket Potato: For cooking potatoes.
- Vegetables: For steaming or cooking vegetables.
- Pizza: For reheating or cooking pizza.
- Rice: For cooking rice.
- Soup: For heating soup.
- (Additional programs may vary, refer to control panel labels)

To use an Auto Menu program:

- 1. Place food in the oven.
- 2. Press the desired Auto Menu button (e.g., "BEVERAGES").
- 3. Use the adjustment buttons to select the quantity or weight if prompted.
- 4. Press "START / QUICK START" to begin.

4.6 Defrosting

The defrost function allows for efficient thawing of frozen foods.

- 1. Press the "TIME DEFROST" or "WEIGHT DEFROST" button.
- 2. If using "WEIGHT DEFROST", use the adjustment buttons to enter the weight of the food.
- 3. If using "TIME DEFROST", use the adjustment buttons to enter the desired defrosting time.
- 4. Press "START / QUICK START" to begin defrosting.

4.7 Stopping Operation

To pause or cancel cooking:

- Press "STOP / CLEAR" once to pause cooking. Press "START / QUICK START" to resume.
- Press "STOP / CLEAR" twice to cancel the current program and clear the settings.

5. MAINTENANCE AND CLEANING

Regular cleaning and maintenance will prolong the life of your microwave oven.

5.1 Cleaning the Exterior

Wipe the exterior surface with a damp cloth and mild detergent. Avoid abrasive cleaners or solvents.

5.2 Cleaning the Interior

For spills and splatters, wipe the interior immediately with a damp cloth. For stubborn stains, place a bowl of water with lemon slices inside and heat for 2-3 minutes on high power. The steam will loosen the residue, making it easier to wipe clean. The flatbed design makes the interior particularly easy to clean.

5.3 Cleaning the Door and Seals

Regularly clean the door, door seals, and adjacent parts with a damp cloth to remove any food residue. This ensures proper door closure and safe operation.

5.4 Odor Removal

To remove odors, combine a cup of water with a few tablespoons of lemon juice or vinegar in a microwave-safe bowl. Heat on high for 5 minutes. Allow to cool inside the oven for a few minutes before removing and wiping the interior.

6. TROUBLESHOOTING

Refer to this section for common issues and their solutions.

Problem	Possible Cause	Solution
Oven does not start	Door not closed properly. Plug not inserted firmly into outlet. Fuse blown or circuit breaker tripped. Electrical problem with the outlet.	Close the door securely. Ensure plug is firmly in outlet. Check household fuse or reset circuit breaker. Test outlet with another appliance.
Food not heating	Incorrect cooking time or power level set. Food not suitable for microwave heating. Ventilation openings blocked.	Adjust time and power level. Ensure cookware is microwave-safe. Check for obstructions around vents.
Oven light not working	Bulb needs replacement.	Contact qualified service personnel for bulb replacement.
Fan continues to run after cooking	Normal operation to cool the oven cavity and clear steam/condensation.	This is normal. The fan will stop automatically after a few minutes (typically 3-10 minutes).
Control panel unresponsive	Temporary electronic glitch. Buttons not pressed firmly enough (use pad of finger).	Unplug the oven for 30 seconds, then plug back in. Ensure firm contact when pressing buttons.

If the problem persists after attempting these solutions, please contact Sharp customer support.

7. SPECIFICATIONS

Feature	Specification
Brand	Sharp
Model	R360SLM
Capacity	23 Litres
Microwave Power Output	900 Watts
Input Power	1400 Watts
Voltage	230 Volts
Product Dimensions (W x D x H)	49 cm x 39.2 cm x 28.7 cm
Item Weight	15.1 kg
Installation Type	Countertop
Colour	Silver
Interior Material	Plastic
Special Features	Auto Cook, Timer, Defrost, Control Panel Lock, Flatbed Design
Included Components	Flat bed solo model

8. WARRANTY AND SUPPORT

Your Sharp R360SLM Microwave Oven comes with a manufacturer's warranty.

8.1 Manufacturer's Warranty

This product is covered by a **1 Year Manufacturer's Parts & Labour Warranty** from the date of purchase. Please retain your proof of purchase for warranty claims.



Figure 8.1: Visual confirmation of the 1-year manufacturer's warranty.

8.2 Customer Support

For technical assistance, warranty claims, or service inquiries, please contact Sharp customer support. Visit the official

Sharp website for contact details or refer to the contact information provided with your product packaging.

Online Resources: www.sharp.co.uk

9. OFFICIAL PRODUCT VIDEOS

No official product videos from the seller were found for this model in the provided data.

© 2024 Sharp Corporation. All rights reserved.

Related Documents - R360SLM



Sharp YC-QS254AU-B 25 Litre Microwave Oven - Product Specifications

Comprehensive product information for the Sharp YC-QS254AU-B 25 Litre Microwave Oven. Details include capacity, power, features, design specifications, power consumption, and logistic information. Ideal for consumers and retailers seeking technical data.



SHARP R-1855A Over-the-Range Microwave Oven Service Manual

This service manual provides detailed operational procedures, specifications, troubleshooting guides, component replacement instructions, and safety precautions for the SHARP R-1855A Overthe-Range Microwave Oven.



Sharp Built-In Appliance Design Guide: Microwaves, Ovens & Kitchen Layouts

Explore Sharp's comprehensive design guide for built-in kitchen appliances, featuring Microwave Drawers, SuperSteam+TM Ovens, Over-the-Counter microwaves, and installation dimensions for creating your dream kitchen.



Sharp SMC1132CS Microwave Oven Operation Manual

This comprehensive operation manual for the Sharp SMC1132CS microwave oven provides detailed instructions on setup, operation, safety, maintenance, and cooking. Learn to use all features, troubleshoot common issues, and explore cooking guides for optimal results.



Sharp SMC0985KS Microwave Oven Operation Manual

Comprehensive operation manual for the Sharp SMC0985KS Microwave Oven, covering installation, features, controls, safety instructions, care, and cooking guides.



Sharp R-212 Microwave Oven: Operating Manual and Cookbook

Comprehensive operating instructions, safety guidelines, cooking tips, and recipes for the Sharp R-212 microwave oven.