

Childcraft F09402.97

Child Craft Universal Select 4-Drawer Chest Instruction Manual

Model: F09402.97 | Brand: Childcraft

IMPORTANT SAFETY INFORMATION

Please read all instructions carefully before assembly and use of this product. Keep this manual for future reference. Failure to follow these instructions can result in serious injury or death.

- Always ensure all fasteners are securely tightened. Periodically check and re-tighten as necessary.
- This chest is designed for indoor use only.
- To prevent tipping, always install the provided anti-tip kit to secure the chest to a wall.
- Do not allow children to climb on drawers or the chest.
- Keep small parts away from children during assembly.

PRODUCT OVERVIEW

The Child Craft Universal Select 4-Drawer Chest is a versatile storage solution designed for nurseries and bedrooms. It features four spacious English dovetail drawers with quality glides for smooth operation. Constructed from solid pine wood and engineered wood, it boasts a safe, non-toxic finish.



This image displays the assembled Child Craft Universal Select 4-Drawer Chest, featuring four drawers and a slate finish. The chest is designed for nursery or bedroom use.

ASSEMBLY INSTRUCTIONS

Easy assembly is required for this 4-drawer chest. Please ensure you have all parts and hardware before beginning. A Phillips head screwdriver and a hammer are typically needed (not included).

1. Carefully unpack all components and lay them out on a soft, clean surface to prevent scratches.
2. Identify all hardware pieces against the provided parts list.
3. Follow the step-by-step diagrams in the included assembly guide to construct the chest frame.
4. Assemble the four drawers, ensuring the English dovetail joints are properly aligned and secured.
5. Insert the assembled drawers into the chest frame, verifying smooth operation of the glides.
6. Attach the anti-tip kit to the back of the chest and securely fasten it to a wall stud using appropriate hardware.



This image shows the front of the Child Craft Universal Select 4-Drawer Chest, highlighting its four drawers and overall design. Assembly is required for this unit.

OPERATING INSTRUCTIONS

The Child Craft Universal Select 4-Drawer Chest is designed for straightforward use. Each of the four drawers operates independently on quality glides, ensuring smooth opening and closing.

- To open a drawer, gently pull the knob.
- To close a drawer, push it firmly until it is fully seated within the chest frame.
- Avoid overloading drawers to maintain smooth operation and prevent damage to the glides.
- Distribute weight evenly within drawers to prevent imbalance.



This image shows the Child Craft Universal Select 4-Drawer Chest with one of its drawers partially open, demonstrating the smooth operation of the drawer glides and the interior storage capacity.

MAINTENANCE

Proper care will ensure the longevity and appearance of your Child Craft Universal Select 4-Drawer Chest.

- **Cleaning:** Wipe the surface with a dry, soft cloth. Avoid using abrasive cleaners, harsh chemicals, or polishes that may damage the non-toxic finish.
- **Hardware:** Periodically check all screws, bolts, and fasteners to ensure they are tight. Re-tighten as needed to maintain structural integrity.
- **Environment:** Keep the chest away from direct sunlight and extreme temperature changes to prevent wood warping or fading.

TROUBLESHOOTING

If you encounter any issues with your 4-Drawer Chest, refer to the following common solutions:

- **Drawers not opening/closing smoothly:** Check for any obstructions in the drawer glides. Ensure the glides are properly aligned and free of debris. Verify that the drawer is not overloaded.
- **Chest feels wobbly:** Confirm that all assembly fasteners are securely tightened. Ensure the chest is placed on a level surface. Re-check the installation of the anti-tip kit to the wall.
- **Minor scratches or blemishes:** For minor surface imperfections, consult with the manufacturer or a furniture care specialist for appropriate repair methods.

SPECIFICATIONS

Feature	Detail
Brand	Childcraft
Model Number	F09402.97
Product Dimensions	17.8"D x 39"W x 42"H
Color	Slate
Material	Solid Pine Wood and Engineered Wood
Finish	Non-toxic Finish
Item Weight	112 Pounds
Number of Drawers	4
Product Care Instructions	Wipe with Dry Cloth
UPC/GTIN	849801007340



This diagram illustrates the key dimensions of the Child Craft Universal Select 4-Drawer Chest, including its width, height, and depth, providing essential information for placement and space planning.

OFFICIAL PRODUCT VIDEOS

Child Craft Brand Overview

Your browser does not support the video tag.

This video provides an overview of the Child Craft brand, showcasing their commitment to quality and design in nursery furniture. It highlights various products and their features.

WARRANTY AND SUPPORT

Childcraft products are manufactured with quality and durability in mind. For specific warranty details, please refer to the documentation included with your purchase or visit the manufacturer's official website.

Manufacturer: Foundations Worldwide, Inc.

For customer support, product registration, or to inquire about replacement parts, please contact Childcraft customer service through their official channels. Contact information can typically be found on the manufacturer's website or on the product packaging.

© 2026 Childcraft. All rights reserved. This manual is for informational purposes only.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question