



Manuals.plus /

› **Axess** /

› Axess PB2710 Portable Stereo CD/CDR/CDRW Player Instruction Manual

Axess PB2710

Axess PB2710 Portable Stereo CD/CDR/CDRW Player

Instruction Manual

INTRODUCTION

Thank you for purchasing the Axess PB2710 Portable Stereo CD/CDR/CDRW Player. This device offers versatile audio playback with its top-loading CD player, AM/FM stereo radio, and a convenient headphone jack. Designed for portability, it can be powered by AC or batteries, allowing you to enjoy your music anywhere. Please read this manual carefully to ensure proper use and to maximize your listening experience.

IMPORTANT SAFETY INFORMATION

- Do not expose this appliance to rain or moisture.
- Do not block any ventilation openings.
- Ensure proper ventilation around the unit.
- Protect the power cord from being walked on or pinched.
- Unplug the unit during lightning storms or when unused for long periods.
- Refer all servicing to qualified service personnel.

PACKAGE CONTENTS

Please check that the following items are included in your package:

- Axess PB2710 Portable Stereo CD/CDR/CDRW Player (Boombox)
- AC Power Cord
- Instruction Manual (this document)

PRODUCT OVERVIEW

Familiarize yourself with the various parts and controls of your Axess PB2710 player.



Image 1: Side view of the Axess PB2710 Portable Stereo CD/CDR/CDRW Player. Visible components include the silver speaker grille on the left, the red tuning dial with frequency markings (88, 90) above it, and a red slide switch for power/mode selection (OFF, FM, AM, CD) on the right. An extendable FM antenna is also visible at the top left.

Controls and Functions:

- **FM Antenna:** Extendable antenna for improved FM radio reception.
- **Speaker:** Integrated stereo speaker for audio output.
- **Tuning Dial:** Used to precisely tune into AM or FM radio stations.
- **Mode Switch (OFF/FM/AM/CD):** Selects the operating mode (Off, FM Radio, AM Radio, CD Player).
- **CD Compartment:** Top-loading compartment for inserting CDs.
- **LED Display:** Two-digit display for CD track numbers.
- **Headphone Jack:** For private listening with headphones (not included).
- **AC Power Input:** Connects the AC power cord for wall power.
- **Battery Compartment:** Holds 6 x 9V batteries for portable use.

SETUP

Powering the Unit

Your Axess PB2710 can be powered by either AC (wall outlet) or DC (batteries).

AC Power Operation:

1. Ensure the unit's Mode Switch is in the **OFF** position.
2. Insert the supplied AC power cord into the AC power input jack on the unit.
3. Plug the other end of the AC power cord into a standard wall outlet (120V AC, 60Hz).
4. The unit is now ready for use with AC power.

Battery Operation:

For portable use, the unit requires 6 x 9-volt batteries (not included).

1. Ensure the unit's Mode Switch is in the **OFF** position and disconnect the AC power cord.
2. Open the battery compartment cover located on the bottom of the unit.
3. Insert 6 x 9-volt batteries, observing the correct polarity (+/-) as indicated inside the compartment.
4. Close the battery compartment cover securely.
5. The unit is now ready for use with battery power. Remove batteries if the unit will not be used for an extended period.

OPERATING INSTRUCTIONS

CD Playback

1. Slide the Mode Switch to the **CD** position.
2. Open the top-loading CD compartment cover.
3. Place a CD (CD, CD-R, or CD-RW) onto the spindle with the label side facing up.
4. Close the CD compartment cover.
5. The CD player will begin reading the disc, and the LED display will show the track number. Playback should start automatically.
6. Use the **PLAY/PAUSE**, **STOP**, **SKIP/SEARCH** buttons (if present, common CD player controls) to control playback.

Radio Operation (AM/FM)

1. Slide the Mode Switch to either the **FM** or **AM** position.
2. For FM reception, extend the telescopic FM antenna fully. For AM reception, the unit has a built-in antenna, so no external adjustment is needed.
3. Rotate the **Tuning Dial** to search for your desired radio station.
4. Adjust the volume to your preferred listening level.

Using the Headphone Jack

- To listen privately, plug a standard 3.5mm stereo headphone jack into the headphone port on the unit.
- When headphones are connected, audio will be routed through the headphones, and the built-in speakers will be muted.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the exterior of the unit. Do not use abrasive cleaners or solvents.
- **CD Care:** Handle CDs by their edges. Keep them clean and free of scratches. Use a soft, lint-free

cloth to wipe CDs from the center outwards.

- **Storage:** When not in use for extended periods, store the unit in a cool, dry place. Remove batteries if storing for a long time to prevent leakage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Unit does not power on.	No AC power; Dead batteries; Mode switch in OFF position.	Check AC cord connection and wall outlet; Replace batteries; Slide mode switch to FM, AM, or CD.
CD does not play.	CD inserted incorrectly; Disc is dirty or scratched; Mode switch not on CD.	Re-insert CD with label side up; Clean or replace CD; Slide mode switch to CD.
Poor radio reception.	FM antenna not extended; Weak signal; Interference.	Extend FM antenna fully and adjust its position; Try moving the unit to a different location; Tune carefully using the tuning dial.
No sound from speakers.	Volume too low; Headphones connected; Mode switch incorrect.	Increase volume; Disconnect headphones; Ensure mode switch is on desired source (CD, FM, AM).

SPECIFICATIONS

- **Model:** PB2710
- **Supported Media:** CD, CD-R, CD-RW
- **Radio Bands:** AM/FM Stereo (Analogue Tuning)
- **Display:** Two-digit LED for CD function
- **Audio Output:** Stereo speakers, 3.5mm Headphone Jack
- **Power Source:** AC 120V ~ 60Hz or 6 x 9V batteries (not included)
- **Dimensions (L x W x H):** 8.81 x 5.3 x 8.03 inches
- **Weight:** Approximately 3 Pounds
- **GTIN/UPC:** 818443016072

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the warranty card included with your product or visit the official Axess website. Keep your purchase receipt as proof of purchase.

Axess Website: www.axessproducts.com (Note: This is a placeholder URL, please verify the actual support website.)