

[Manuals.plus](#) /

› [HARBOR BREEZE](#) /

› Harbor Breeze COASTAL CREEK 52-inch Brushed Nickel Ceiling Fan Instruction Manual

HARBOR BREEZE 1d2be0af-ed50-4c1e-a476-ce9af163c751

Harbor Breeze COASTAL CREEK 52-inch Brushed Nickel Ceiling Fan Instruction Manual

Model: COASTAL CREEK (1d2be0af-ed50-4c1e-a476-ce9af163c751)

Brand: HARBOR BREEZE

1. INTRODUCTION

This manual provides comprehensive instructions for the safe installation, operation, and maintenance of your Harbor Breeze COASTAL CREEK 52-inch Brushed Nickel Ceiling Fan. Please read all instructions carefully before beginning installation and retain this manual for future reference.

Key Features:

- 5 reversible toffee/cocoa-finish blades, allowing for style changes without blade replacement.
- Integrated light kit with a frosted glass bowl, providing ambient illumination. The light kit can be installed or omitted based on preference.
- 3-speed reversible AC motor designed for efficient airflow.
- 52-inch fan diameter, suitable for large rooms.
- Includes 2 LED bulbs for the light kit.
- Brushed Nickel finish for a versatile aesthetic.



Figure 1: Overview of the Harbor Breeze COASTAL CREEK 52-inch Ceiling Fan, showcasing its brushed nickel finish, five blades, and integrated light kit with pull chains.

2. SAFETY INFORMATION

Always follow basic safety precautions when installing and operating electrical appliances to reduce the risk of fire, electric shock, and personal injury.

- Ensure power is disconnected at the circuit breaker before installation or servicing.
- All wiring must be in accordance with national and local electrical codes.
- Mount the fan to a ceiling joist or an outlet box marked "Acceptable for Fan Support of 35 lbs (15.9 kg) or less."
- Keep hands, clothing, and other objects clear of the fan blades when the fan is operating.
- Do not operate the fan with damaged parts.

3. PACKAGE CONTENTS

Verify that all components listed below are present and undamaged before proceeding with installation.

- Motor Housing (Brushed Nickel)
- Fan Blades (5, reversible toffee/cocoa-finish)
- Blade Brackets (5)
- Light Kit Assembly with Frosted Glass Bowl
- Downrod (for standard mounting)
- Mounting Bracket
- Canopy
- Pull Chains (for fan speed and light control)
- Hardware Pack (screws, washers, wire nuts, etc.)
- LED Bulbs (2)





Figure 2: Reversible fan blades, illustrating the two distinct finishes (dark brown and light brown) available for customization.

4. SETUP AND INSTALLATION

Professional installation is recommended. Ensure all power is off at the circuit breaker before beginning. Refer to the detailed wiring diagrams included in the physical manual for specific connections.

4.1 Mounting Options

This fan supports both downrod and close-mount installations. It can also be adapted for use on a slanted ceiling.

- **Downrod Mount:** For standard ceilings, the included downrod provides optimal air circulation.
- **Close Mount:** For lower ceilings, the fan can be installed directly to the mounting bracket without the downrod.
- **Slanted Ceiling Mount:** The mounting bracket is designed to accommodate slanted ceilings, ensuring the fan hangs level.

4.2 Assembly Steps (Overview)

1. Secure the mounting bracket to the ceiling electrical box.
2. Assemble the downrod (if used) to the motor housing.
3. Hang the fan motor assembly onto the mounting bracket.
4. Complete electrical wiring connections as per local codes.
5. Attach the fan blades to the blade brackets, then secure them to the motor housing. Choose your desired blade finish (toffee or cocoa).
6. Install the light kit assembly, including the frosted glass bowl and LED bulbs.



5. OPERATING INSTRUCTIONS

Your Harbor Breeze COASTAL CREEK ceiling fan is designed for ease of use with traditional pull chain controls.

5.1 Fan Speed Control

The fan features a 3-speed reversible AC motor. One pull chain controls the fan speed:

- Pull 1: High Speed
- Pull 2: Medium Speed
- Pull 3: Low Speed
- Pull 4: Off

5.2 Light Operation

The light kit is controlled by a separate pull chain:

- Pull 1: Lights On
- Pull 2: Lights Off

5.3 Reversible Function

A slide switch on the motor housing allows you to reverse the direction of the fan blades. This feature is useful for seasonal comfort:

- **Summer Mode (Counter-clockwise):** Pushes air down, creating a cooling breeze.
- **Winter Mode (Clockwise):** Draws air up, circulating warm air trapped near the ceiling.

To change direction, ensure the fan is off and the blades have stopped completely before moving the slide switch.



Figure 4: The ceiling fan with its light illuminated, highlighting the frosted glass bowl that diffuses the light.

6. MAINTENANCE

Regular maintenance ensures optimal performance and longevity of your ceiling fan.

6.1 Cleaning

- Always turn off power at the circuit breaker before cleaning.
- Use a soft, damp cloth to clean the fan blades and motor housing. Avoid abrasive cleaners that may damage finishes.
- Do not use water directly on the fan to prevent electrical shock.

6.2 Light Bulb Replacement

- Ensure the light is off and bulbs have cooled before attempting replacement.
- Carefully remove the frosted glass bowl by unscrewing the finial or releasing the clips (refer to your specific installation guide).
- Replace old bulbs with new LED bulbs of the same type and wattage (2 LED bulbs are included).
- Reattach the glass bowl securely.

7. TROUBLESHOOTING

If you experience issues with your fan, consult the following common troubleshooting steps. For complex problems, contact a qualified electrician.

Problem	Possible Cause	Solution
Fan does not start	No power to the fan; loose wire connections; blown fuse/tripped breaker.	Check circuit breaker; ensure all connections are secure; replace fuse/reset breaker.
Fan wobbles	Loose blade screws; unbalanced blades; improper mounting.	Tighten all blade screws; use balancing kit (not included) if necessary; ensure mounting bracket is secure.
Light does not work	Loose wire connection in light kit; faulty bulb; light switch off.	Check light kit wiring; replace bulbs; ensure pull chain is in "on" position.
Noisy operation	Loose screws; motor hum; fan not level.	Check and tighten all screws; ensure proper installation; some motor hum is normal.

8. SPECIFICATIONS

Feature	Detail
Brand	HARBOR BREEZE
Model Name	COASTAL CREEK
Item Model Number	1d2be0af-ed50-4c1e-a476-ce9af163c751
Fan Diameter	52 inches
Color	Brushed Nickel
Number of Blades	5 (Reversible Toffee/Cocoa-finish)
Motor Type	AC Brushed, 3-speed reversible
Light Kit	Integrated, with Frosted Glass Bowl
Included Bulbs	2 LED bulbs
Control Method	Pull Chain
Power Source	Corded Electric
Voltage	120 Volts
Wattage	54 watts
Air Flow Capacity	3116 Cubic Feet Per Minute
Efficiency	57.52 cubic feet per minute per watt
Indoor/Outdoor Usage	Indoor
Item Weight	20.2 pounds
Package Dimensions	23.58 x 13.39 x 11.81 inches

9. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation provided with your purchase or contact Harbor Breeze customer service. Contact details are typically found on the product packaging or the manufacturer's official website. Always provide your model number (COASTAL CREEK, 1d2be0af-ed50-4c1e-a476-ce9af163c751) when seeking support.

© 2023 HARBOR BREEZE. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question