

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Design House](#) /
- › [Brookings Shaker Unassembled Wall Kitchen Cabinet W3024 User Manual](#)

Design House 561597

Brookings Shaker Unassembled Wall Kitchen Cabinet W3024 User Manual

Model: 561597 | Brand: Design House

INTRODUCTION

This manual provides detailed instructions for the assembly, installation, operation, and maintenance of your Design House Brookings Shaker Unassembled Wall Kitchen Cabinet W3024. Please read all instructions carefully before beginning assembly and retain this manual for future reference.



Image: The Brookings Shaker Wall Kitchen Cabinet W3024 in its closed state, showcasing its white finish and shaker-style doors.

IMPORTANT SAFETY INFORMATION

CAUTION: Use care when handling and assembling. Keep hands away from hinges during installation to avoid pinch hazards. Always follow assembly instructions carefully.

- Always wear appropriate safety gear, such as gloves and eye protection, during assembly.
- Ensure all hardware is securely fastened before use.
- Do not overload the cabinet. The maximum weight limit is 38 pounds.
- Keep small parts away from children during assembly to prevent choking hazards.

PACKAGE CONTENTS

Verify that all components are present before beginning assembly. If any parts are missing or damaged, please contact Design House customer support.

- Cabinet panels (sides, top, bottom, back)
- 2 Shaker-style doors
- 1 Adjustable shelf
- 6-way adjustable soft-close hinges

- Anti-slip shelf pins
- Assembly hardware (screws, cam locks, dowels, etc.)
- Instruction manual



Image: An illustration detailing various components and features of a typical Shaker-style cabinet, including dovetail drawers, soft-close hinges, and anti-slip shelf pins. While this image shows a base cabinet, the principles of construction and features like hinges and shelf pins are similar for wall cabinets.

SETUP AND ASSEMBLY

This cabinet is designed for ready-to-assemble installation. Follow these general steps for assembly. Specific diagrams and hardware details will be included in the printed instructions provided with your product.

Tools Required (Not Included):

- Phillips head screwdriver
- Hammer or mallet (rubber recommended)
- Drill (optional, for pilot holes)

- Level
- Stud finder (for wall mounting)

Assembly Steps:

1. **Unpack and Inspect:** Carefully unpack all components and inspect for any damage. Lay out all parts on a clean, soft surface to prevent scratching.
2. **Assemble Cabinet Box:** Attach the side panels to the top and bottom panels using the provided cam locks, dowels, and screws. Ensure all connections are tight and square.
3. **Install Back Panel:** Secure the back panel to the assembled cabinet box. This often involves small nails or screws.
4. **Attach Hinges to Doors:** Mount the 6-way adjustable soft-close hinges to the cabinet doors according to the pre-drilled holes.
5. **Attach Doors to Cabinet:** Mount the doors to the cabinet frame by attaching the hinges to the pre-drilled holes on the cabinet sides.
6. **Install Shelf Pins and Shelf:** Insert the anti-slip shelf pins into the desired height holes inside the cabinet. Place the adjustable shelf onto the pins.
7. **Wall Mounting:** Locate wall studs using a stud finder. Mark the desired height and position for the cabinet. Securely attach the cabinet to the wall studs using appropriate mounting hardware (not always included with cabinet, check your specific hardware). Ensure the cabinet is level.



Image: A technical diagram illustrating the dimensions and internal layout of the wall cabinet, including measurements for width, depth, and height, and shelf placement.

OPERATING INSTRUCTIONS

Adjusting Shelves:

The cabinet features an adjustable shelf for flexible storage. To adjust the shelf height, carefully remove any items from the shelf. Lift the shelf slightly and remove the anti-slip shelf pins from their current holes. Reinsert the pins into the desired new height holes, ensuring they are level and fully seated. Place the shelf back onto the pins.

Soft-Close Hinges:

Your cabinet is equipped with 6-way adjustable soft-close hinges. These hinges allow for quiet door closure and precise door alignment. If doors appear misaligned, refer to the hinge adjustment instructions typically found with the hinge manufacturer's documentation or online resources. Small adjustments with a screwdriver can correct most alignment issues.

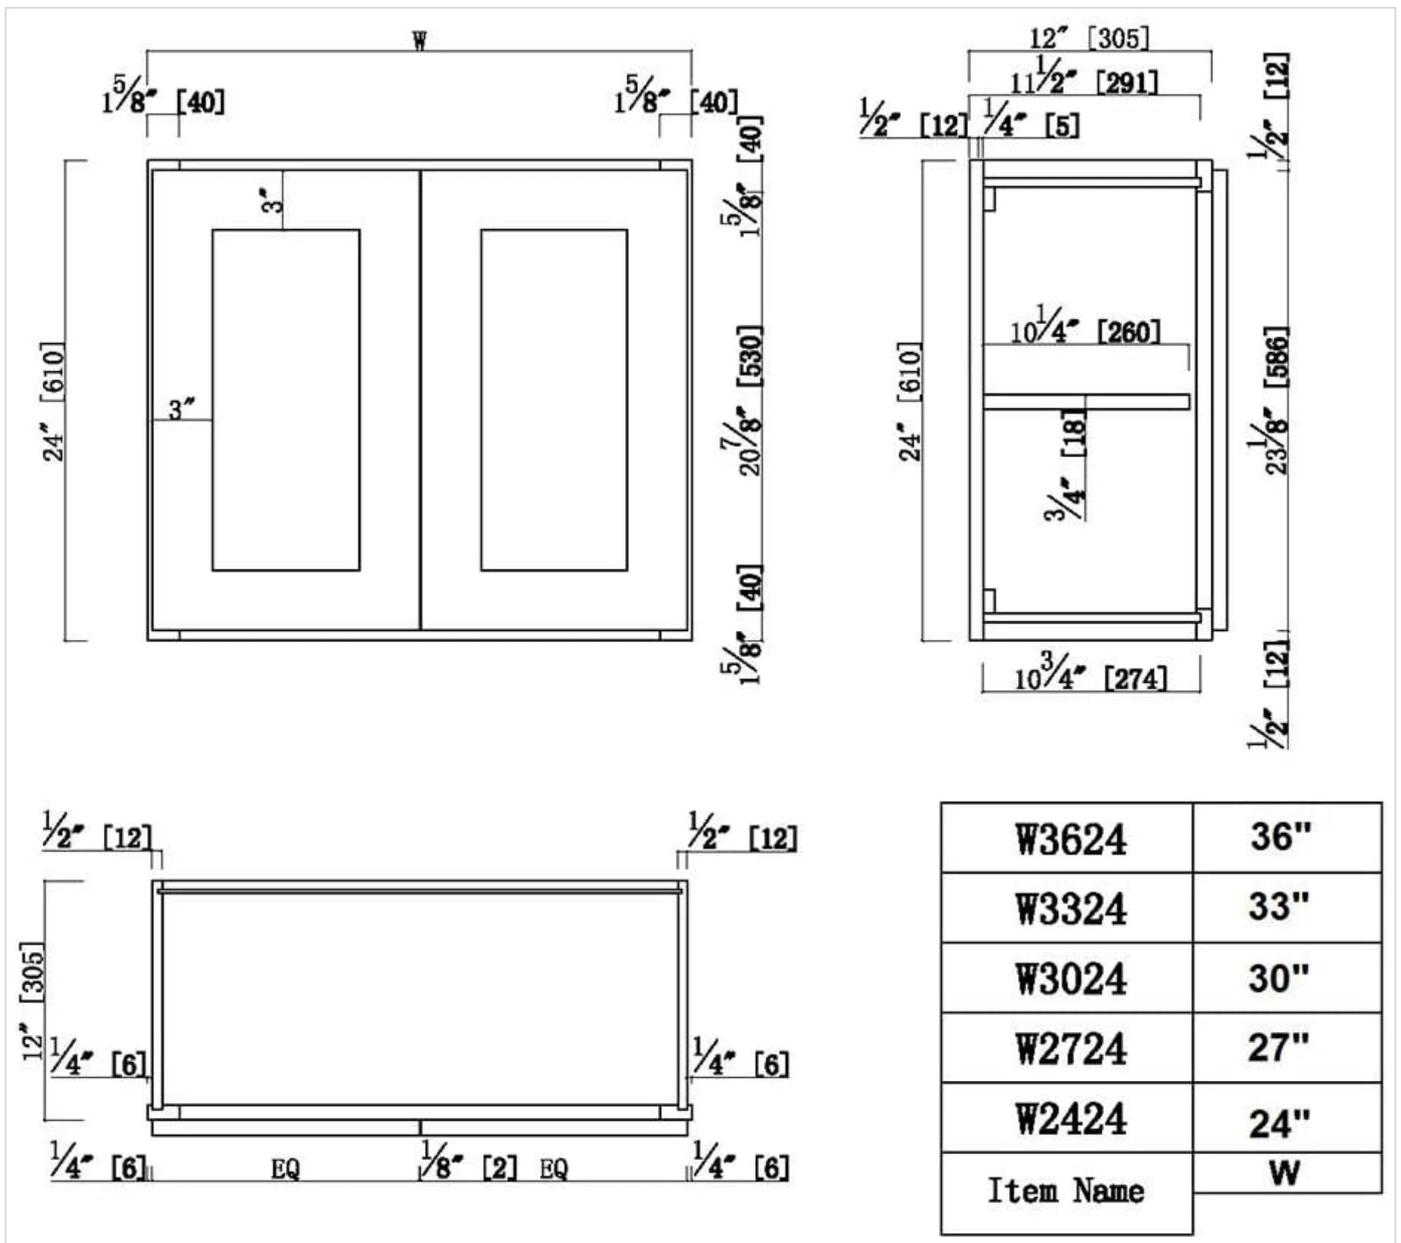


Image: The Brookings Shaker Wall Kitchen Cabinet W3024 with its doors open, revealing the adjustable shelf and finished interior.

MAINTENANCE

To maintain the appearance and longevity of your cabinet, follow these care instructions:

- **Cleaning:** Wipe with a damp cloth using mild soap and water. Avoid abrasive cleaners or harsh chemicals, as these can damage the finish.
- **Spills:** Clean up spills immediately to prevent staining or damage to the wood.
- **Hardware:** Periodically check all screws and fasteners to ensure they remain tight. Tighten as necessary.
- **Environment:** Avoid exposing the cabinet to extreme temperature changes or high humidity, which can cause wood to warp or crack.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Doors are misaligned or do not close properly.	Hinges require adjustment.	Adjust the 6-way adjustable soft-close hinges using a Phillips head screwdriver. Refer to hinge manufacturer's instructions for detailed adjustment steps.
Cabinet feels wobbly after assembly.	Hardware not fully tightened; cabinet not properly secured to wall.	Ensure all assembly hardware is tightened. If wall-mounted, verify the cabinet is securely fastened to wall studs and is level.
Missing parts or damaged components upon arrival.	Shipping damage or packaging error.	Contact Design House customer support immediately with your model number and details of the missing/damaged parts.
Shelf slides or is not stable.	Shelf pins not fully inserted or incorrect size.	Ensure anti-slip shelf pins are fully seated in the holes and are the correct size for the shelf.

SPECIFICATIONS

Feature	Detail
Brand	Design House
Model Name	Brookings Shaker Wall Kitchen Cabinet W3024
Model Number	561597
Color	White
Product Dimensions (D x W x H)	12"D x 30"W x 24"H
Mounting Type	Wall Mount
Room Type	Kitchen, Laundry, Garage
Door Style	Shaker
Weight Limit	38 Pounds
Included Components	Cabinet and assembly parts
Number of Shelves	1 (Adjustable)
Assembly Required	Yes
Frame Material	Solid Wood Face and Door Frame, 1/2-inch Plywood Sides
Care Instructions	Wipe with Damp Cloth
Country/Region Of Origin	Indonesia

WARRANTY AND SUPPORT

Warranty Information:

This Design House product comes with a **Limited 1-Year Warranty**. This warranty covers defects in materials and workmanship under normal use. Please retain your proof of purchase for warranty claims.

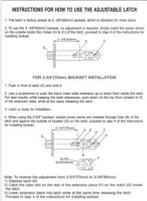
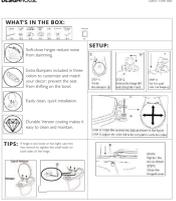
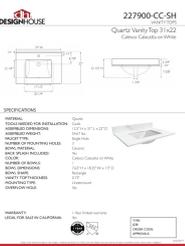
Customer Support:

For assistance with assembly, missing parts, or warranty claims, please contact Design House customer support. Visit the official Design House website or refer to the contact information provided in your product packaging.

Online Resources: [Design House Amazon Store](#)

© 2025 Design House. All rights reserved.

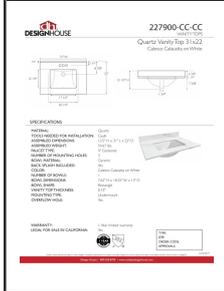
Related Documents - 561597

	<p>Design House 728717 Terrace Adjustable Latch Installation & Adjustment Guide</p> <p>Detailed installation and adjustment guide for the Design House 728717 Terrace 6-Way Universal Passage Hall and Closet Door Knob adjustable latch. Covers setting the backset to 2-3/8" (60mm) and 2-3/4" (70mm) with step-by-step instructions and diagram descriptions.</p>
	<p>Design House Dalton Toilet Seat Installation Instructions</p> <p>Step-by-step installation guide for the Design House Dalton Toilet Seat, including parts list, setup instructions, and helpful tips for a smooth installation.</p>
	<p>Design House 227900-CC-SH Quartz Vanity Top 31x22 Calesco Calacatta on White - Specifications</p> <p>Detailed specifications for the Design House 227900-CC-SH Quartz Vanity Top. Features include 31x22 dimensions, Calesco Calacatta on White pattern, single undermount ceramic bowl, and 1-year limited warranty.</p>
	<p>Design House 214585 Concord 60-Inch 2-Door 4-Drawer Vanity - White Technical Specifications</p> <p>Detailed specifications for the Design House 214585 Concord 60-inch assembled vanity cabinet. Features include dimensions, materials, construction details, warranty, and compliance information.</p>



[Design House 205849 Adjustable Closet Rod 72"-120" White - Specifications](#)

Detailed specifications and information for the Design House 205849 adjustable closet rod, featuring a 72-120 inch length and white finish. Includes material, dimensions, warranty, and contact details.



[Design House 227900-CC-CC Quartz Vanity Top 31x22 Calesco Calacatta on White](#)

Detailed specifications for the Design House 227900-CC-CC Quartz Vanity Top. This 31x22 inch vanity top features a Calesco Calacatta on White finish, a ceramic undermount bowl, and a 1-year limited warranty. Includes dimensions, material, and installation details.